


Door Courtesy Switch Circuit

CIRCUIT DESCRIPTION

The door courtesy switch goes ON when the door is opened and goes OFF when the door is closed.

WIRING DIAGRAM

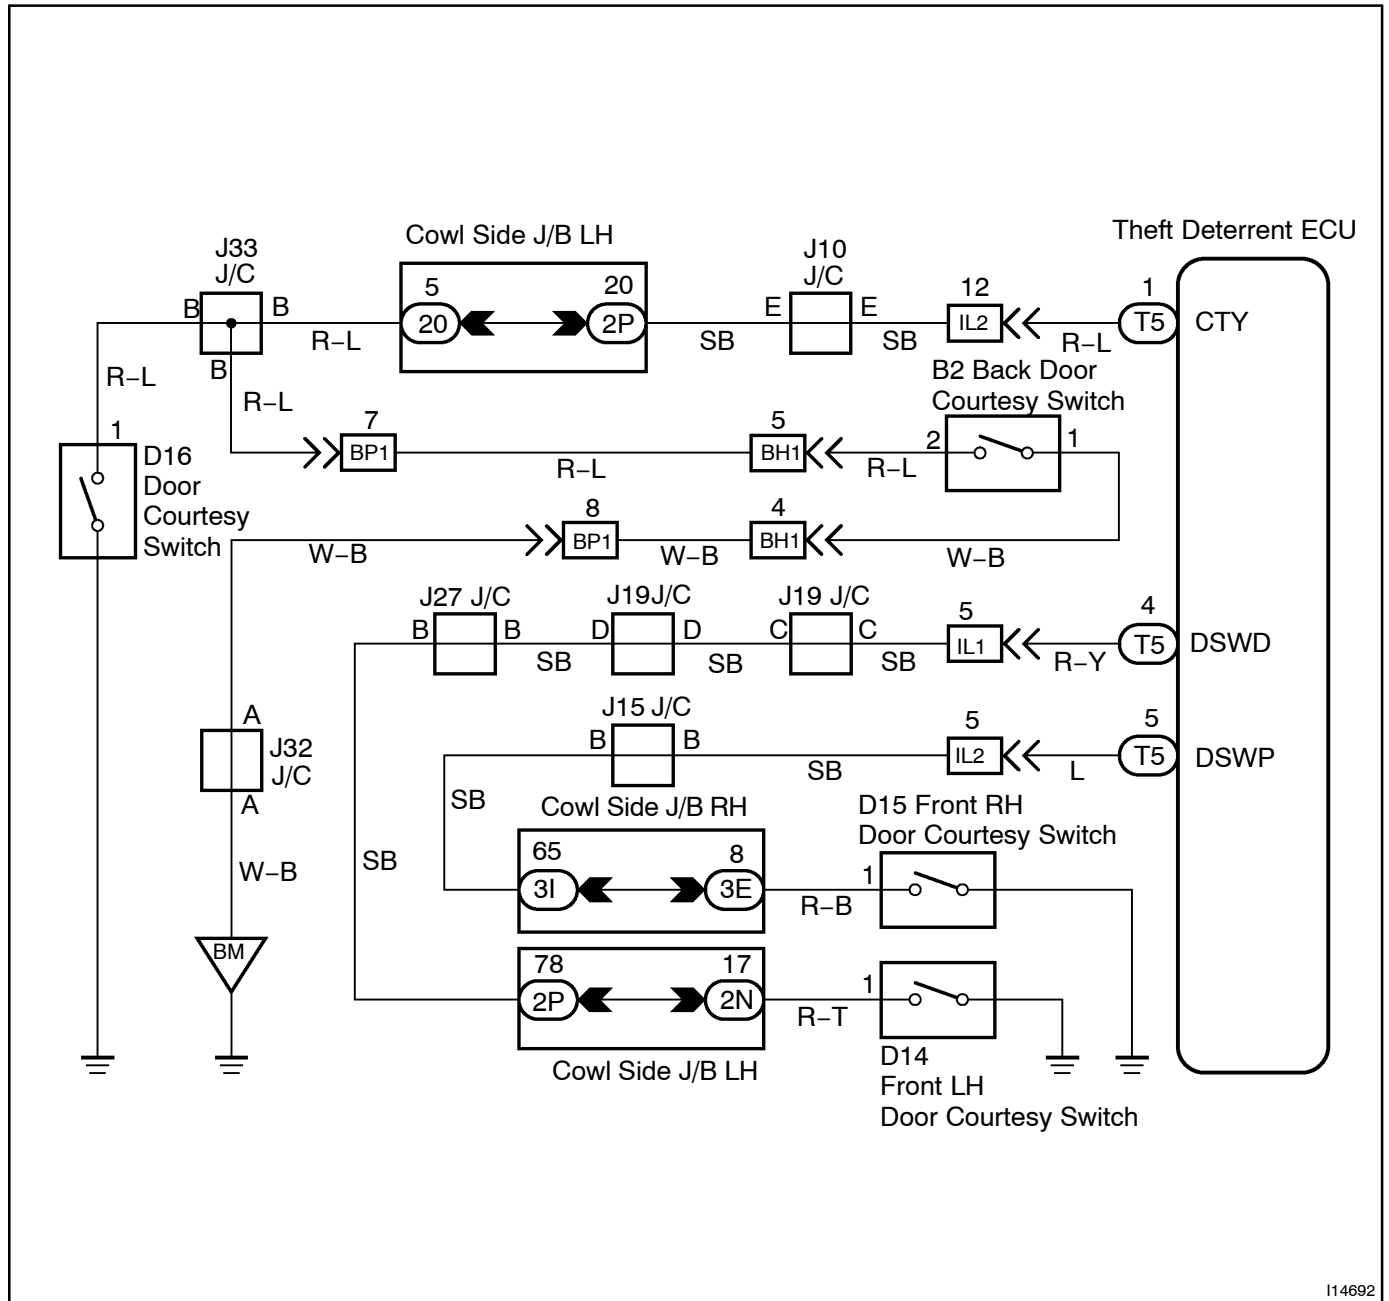

I14692

INSPECTION PROCEDURE

1	Check operation of open door warning light.
----------	--

CHECK:

Check that open door warning light comes ON when each door is opened, and goes OFF when all doors are closed.

NG**Check and repair open door warning light circuit.****OK**

2	Check for open in harness and connector between theft deterrent ECU and door courtesy switch (See page IN-34).
----------	---

NG**Repair or replace harness or connector.****OK****Check and replace theft deterrent ECU.*1**

*1: When there is a malfunction that the theft deterrent system cannot be set, proceed to the next numbered circuit inspection shown in problem symptoms table (See page [DI-643](#)).