

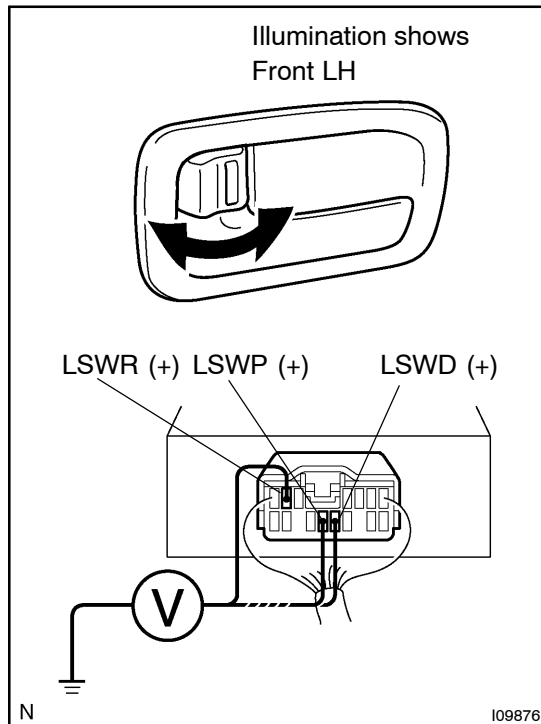
CIRCUIT DESCRIPTION

Furthermore, the door unlock detection switch circuit has terminal +B connected inside the theft deterrent ECU, when the door unlock detection switch is OFF, battery positive voltage is applied to the terminal of the door unlock detection switch circuit of the wireless door lock ECU.

[illegible]

INSPECTION PROCEDURE

- | | |
|----------|---|
| 1 | Check voltage between terminals LSWD, LSWP and LSWR of wireless door lock ECU connector and body ground. |
|----------|---|

**PREPARATION:**

Remove the wireless door lock ECU from instrument panel brace.

CHECK:

Measure voltage between terminals LSWD, LSWP and LSWR of wireless door lock ECU connector and body ground, when the respective door lock knobs are pushed to the lock side.

OK:

Voltage 10 – 14 V

OK

Proceed to next circuit inspection shown in problem symptom table (See page [DI-612](#)).

NG

Check and repair harness and connector between wireless door lock ECU and door unlock detection switch.