

INSPECTION

1. VEHICLE NOT INVOLVED IN COLLISION

Do a diagnostic system check. (See page [DI-486](#))

2. VEHICLE INVOLVED IN COLLISION AND AIRBAG IS NOT DEPLOYED

Do a diagnostic system check. (See page [DI-486](#))

3. VEHICLE INVOLVED IN COLLISION AND AIRBAG IS DEPLOYED

Replace the airbag sensor assembly. (See page [RS-37](#))