



REMOVAL

1. **REMOVE FRONT WHEEL**
Torque: 131 N·m (1,340 kgf·cm, 97 ft·lbf)
2. **REMOVE FRONT FENDER APRON**

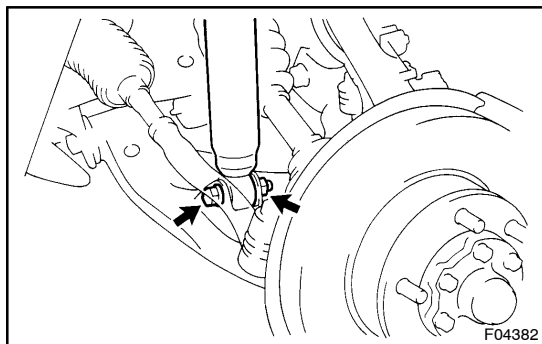

3. **REMOVE SHOCK ABSORBER**
 - (a) Remove the bolt, nut and disconnect the shock absorber from the lower suspension arm.
Torque: 135 N·m (1,400 kgf·cm, 100 ft·lbf)

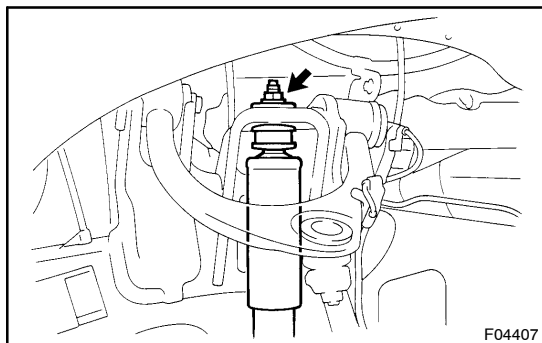

- (b) While holding the piston rod, remove the nut, cushion, retainer and shock absorber.
Torque: 68 N·m (700 kgf·cm, 50 ft·lbf)
 - (c) Remove the cushion and retainer from the shock absorber.