


FRONT WHEEL HUB BOLT REPLACEMENT

SA148-04

1. REMOVE FRONT AXLE HUB (See page SA-11)

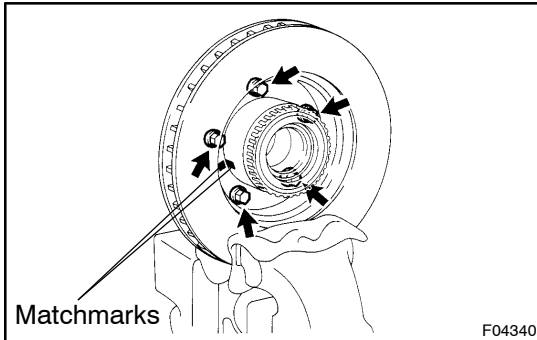


2. REMOVE HUB BOLT

- (a) Mount the axle hub with the disc in a soft jaw vice.


NOTICE:

Close vice until it holds disc, do not tighten further.

- (b) Place matchmarks on the axle hub and disc.
 (c) Remove the 5 bolts and separate the axle hub from the disc.

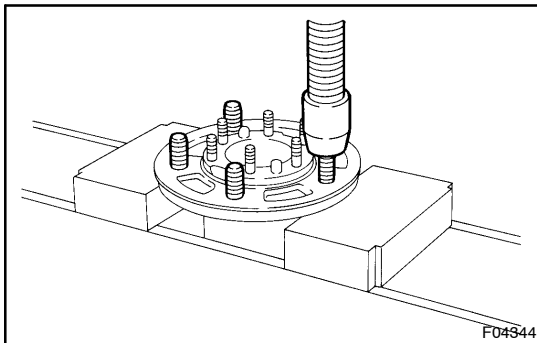


- (d) Using a press, remove the hub bolt.

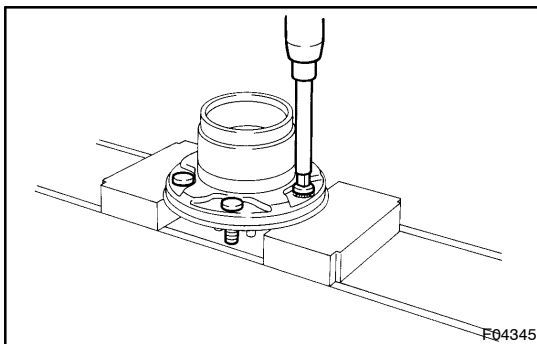

3. INSTALL HUB BOLT

- (a) Using an extension bar and press, install a new hub bolt.

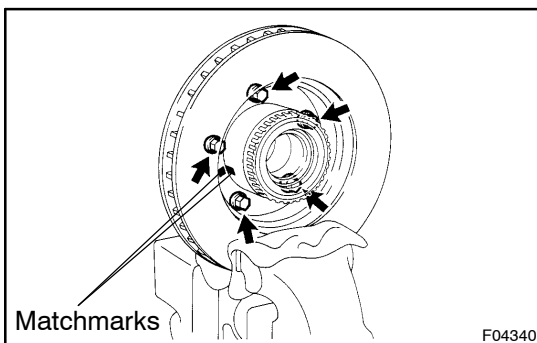

- (b) Align the matchmarks on the axle hub and disc.
 (c) Install the 5 bolts to the axle hub.

Torque: 74 N·m (750 kgf·cm, 55 ft·lbf)

4. INSTALL FRONT AXLE HUB (See page SA-15)