

## REMOVAL

### 1. REMOVE REAR WHEEL

**Torque: 131 N·m (1,340 kgf·cm, 97 ft·lbf)**

### 2. SUPPORT REAR AXLE HOUSING WITH JACK


### 3. REMOVE UPPER CONTROL ARM

(a) Disconnect the ABS speed sensor wire harness.

(b) RH side:

Remove the bolt and heat insulator.

**Torque: 18 N·m (185 kgf·cm, 13 ft·lbf)**

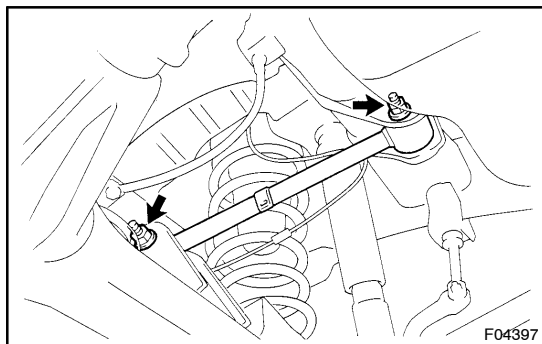


(c) Remove the 2 nuts, washers, bolts and upper control arm.

**Torque: 150 N·m (1,530 kgf·cm, 111 ft·lbf)**

HINT:

At the time of installation, after stabilizing the suspension, torque the nuts.

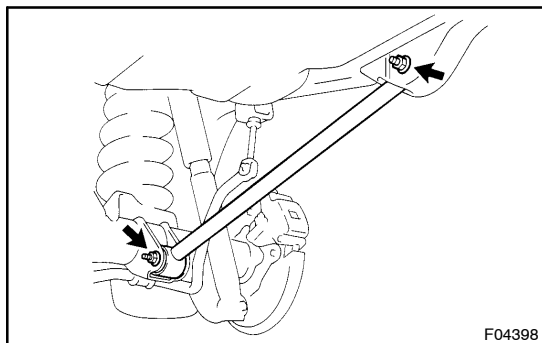

### 4. REMOVE LOWER CONTROL ARM

Remove the 2 nuts, washers, bolts and lower control arm.

**Torque: 150 N·m (1,530 kgf·cm, 111 ft·lbf)**

HINT:

At the time of installation, after stabilizing the suspension, torque the nuts.