



DISASSEMBLY


1. **REMOVE BREATHER HOSE**
2. **REMOVE VEHICLE SPEED SENSOR DRIVEN GEAR**
Remove the bolt and driven gear.

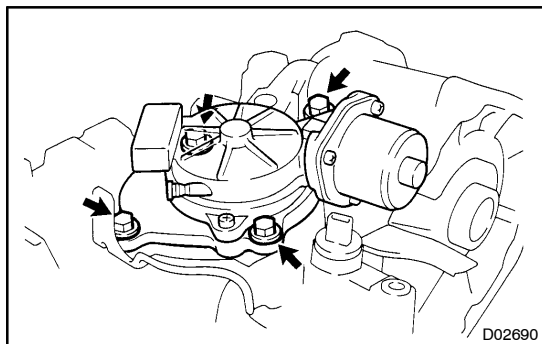


3. **REMOVE MOTOR ACTUATOR**
Remove the 4 bolts and motor actuator.

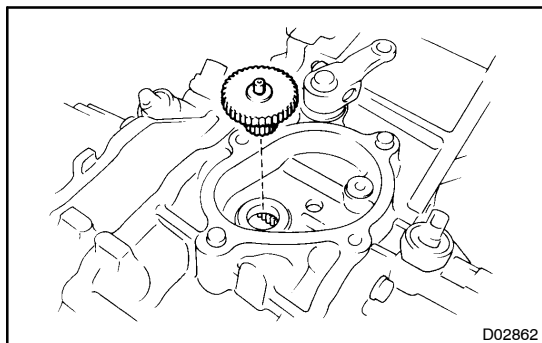


4. **REMOVE OUTPUT GEAR FROM FRONT CASE**

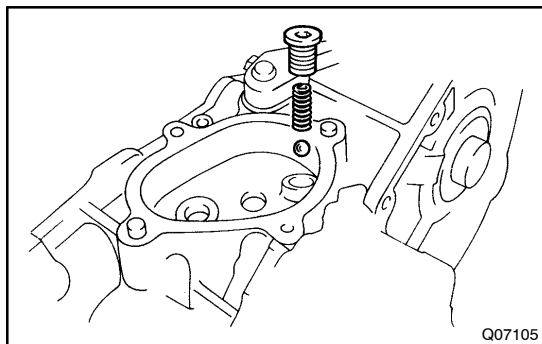


5. **REMOVE SCREW PLUG, SPRING AND BALL**
 - (a) Using a torx socket wrench (T40), remove the screw plug.
 - (b) Using a magnetic finger, remove the spring and ball.
6. **REMOVE TRANSFER INDICATOR SWITCH**
Remove the 3 transfer indicator switches and 3 gaskets.

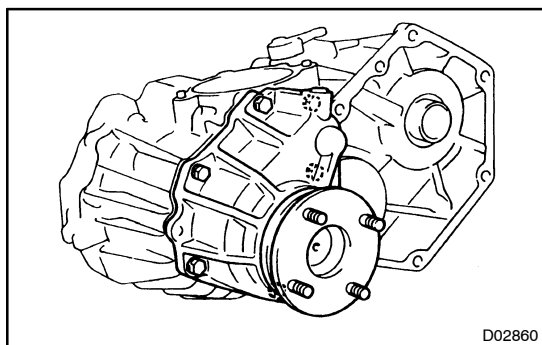


7. **REMOVE FRONT EXTENSION HOUSING**
Remove the 6 bolts and front extension housing.
HINT:
If necessary, tap the front extension housing lightly with a plastic hammer.

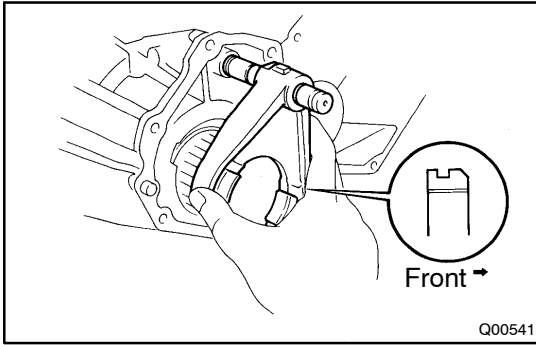

- 8. REMOVE CLUTCH SLEEVE WITH SHIFT FORK NO. 2 SHAFT AND SHIFT FORK NO. 2**

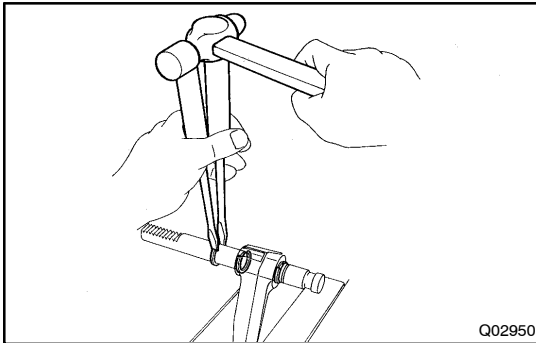

- 9. SEPARATE SHIFT FORK NO. 2 SHAFT AND SHIFT FORK NO. 2**
- (a) Using 2 screwdrivers and a hammer, tap out the 3 snap rings from the shift fork No. 2 shaft.
 - (b) Separate the shift fork No. 2 shaft and shift fork No. 2.

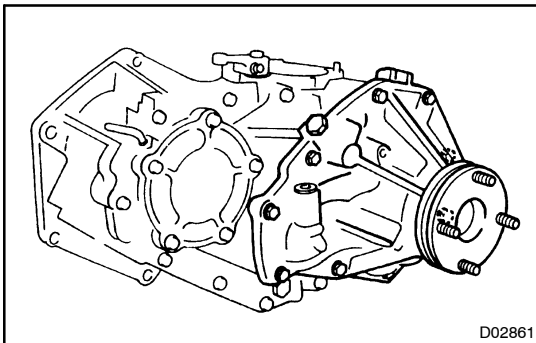


- 10. REMOVE REAR EXTENSION HOUSING**

Remove the 9 bolts and rear extension housing.

HINT:


If necessary, tap the rear extension housing lightly with a plastic hammer.

- 11. REMOVE ADJUSTING SHIMS**

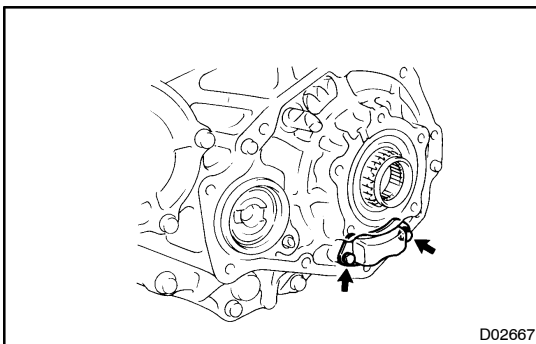


- 12. REMOVE OIL STRAINER FROM REAR CASE**

Remove the 2 bolts and oil strainer.

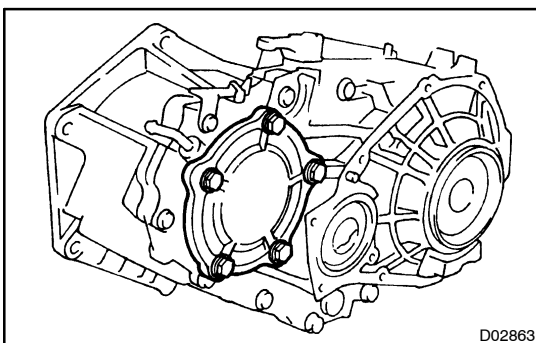


- 13. REMOVE CASE COVER**

- (a) Remove the 5 bolts.

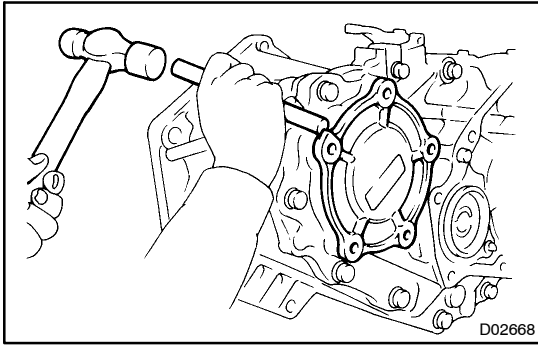


- (b) Using a brass bar and hammer, tap the case cover and remove it.

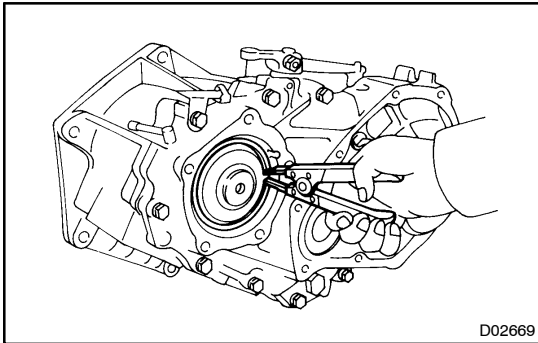


14. SEPARATE FRONT CASE AND REAR CASE


- (a) Using a snap ring expander, remove the snap ring from the rear case.

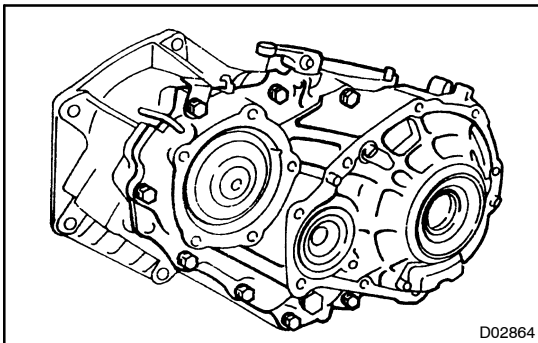

- (b) Remove the 8 bolts.
(c) Using a brass bar and hammer, tap the rear case and separate it.

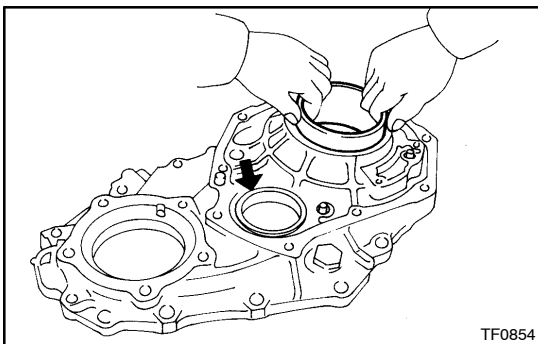


15. REMOVE 2 BEARING RACES FROM REAR CASE

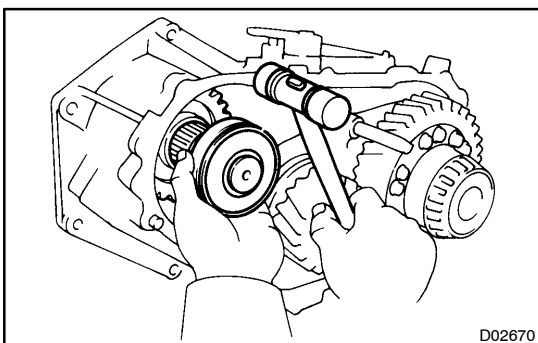


16. REMOVE INPUT SHAFT ASSEMBLY

- Using a plastic hammer, remove the input shaft assembly from the front case.

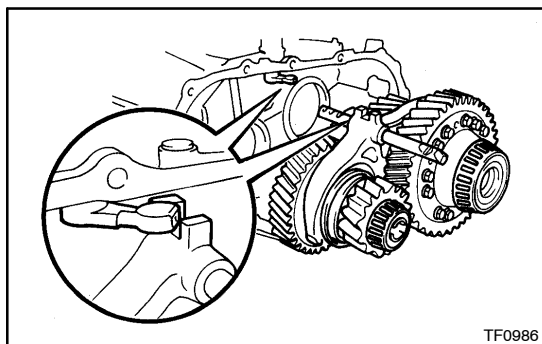

TF0986


- 17. REMOVE IDLER GEAR ASSEMBLY WITH CENTER DIFFERENTIAL ASSEMBLY, SHIFT FORK NO. 1 AND SHIFT FORK NO. 1 SHAFT FROM FRONT CASE**

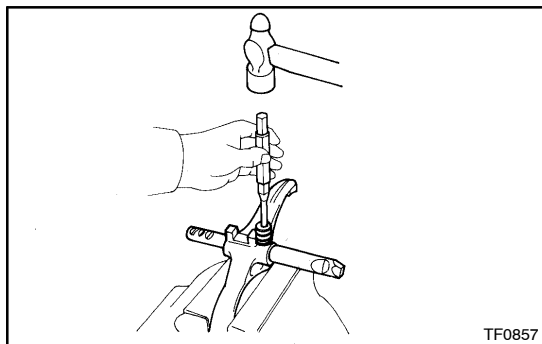

TF0857

- 18. SEPARATE SHIFT FORK NO. 1 AND SHIFT FORK NO. 1 SHAFT**

- (a) Using a pin punch and hammer, drive out the slotted spring pin.
- (b) Separate the shift fork No. 1 and shift fork No. 1 shaft.

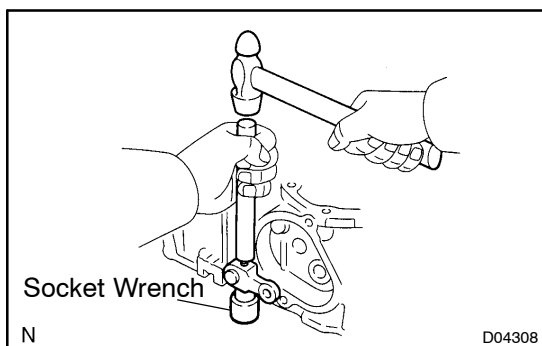


Socket Wrench

N

D04308

- 19. REMOVE SHIFT OUTER LEVER AND INNER LEVER**


- (a) Remove the nut and washer from the shift outer lever.
- (b) Using a brass bar, hammer and socket wrench, tap out the lever lock pin.
- (c) Remove the shift outer lever, washer and inner lever from the front case.

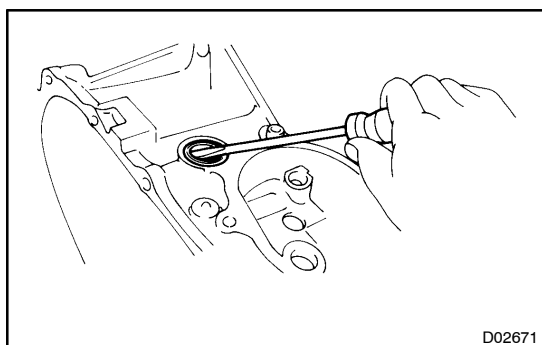

D02671

- 20. IF NECESSARY, REPLACE INNER SHIFT LEVER OIL SEAL**


- (a) Using a screwdriver, pry out the oil seal from the front case.

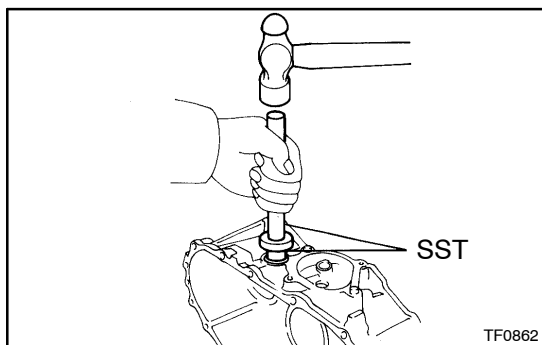


SST

TF0862


- (b) Apply MP grease to the lip of a new oil seal.
- (c) Using SST and a hammer, drive in a new oil seal.
SST 09950-60010 (09951-00270), 09950-70010 (09951-07150)

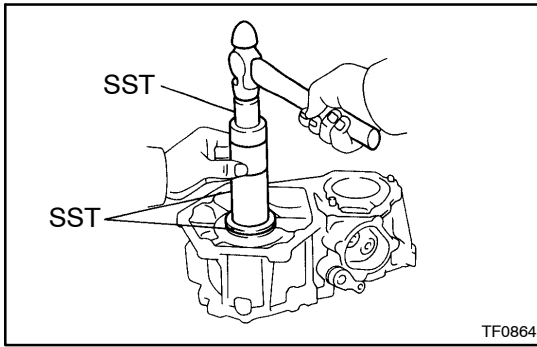**21. IF NECESSARY, REPLACE INPUT SHAFT OIL SEAL**

- (a) Using SST and a hammer, drive out the oil seal.
SST 09316-60011 (09316-00011)
- (b) Apply MP grease to the lip of a new oil seal.
- (c) Using SST and a hammer, drive in a new oil seal.
SST 09316-60011 (09316-00011, 09316-00031)

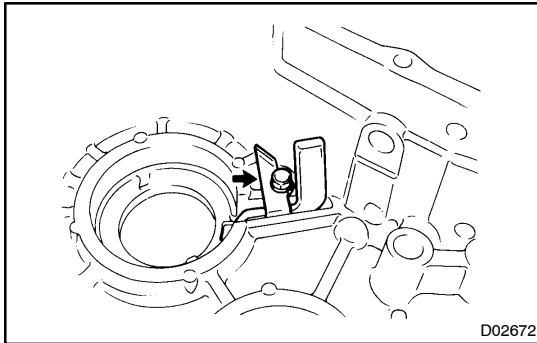**22. REMOVE OIL RECEIVER FROM FRONT CASE**

Remove the bolt and oil receiver.

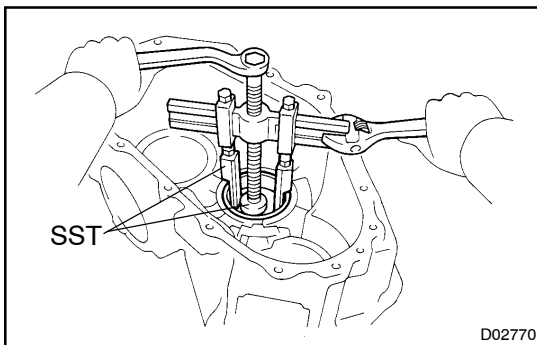**23. REMOVE 2 BEARING RACES FROM FRONT CASE**

- (a) Using SST, remove the bearing race (for the idler gear).
SST 09950-40011 (09951-04020, 09952-04010, 09953-04030, 09954-04010, 09955-04061, 09957-04010), 09950-60010 (09951-00320)
- (b) Using a brass bar and hammer, remove the bearing race (for the output shaft).

