




F RELAY LOCATIONS

[Engine Compartment]

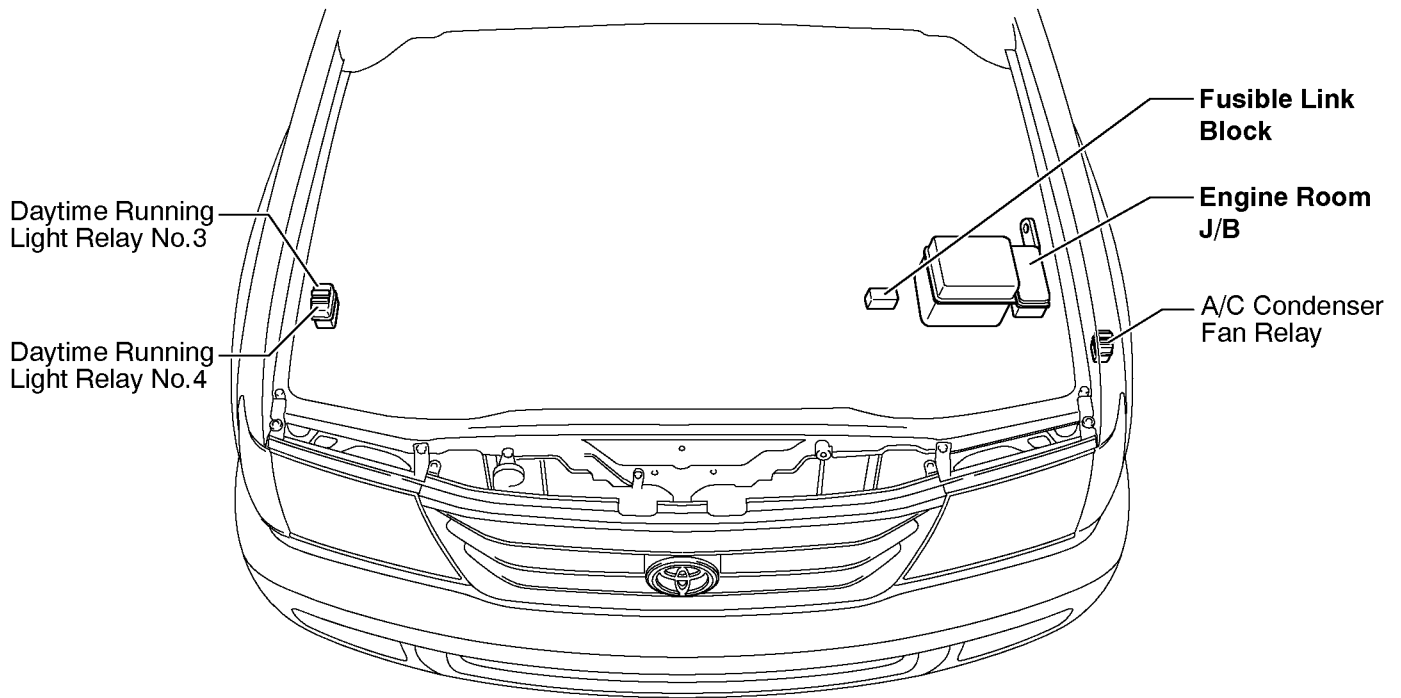

[Instrument Panel]

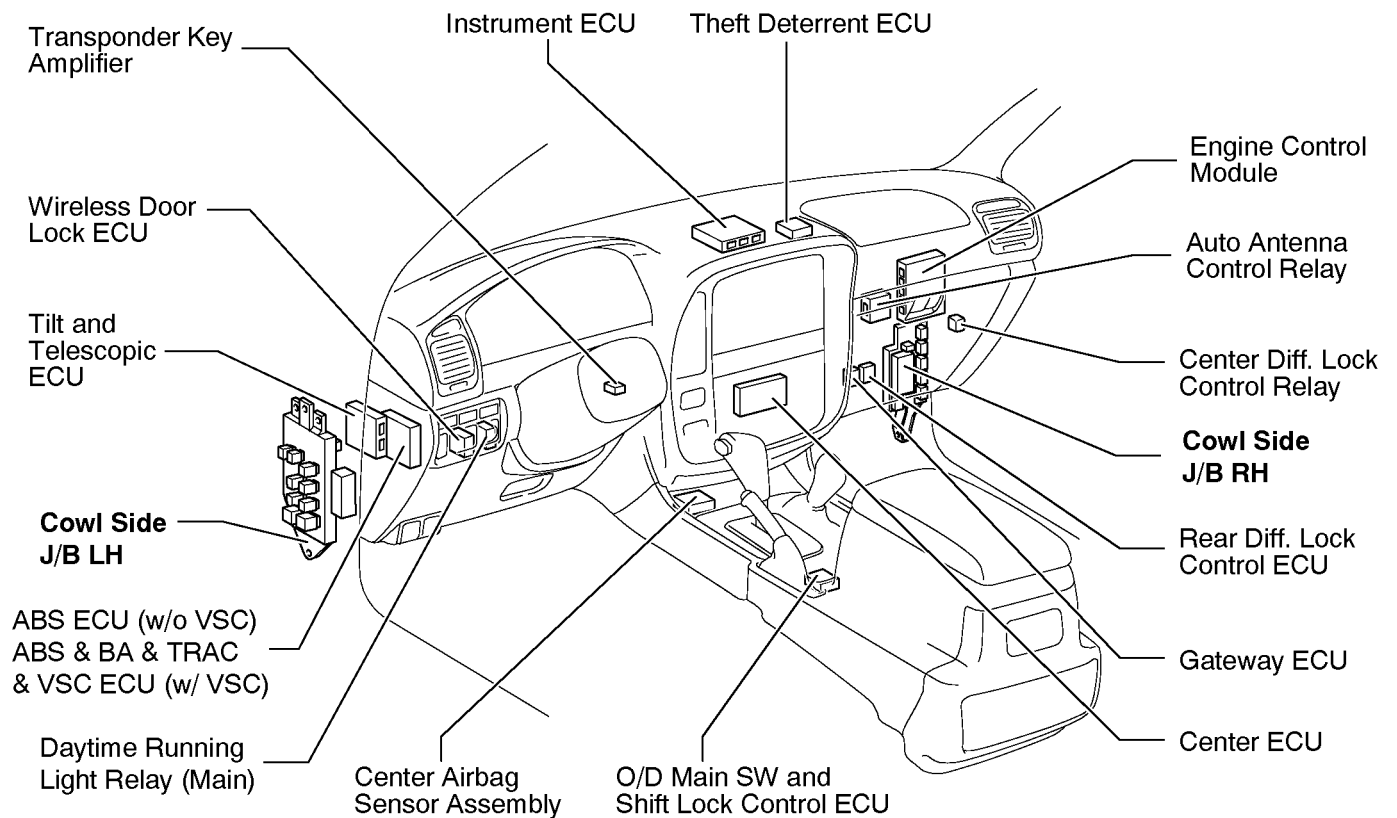


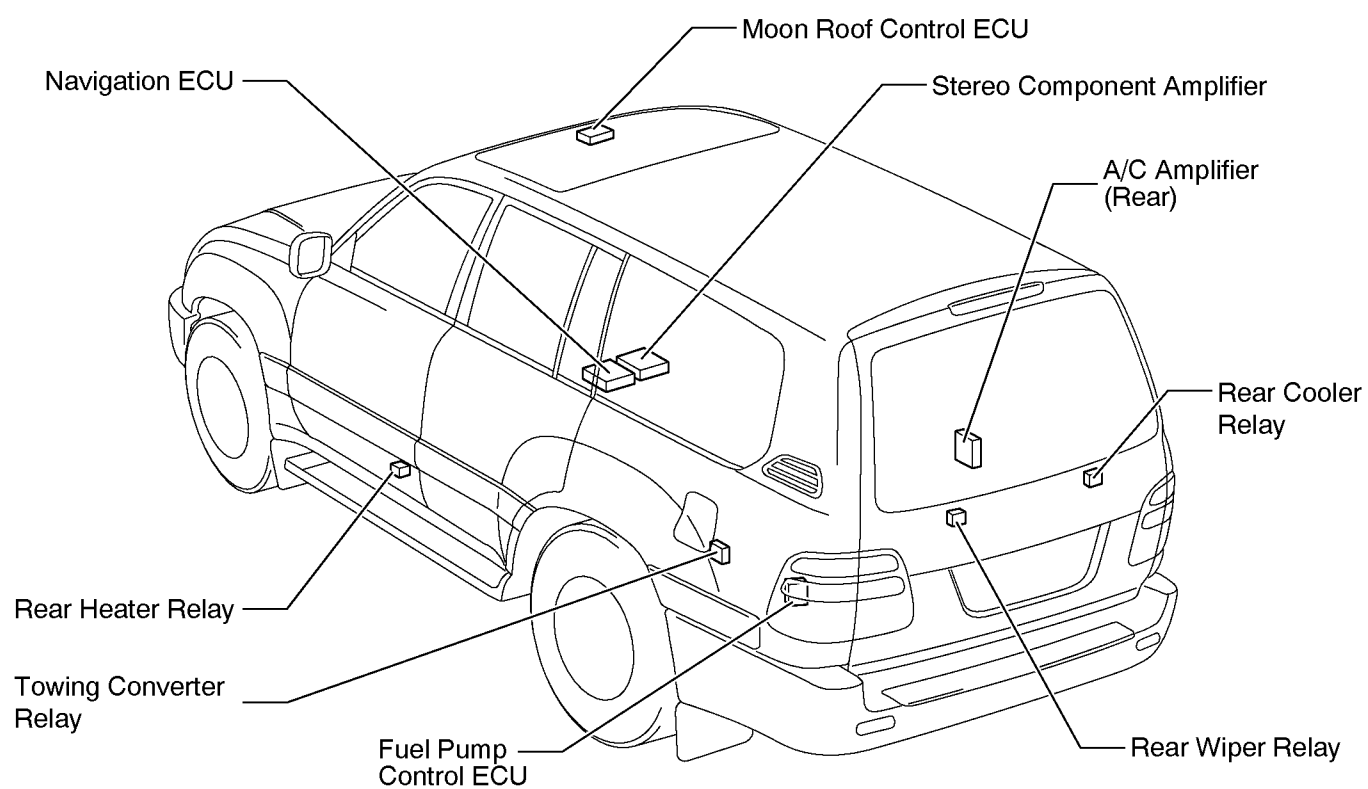
[Body]

F RELAY LOCATIONS

○ : Engine Room J/B


Engine Compartment Left (See Page 20)

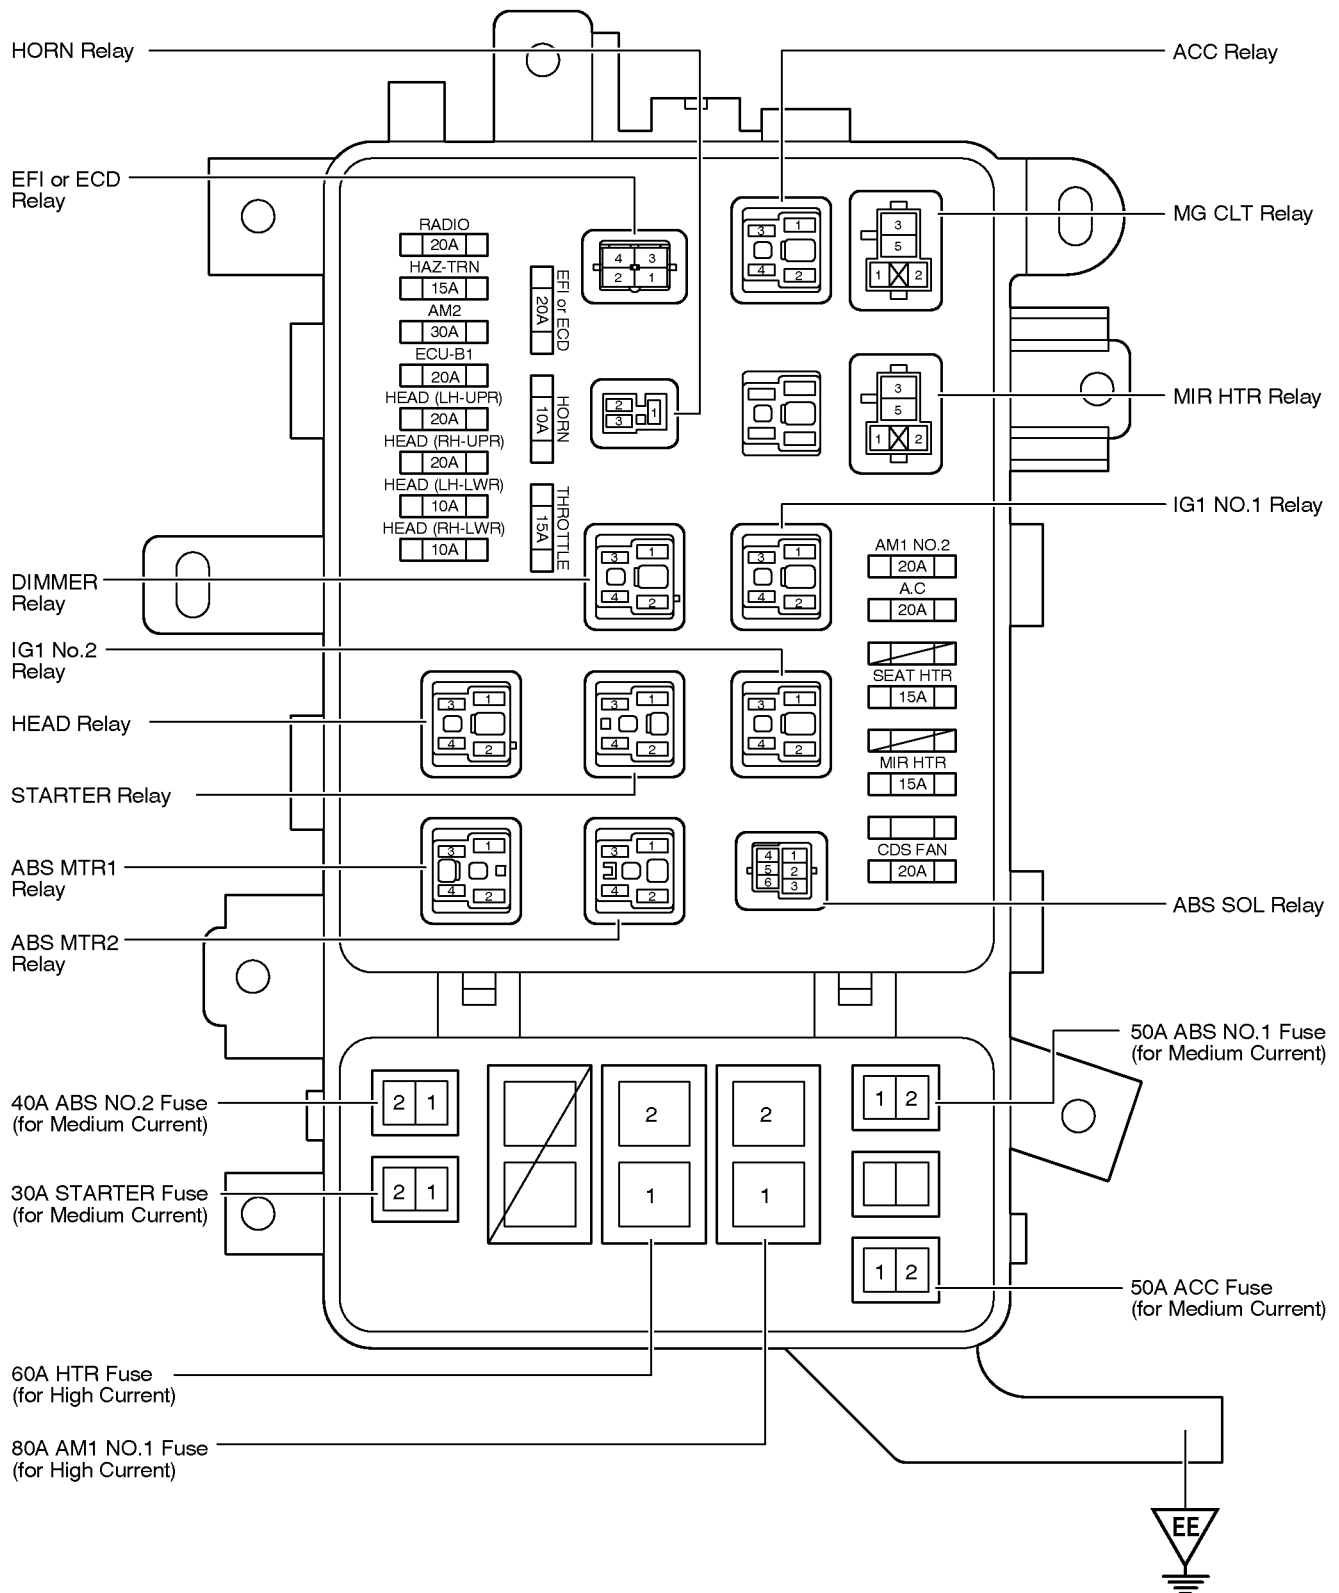

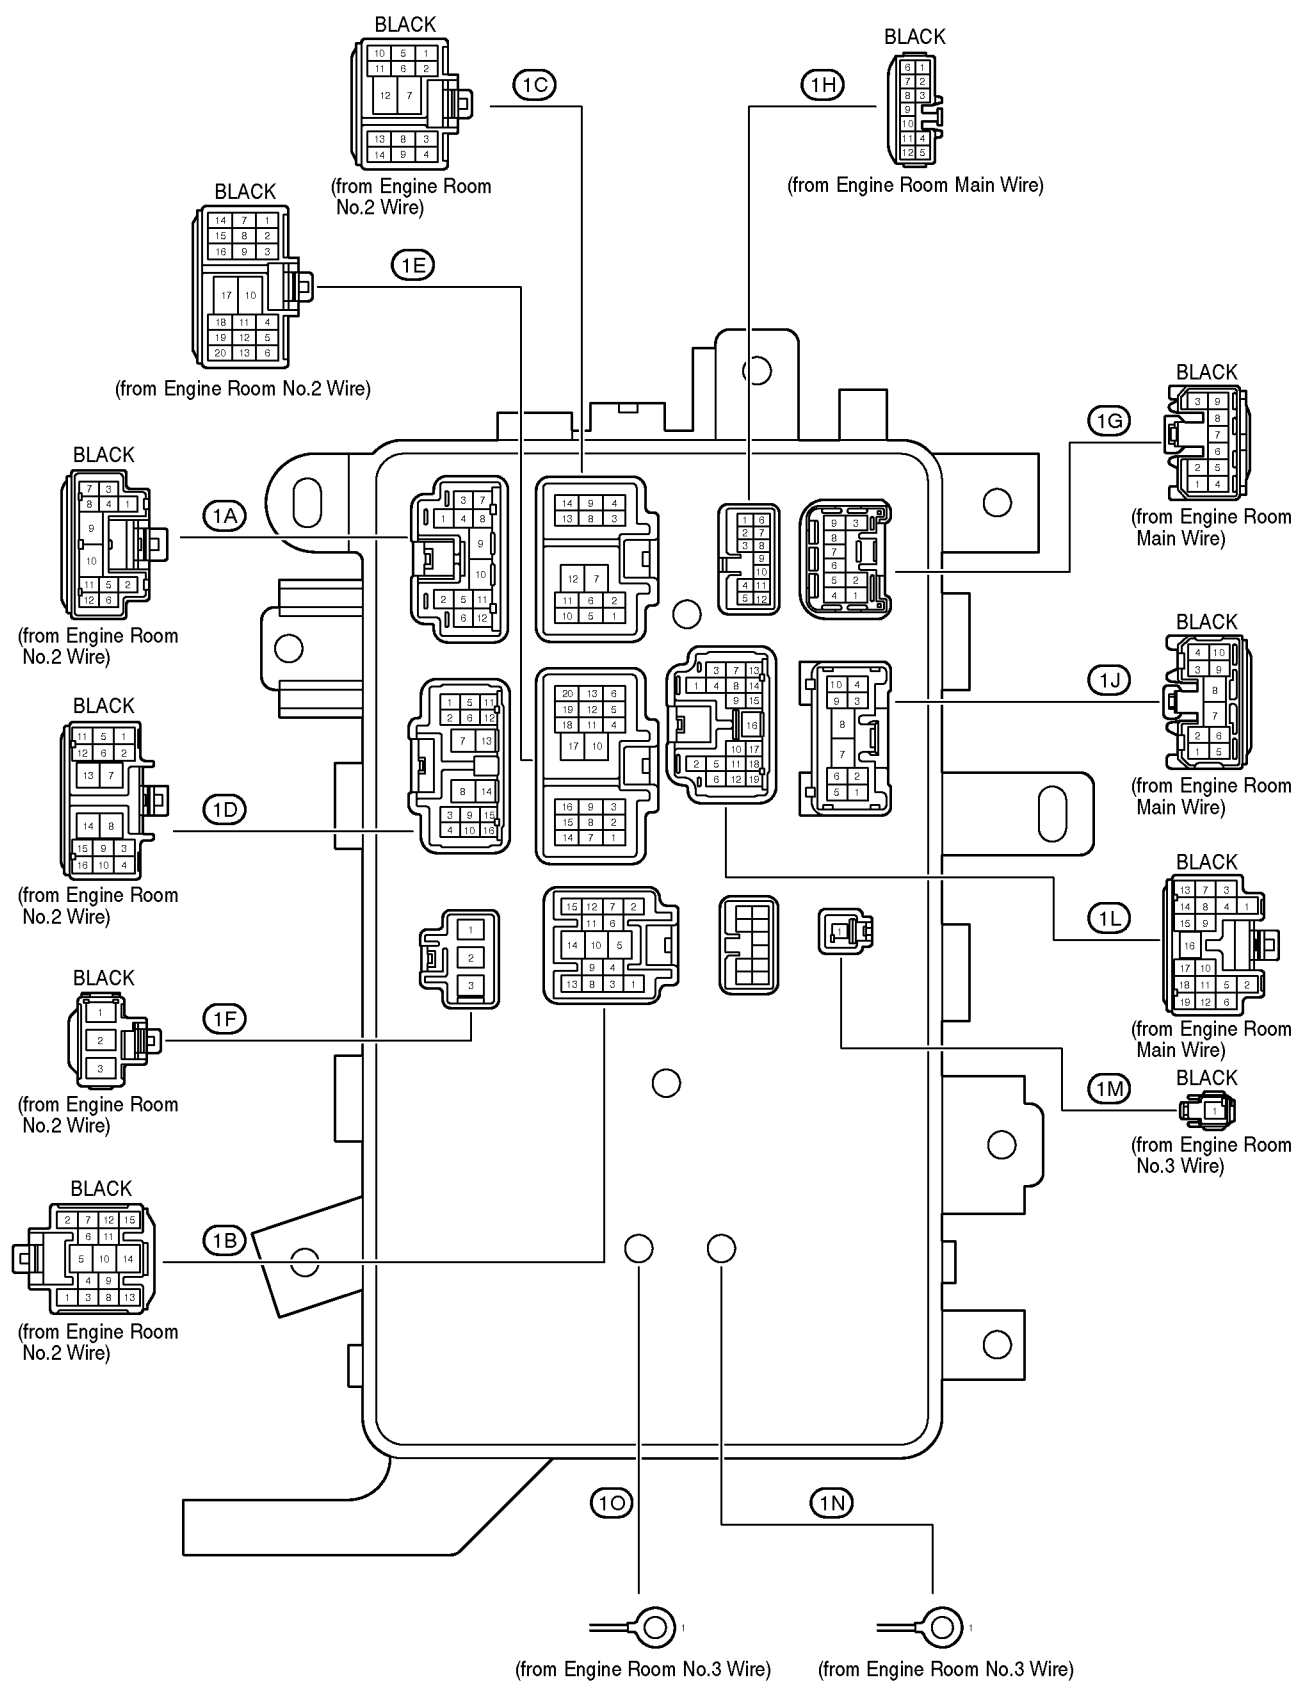


F RELAY LOCATIONS

[Engine Room J/B Inner Circuit]

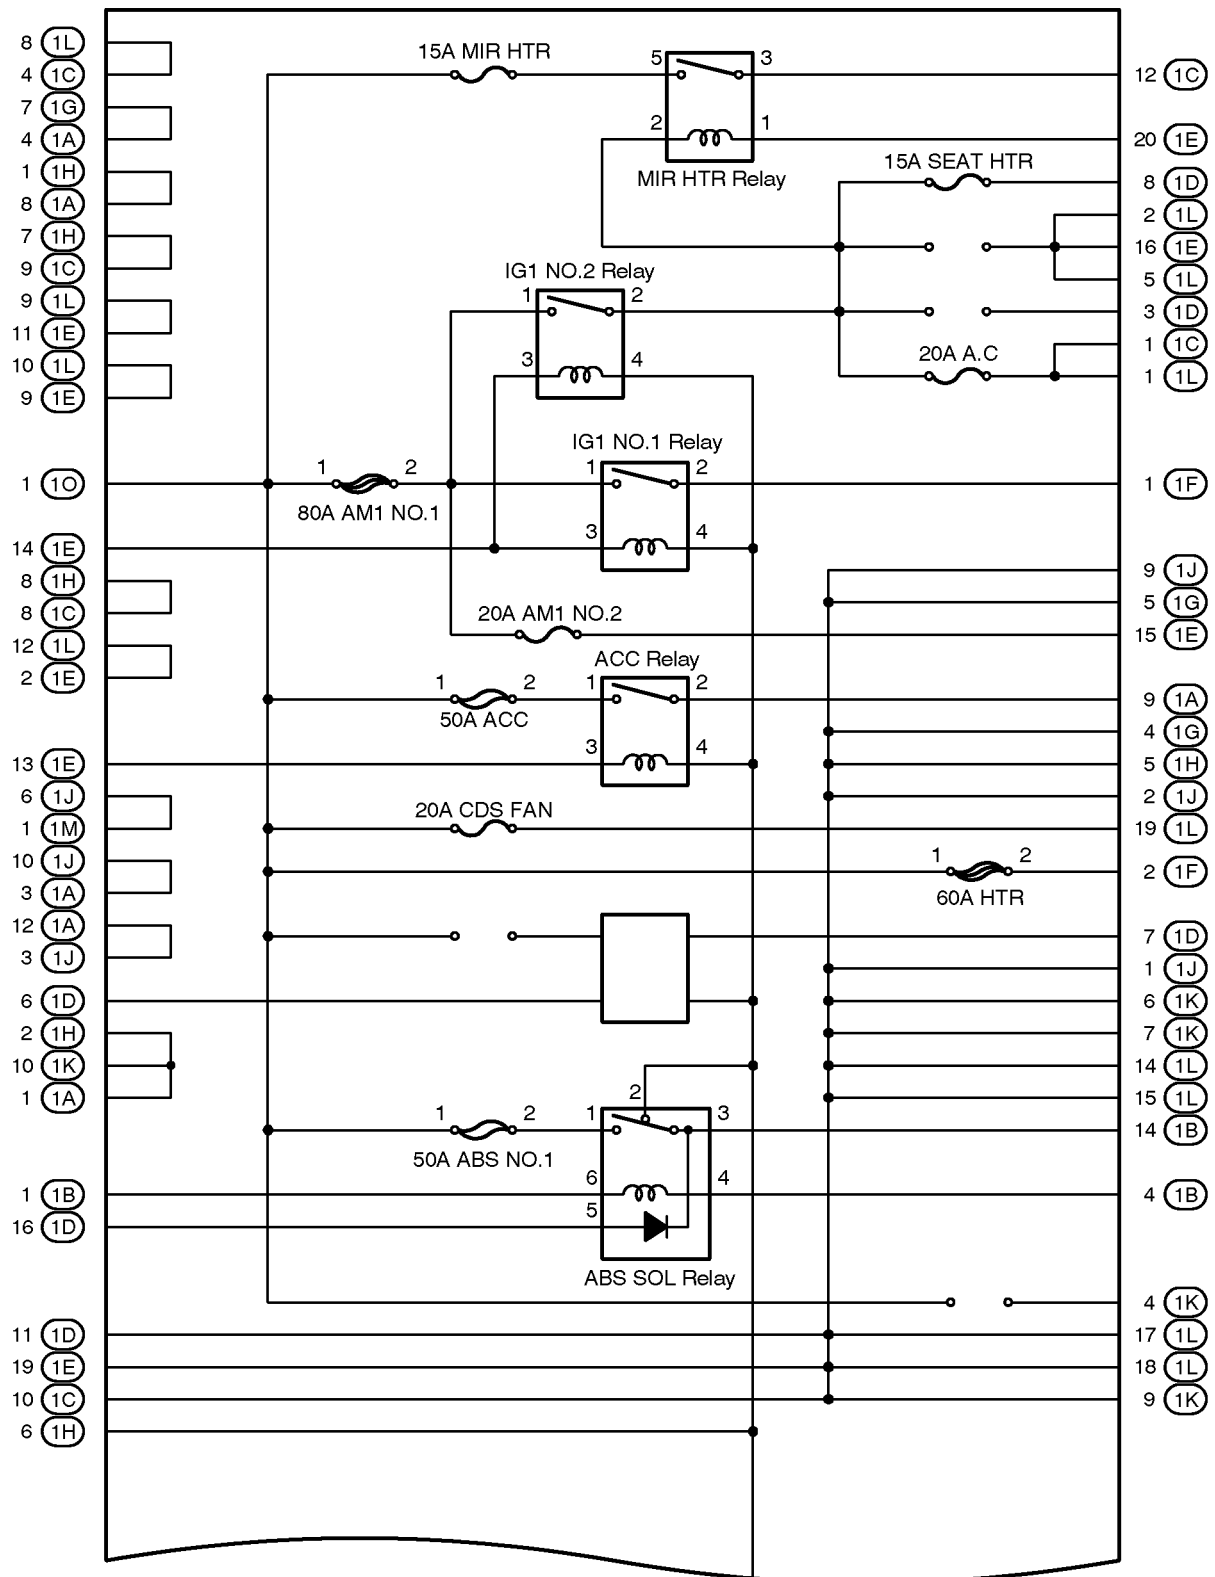

Cont. Next Page


Cont'd

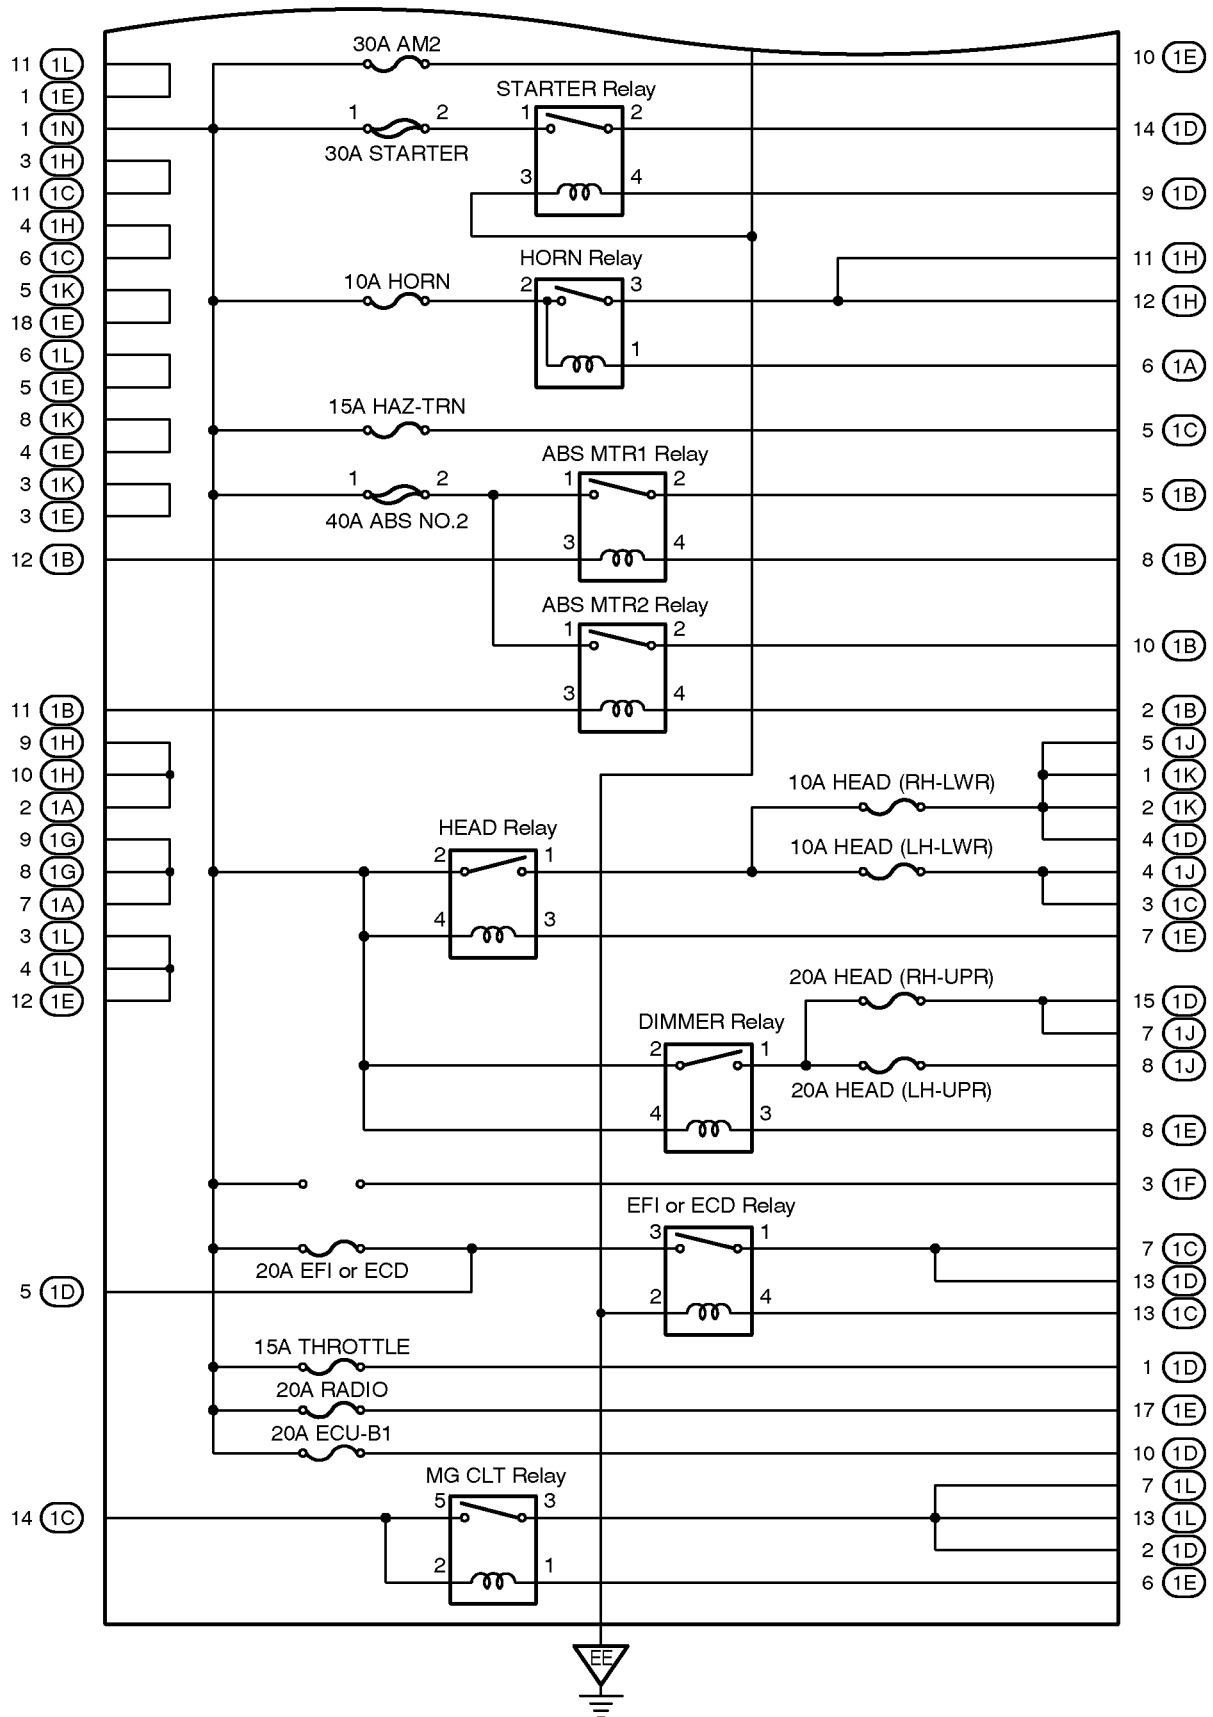


F RELAY LOCATIONS

 : Cowl Side J/B LH

Left Kick Panel (See Page 20)

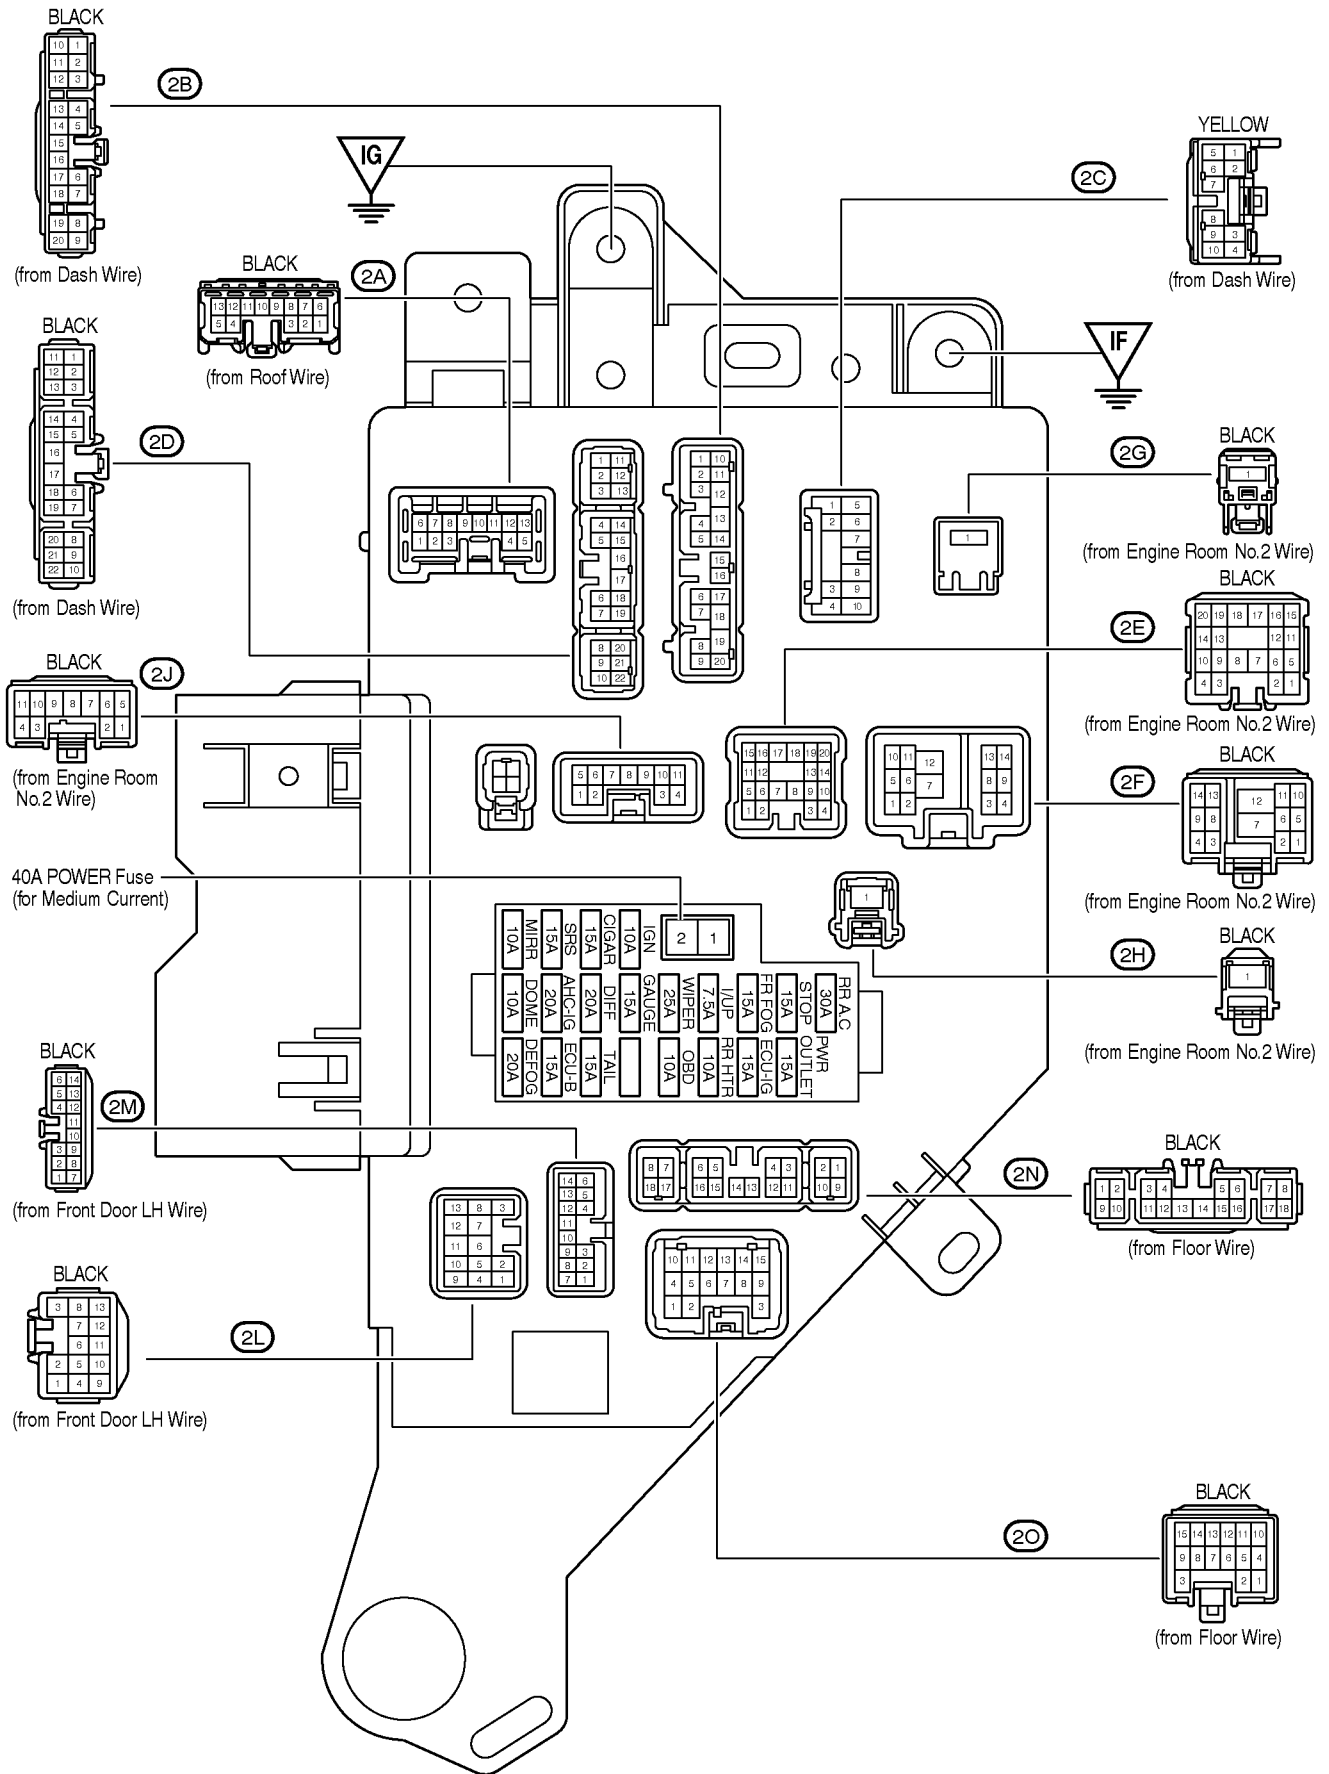


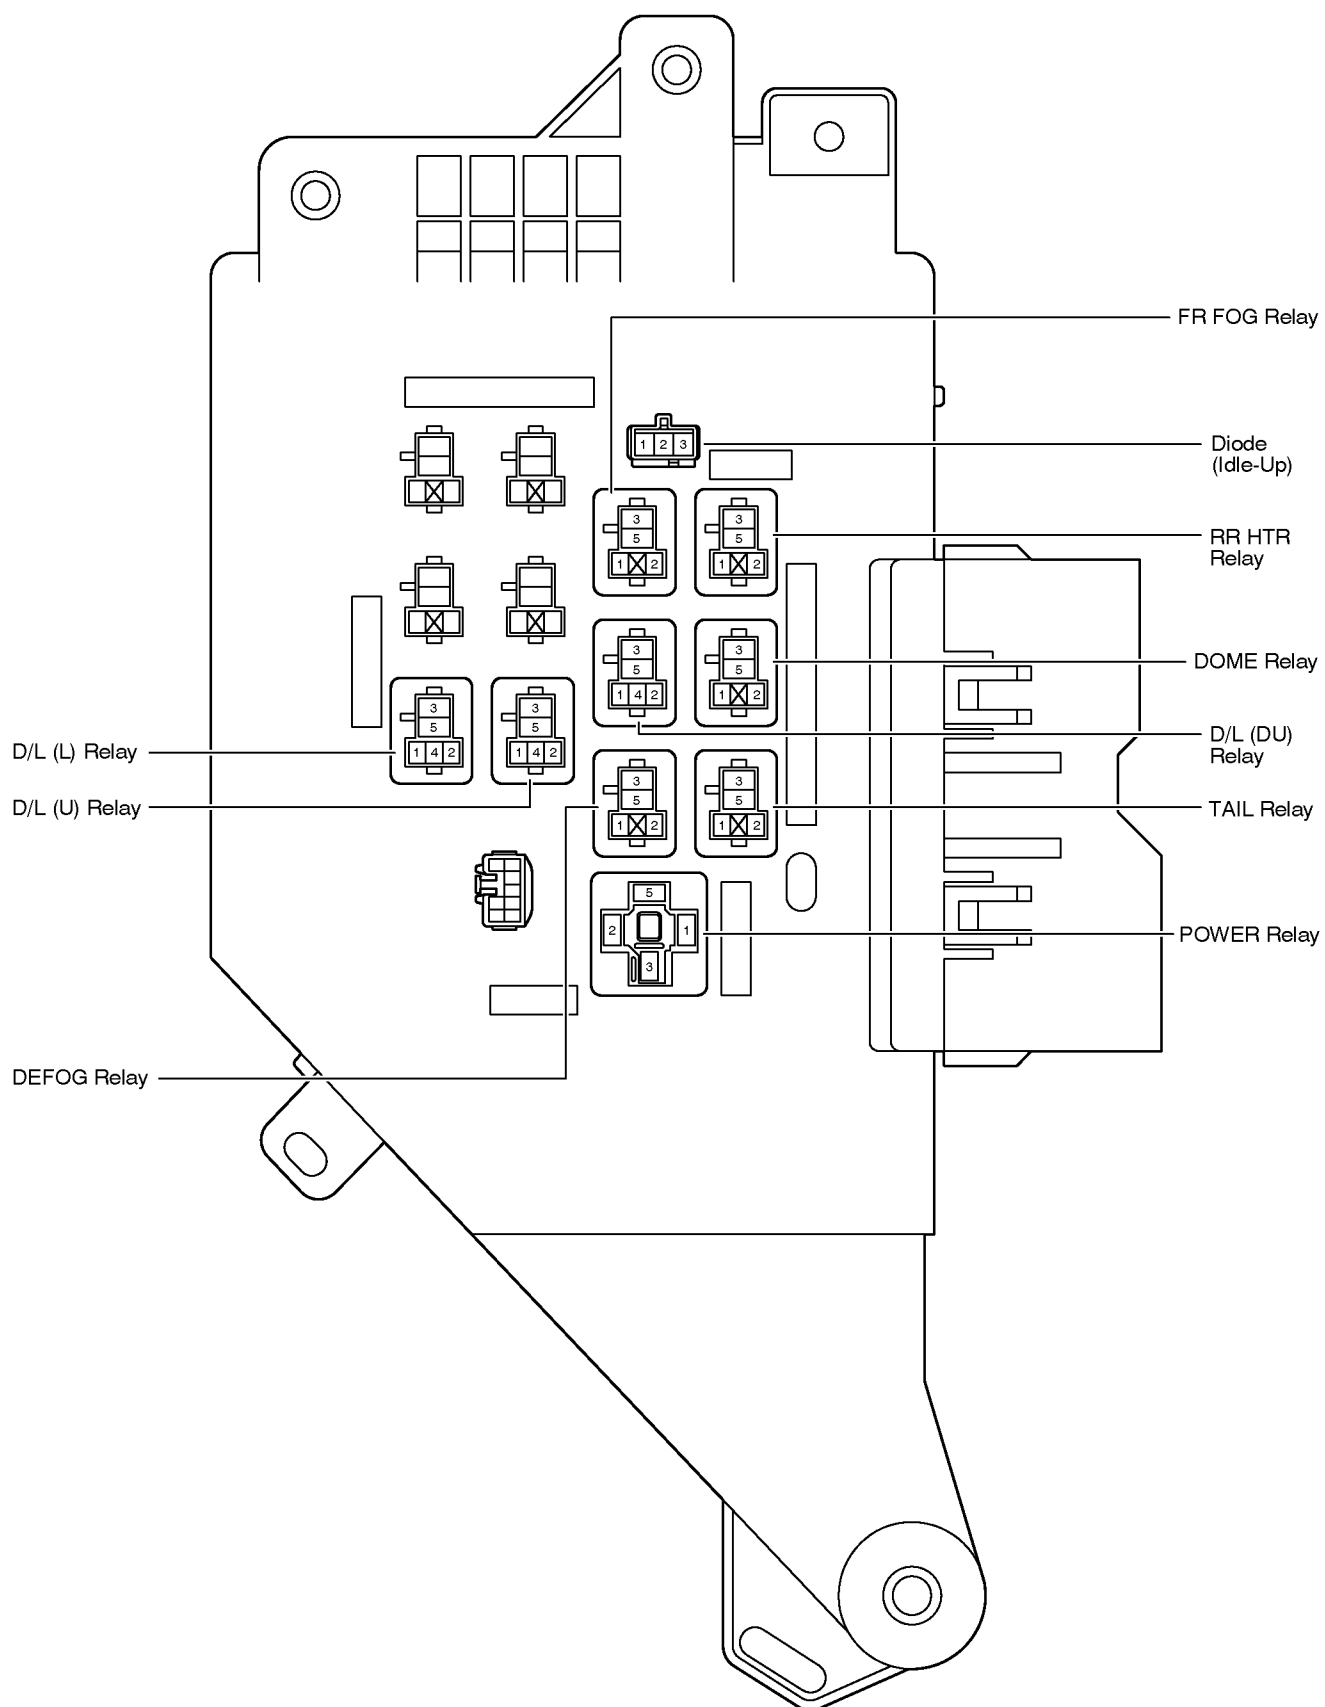

F RELAY LOCATIONS


 : Cowl Side J/B LH

Left Kick Panel (See Page 20)

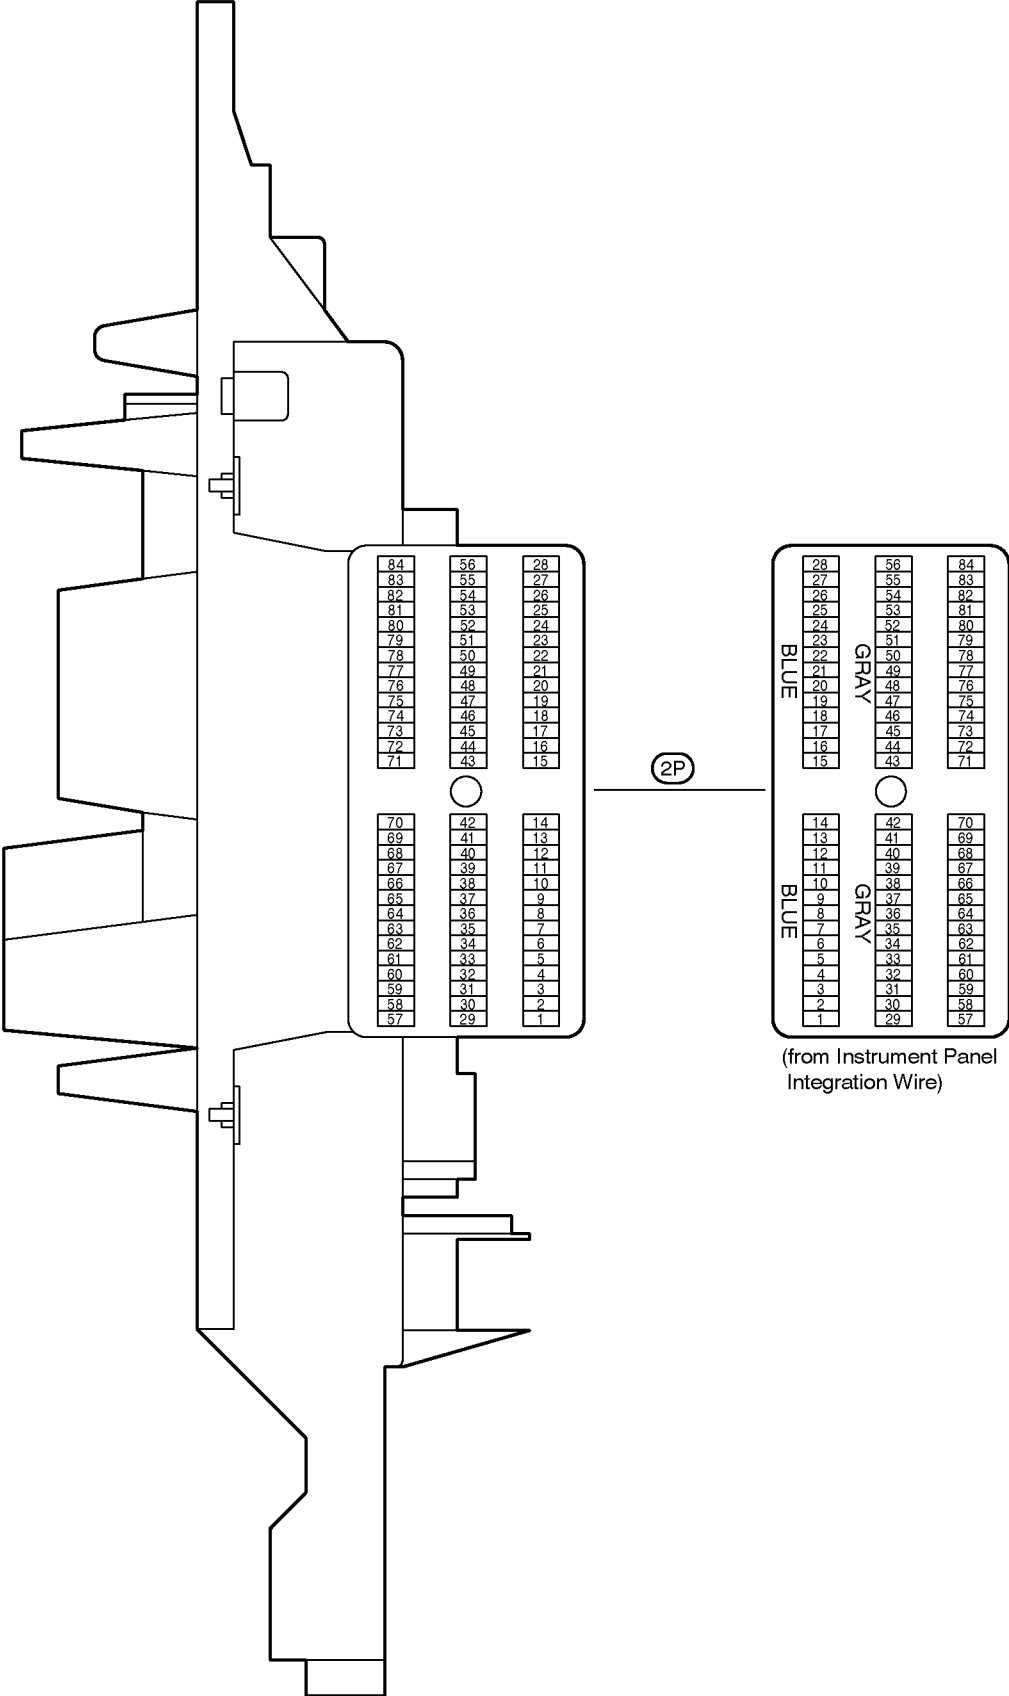

(from Instrument Panel
Integration Wire)

[Cowl Side J/B LH Inner Circuit]

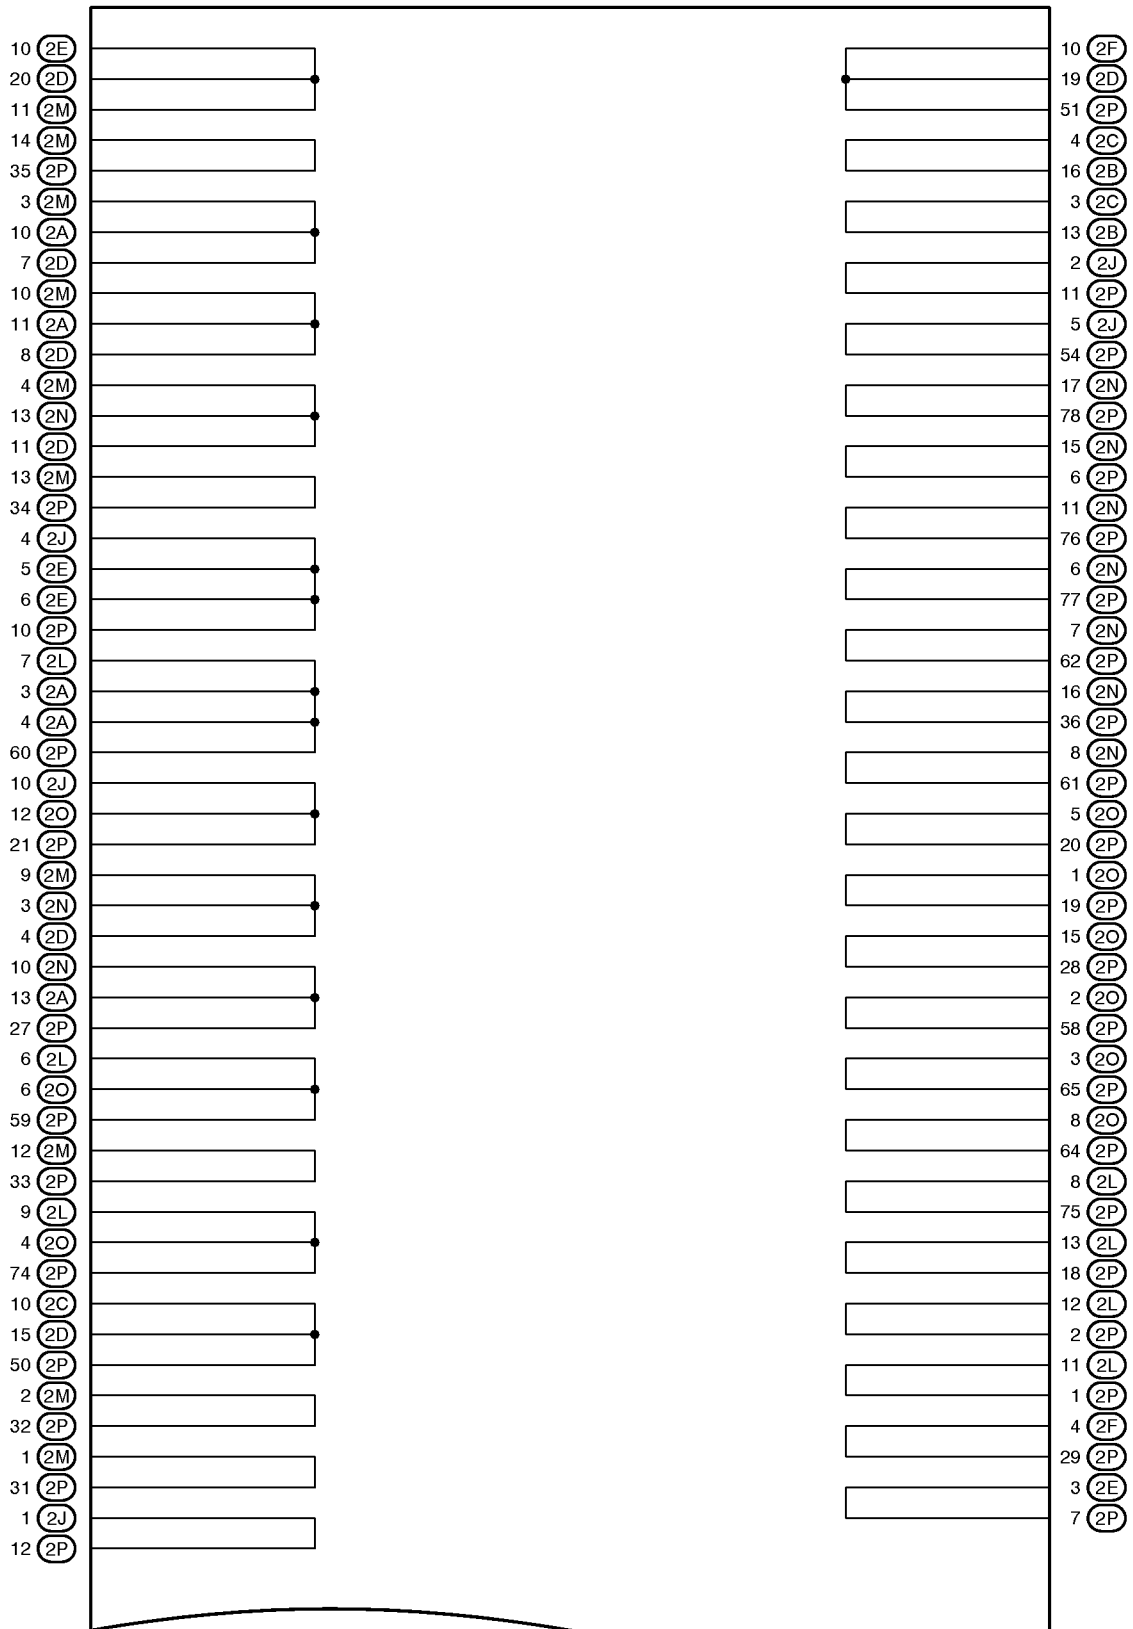


Cont. Next Page

F RELAY LOCATIONS


[Cowl Side J/B LH Inner Circuit]

Cont'd

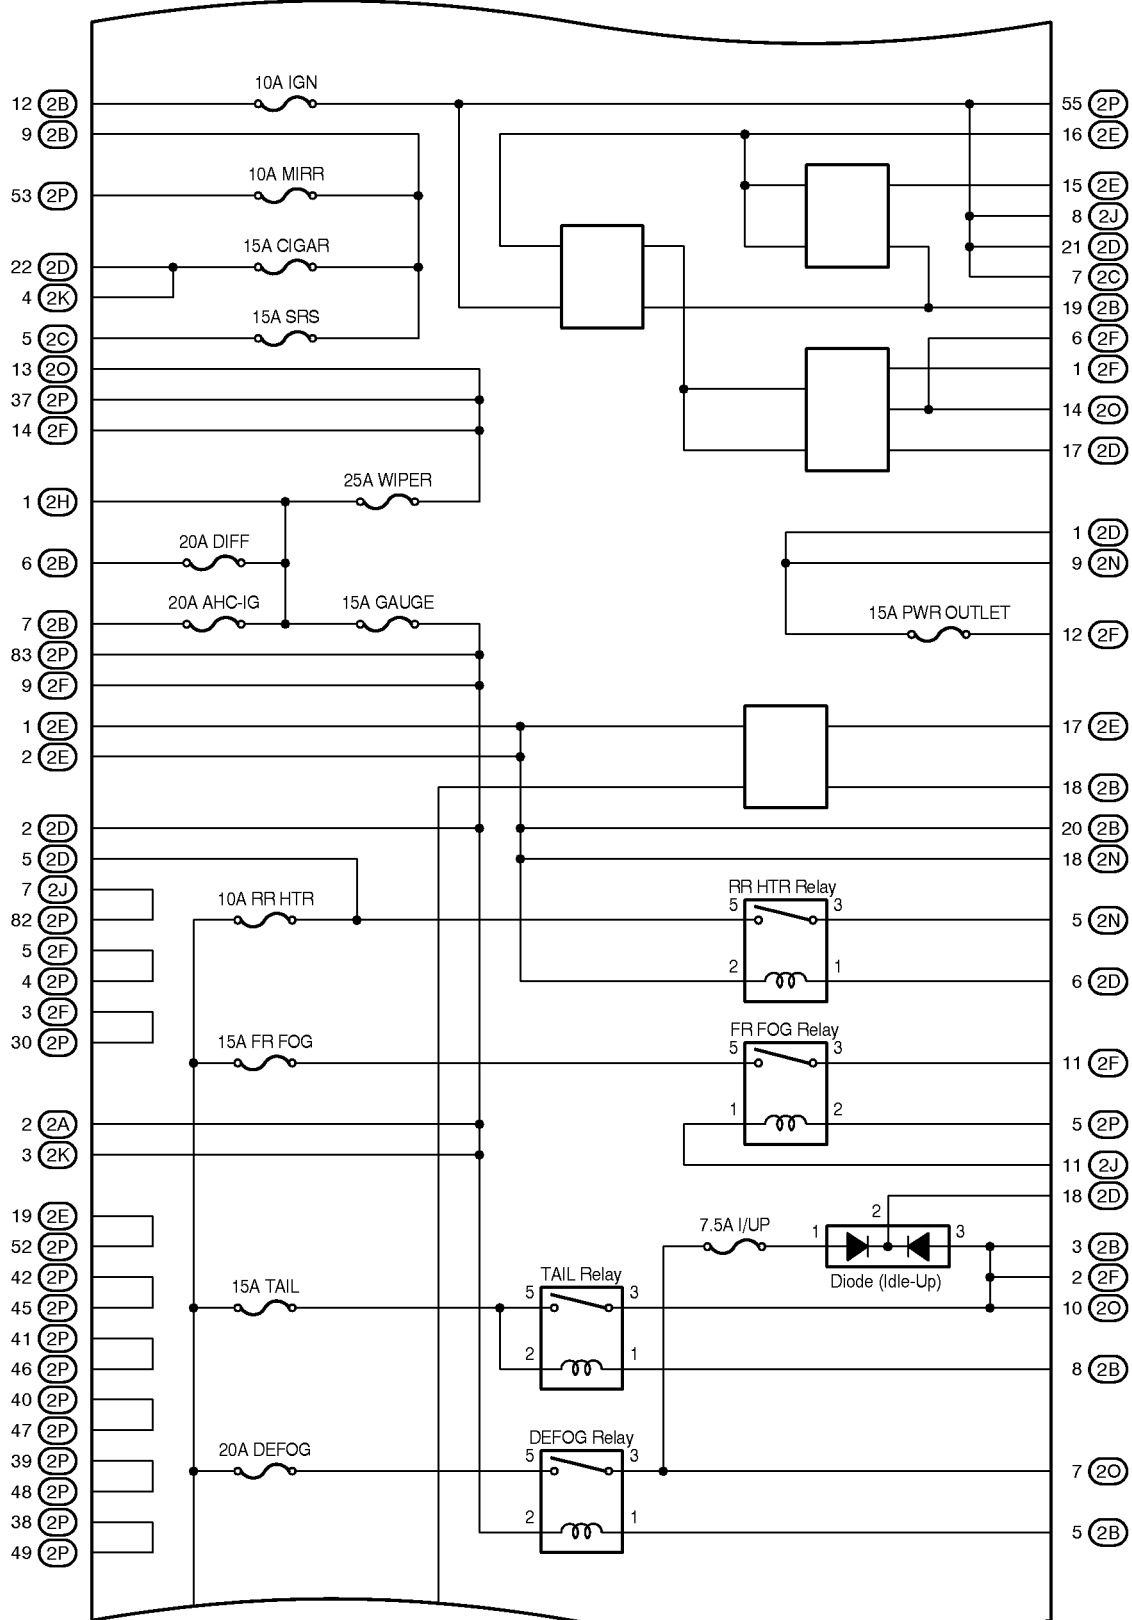

Cont. Next Page


Cont'd

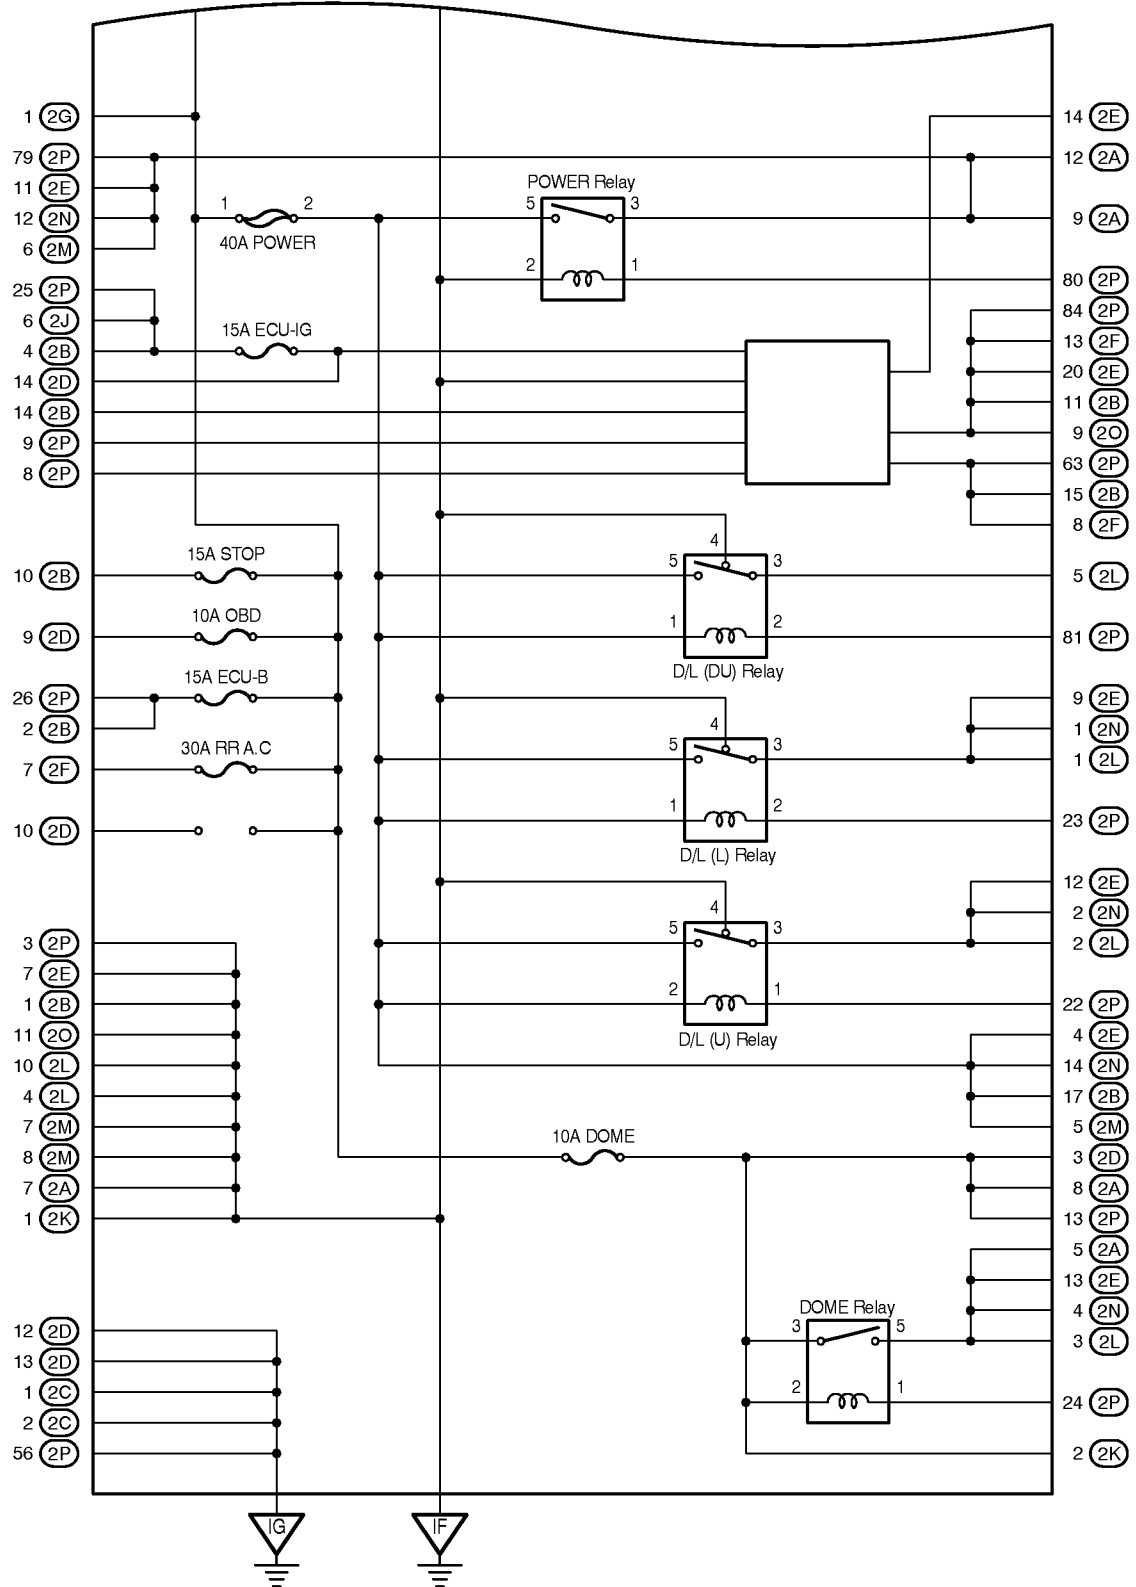


F RELAY LOCATIONS

○ : Cowl Side J/B RH


Right Kick Panel (See Page 20)

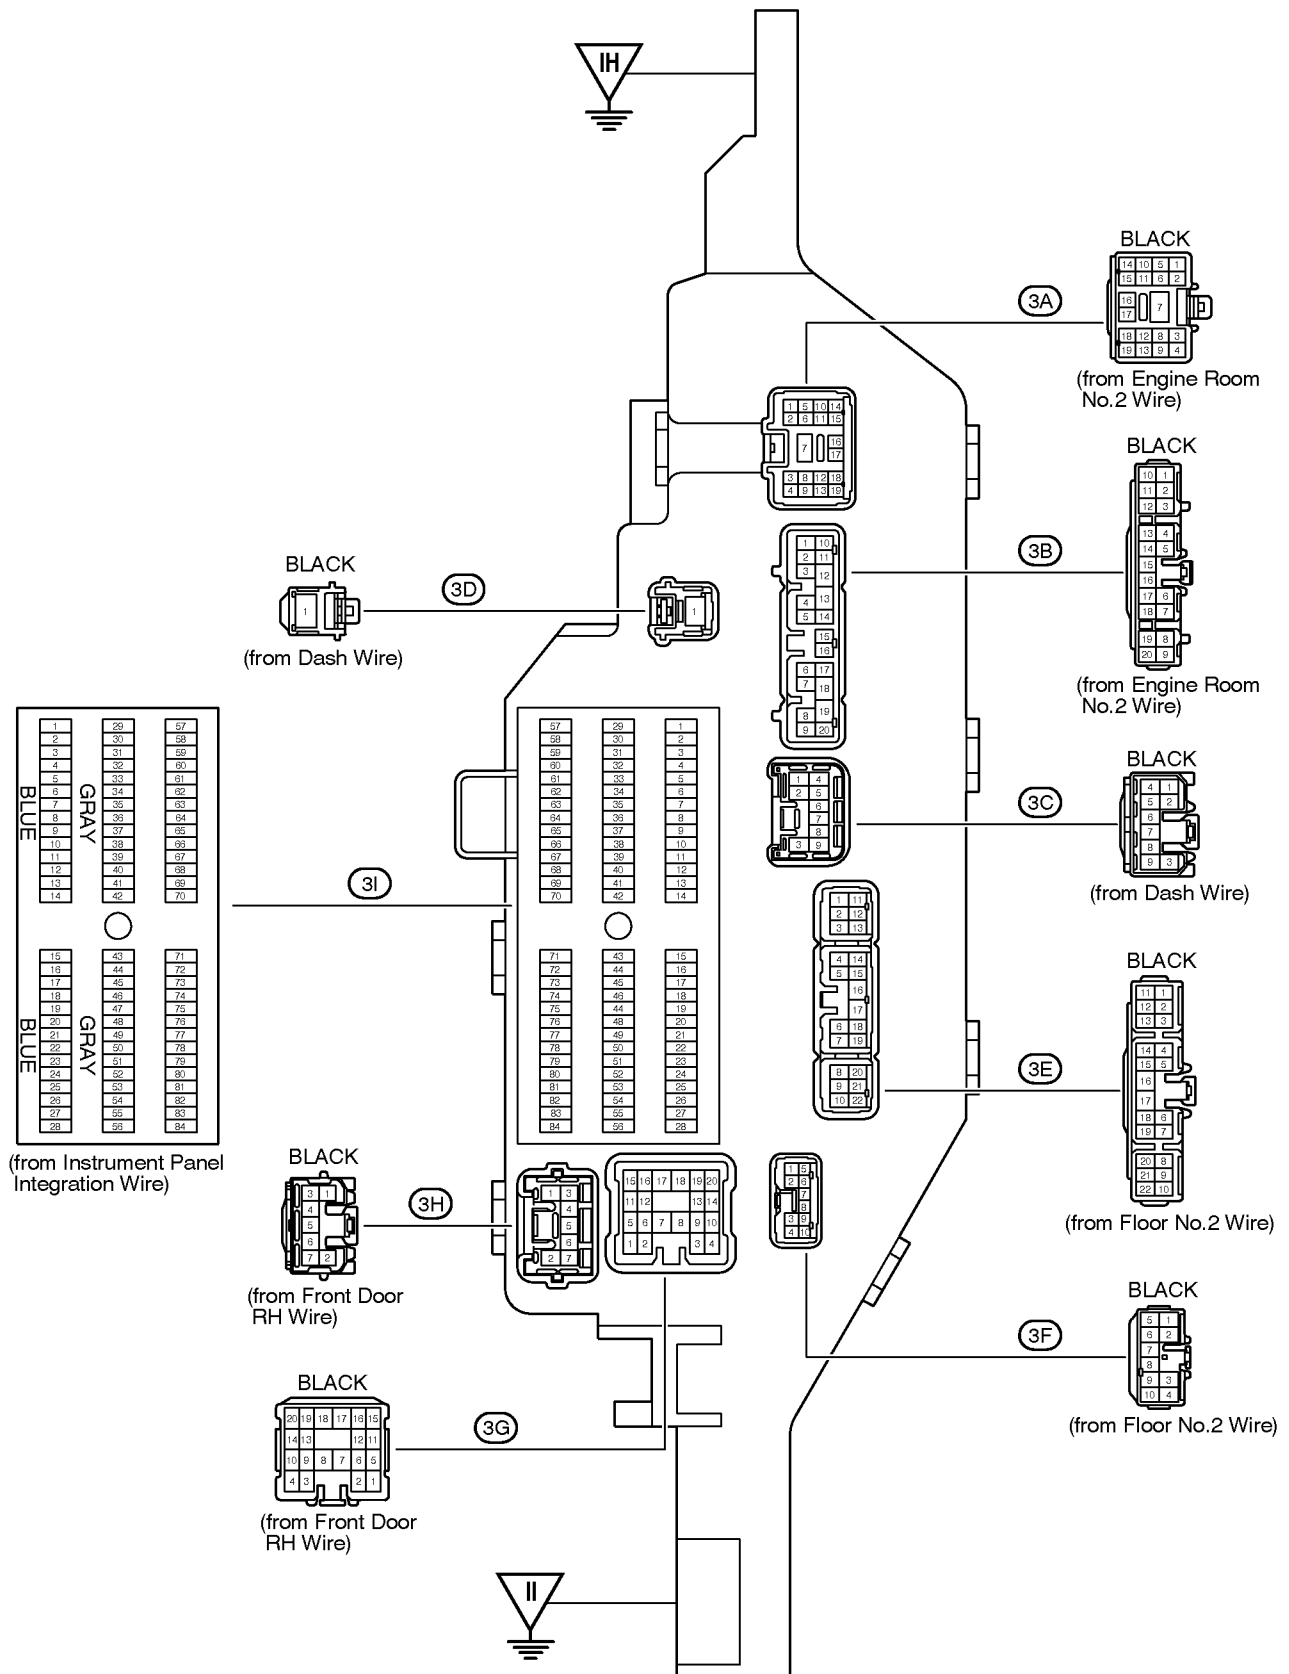

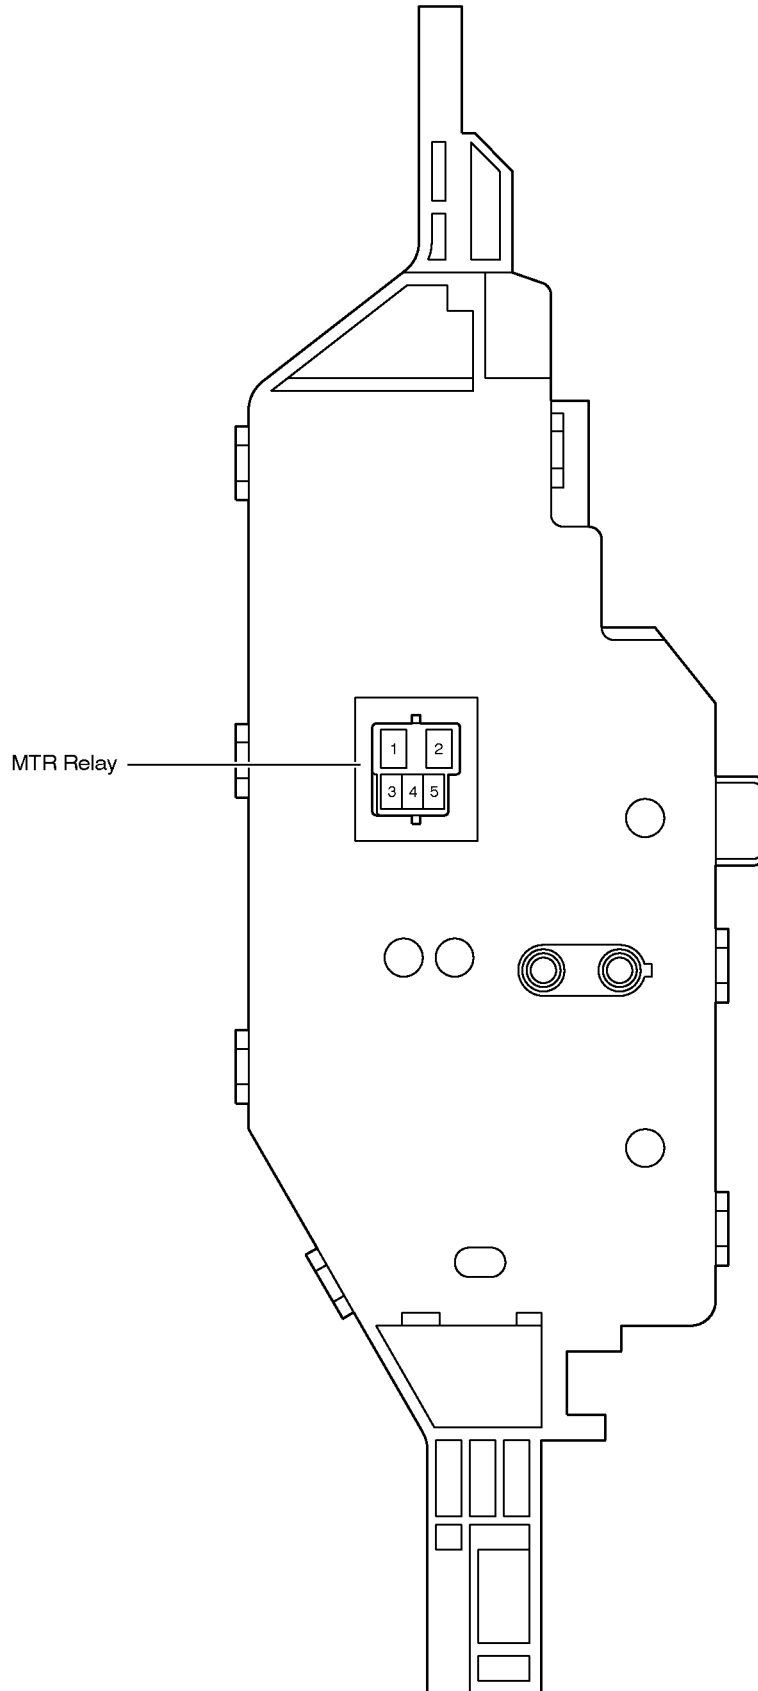


F RELAY LOCATIONS

[Cowl Side J/B RH Inner Circuit]

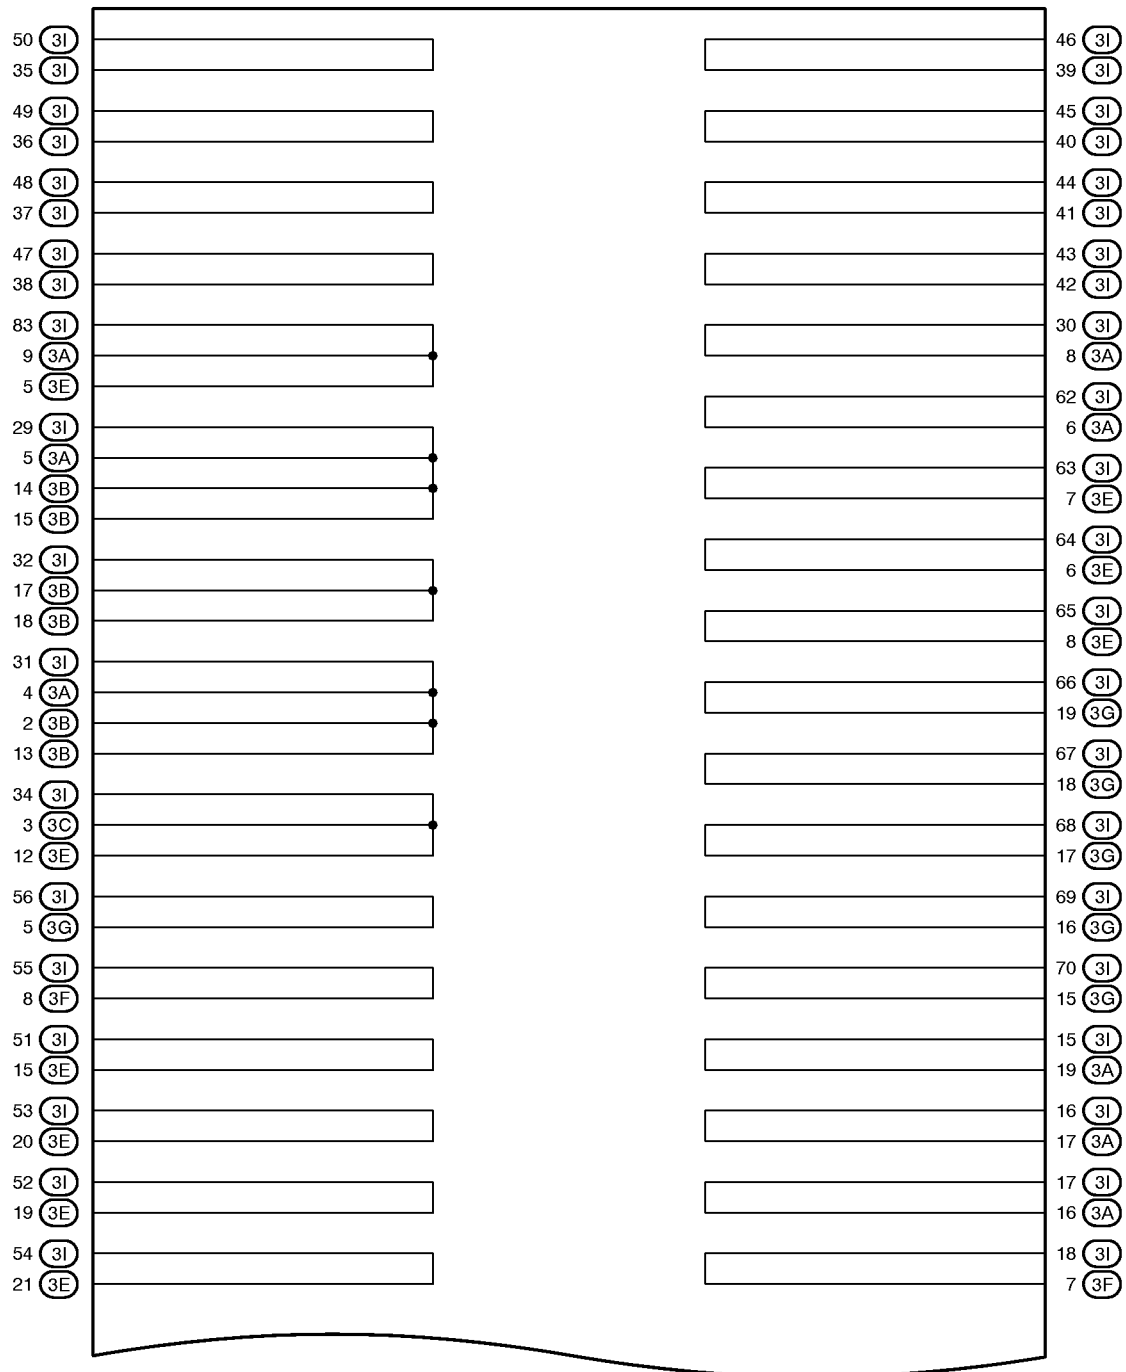

Cont. Next Page

Cont'd

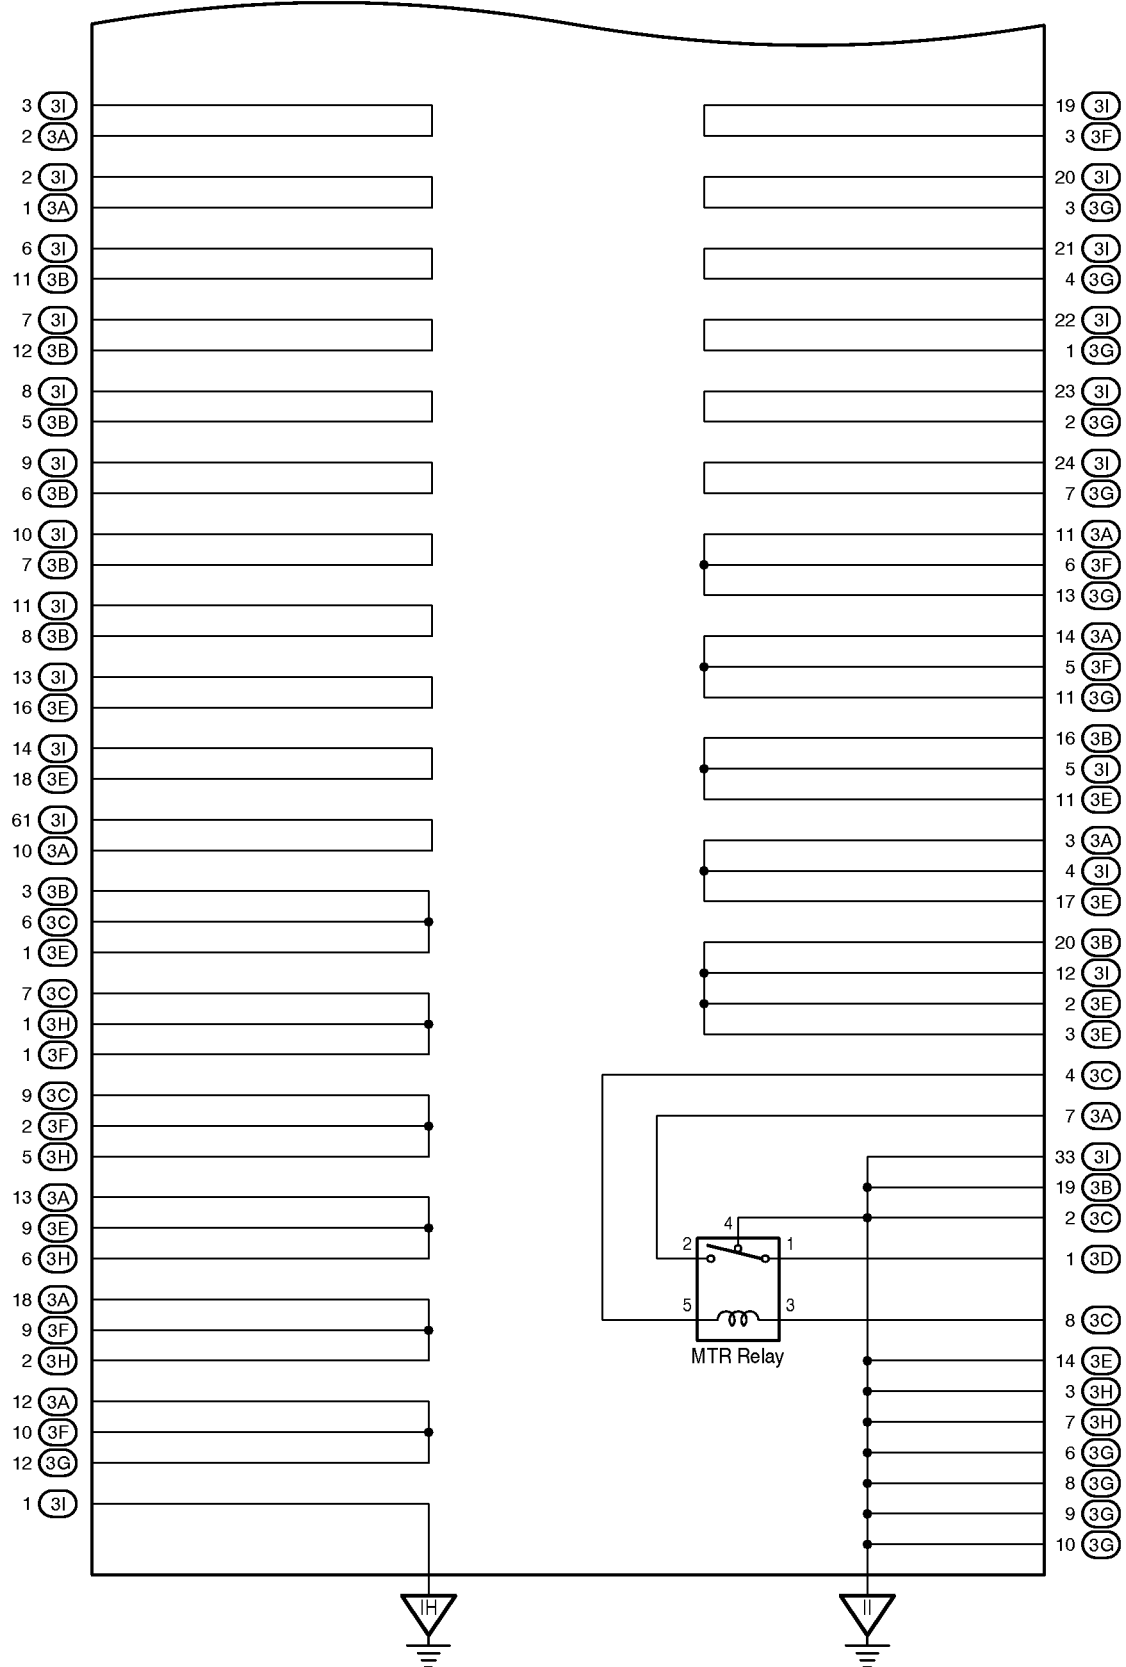

F RELAY LOCATIONS

Fusible Link Block

Near the Battery (See Page 20)

