


# TRAILER TOWING

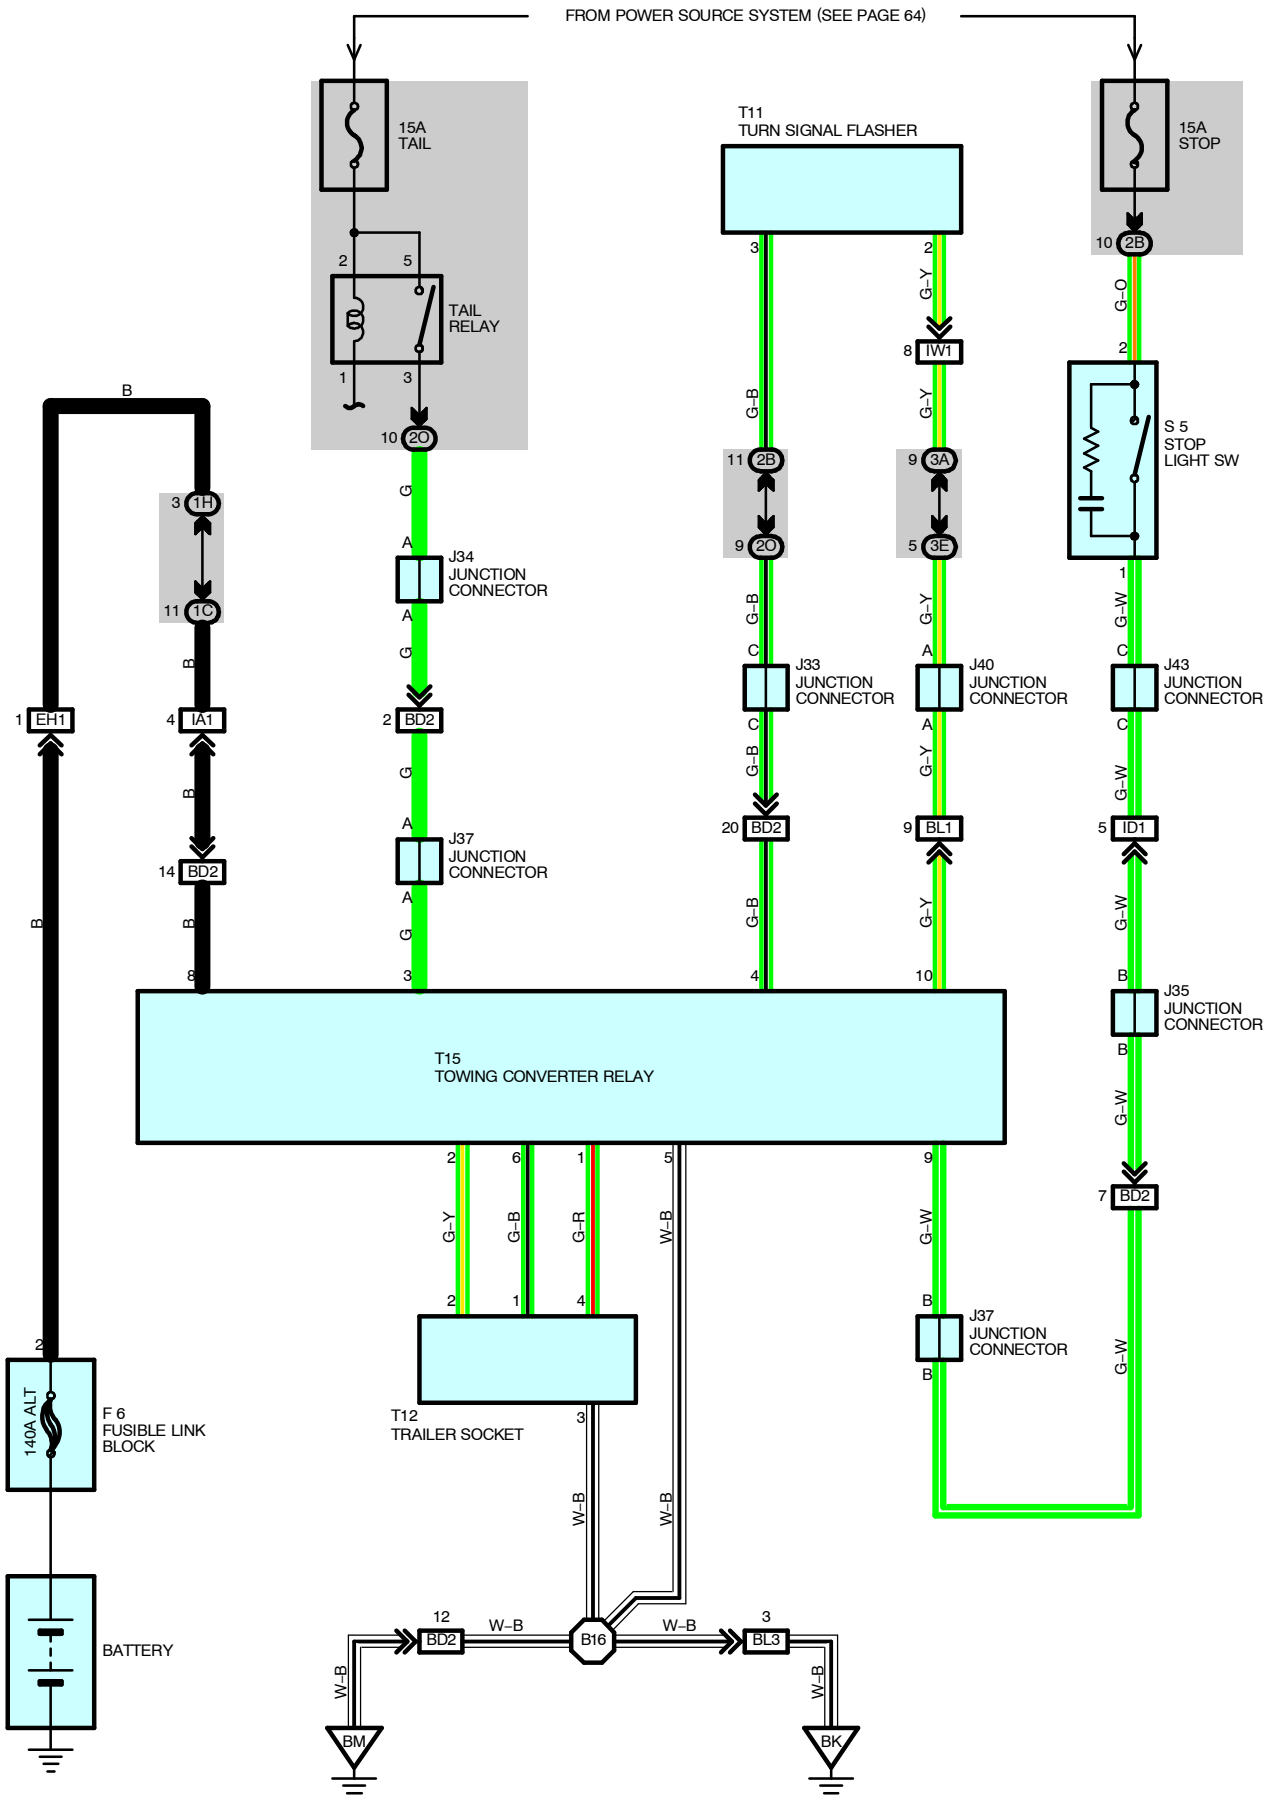

## SERVICE HINTS

### T15 TOWING CONVERTER RELAY

8-GROUND : Always approx. 12 volts

5-GROUND : Always continuity

### S5 STOP LIGHT SW

2-1 : Closed with brake pedal depressed

## ○ : PARTS LOCATION

| Code | See Page | Code | See Page | Code | See Page |
|------|----------|------|----------|------|----------|
| F6   | 38       | J37  | 42       | T11  | 41       |
| J33  | 42       | J40  | 42       | T12  | 43       |
| J34  | 42       | J43  | 41       | T15  | 43       |
| J35  | 42       | S5   | 41       |      |          |

## ○ : JUNCTION BLOCK AND WIRE HARNESS CONNECTOR

| Code | See Page | Junction Block and Wire Harness (Connector Location)                |
|------|----------|---------------------------------------------------------------------|
| 1C   | 23       | Engine Room No.2 Wire and Engine Room J/B (Engine Compartment Left) |
| 1H   | 23       | Engine Room Main Wire and Engine Room J/B (Engine Compartment Left) |
| 2B   | 26       | Dash Wire and Cowl Side J/B LH (Left Kick Panel)                    |
| 2O   | 26       | Floor Wire and Cowl Side J/B LH (Left Kick Panel)                   |
| 3A   | 32       | Engine Room No.2 Wire and Cowl Side J/B RH (Right Kick Panel)       |
| 3E   | 32       | Floor No.2 Wire and Cowl Side J/B RH (Right Kick Panel)             |

## □ : CONNECTOR JOINING WIRE HARNESS AND WIRE HARNESS

| Code | See Page | Joining Wire Harness and Wire Harness (Connector Location)                  |
|------|----------|-----------------------------------------------------------------------------|
| EH1  | 46       | Engine Room Main Wire and Engine Room No.3 Wire (Under the Engine Room J/B) |
| IA1  | 48       | Floor Wire and Engine Room No.2 Wire (Left Kick Panel)                      |
| ID1  | 48       | Dash Wire and Floor Wire (Left Kick Panel)                                  |
| IW1  | 54       | Engine Room No.2 Wire and Dash Wire (Behind the Glove Box)                  |
| BD2  | 56       | Floor No.3 Wire and Floor Wire (Left Rear Side Quarter Panel)               |
| BL1  | 58       | Floor No.2 Wire and Floor No.3 Wire (Right Side of Rear Floor Crossmember)  |
| BL3  |          |                                                                             |

## ▽ : GROUND POINTS

| Code | See Page | Ground Points Location                      |
|------|----------|---------------------------------------------|
| BK   | 56       | Front Side Under the Front Passenger's Seat |
| BM   | 56       | Left Rear Side Quarter Panel                |

## ○ : SPLICE POINTS

| Code | See Page | Wire Harness with Splice Points | Code | See Page | Wire Harness with Splice Points |
|------|----------|---------------------------------|------|----------|---------------------------------|
| B16  | 58       | Floor No.3 Wire                 |      |          |                                 |