



\_\_\_\_\_

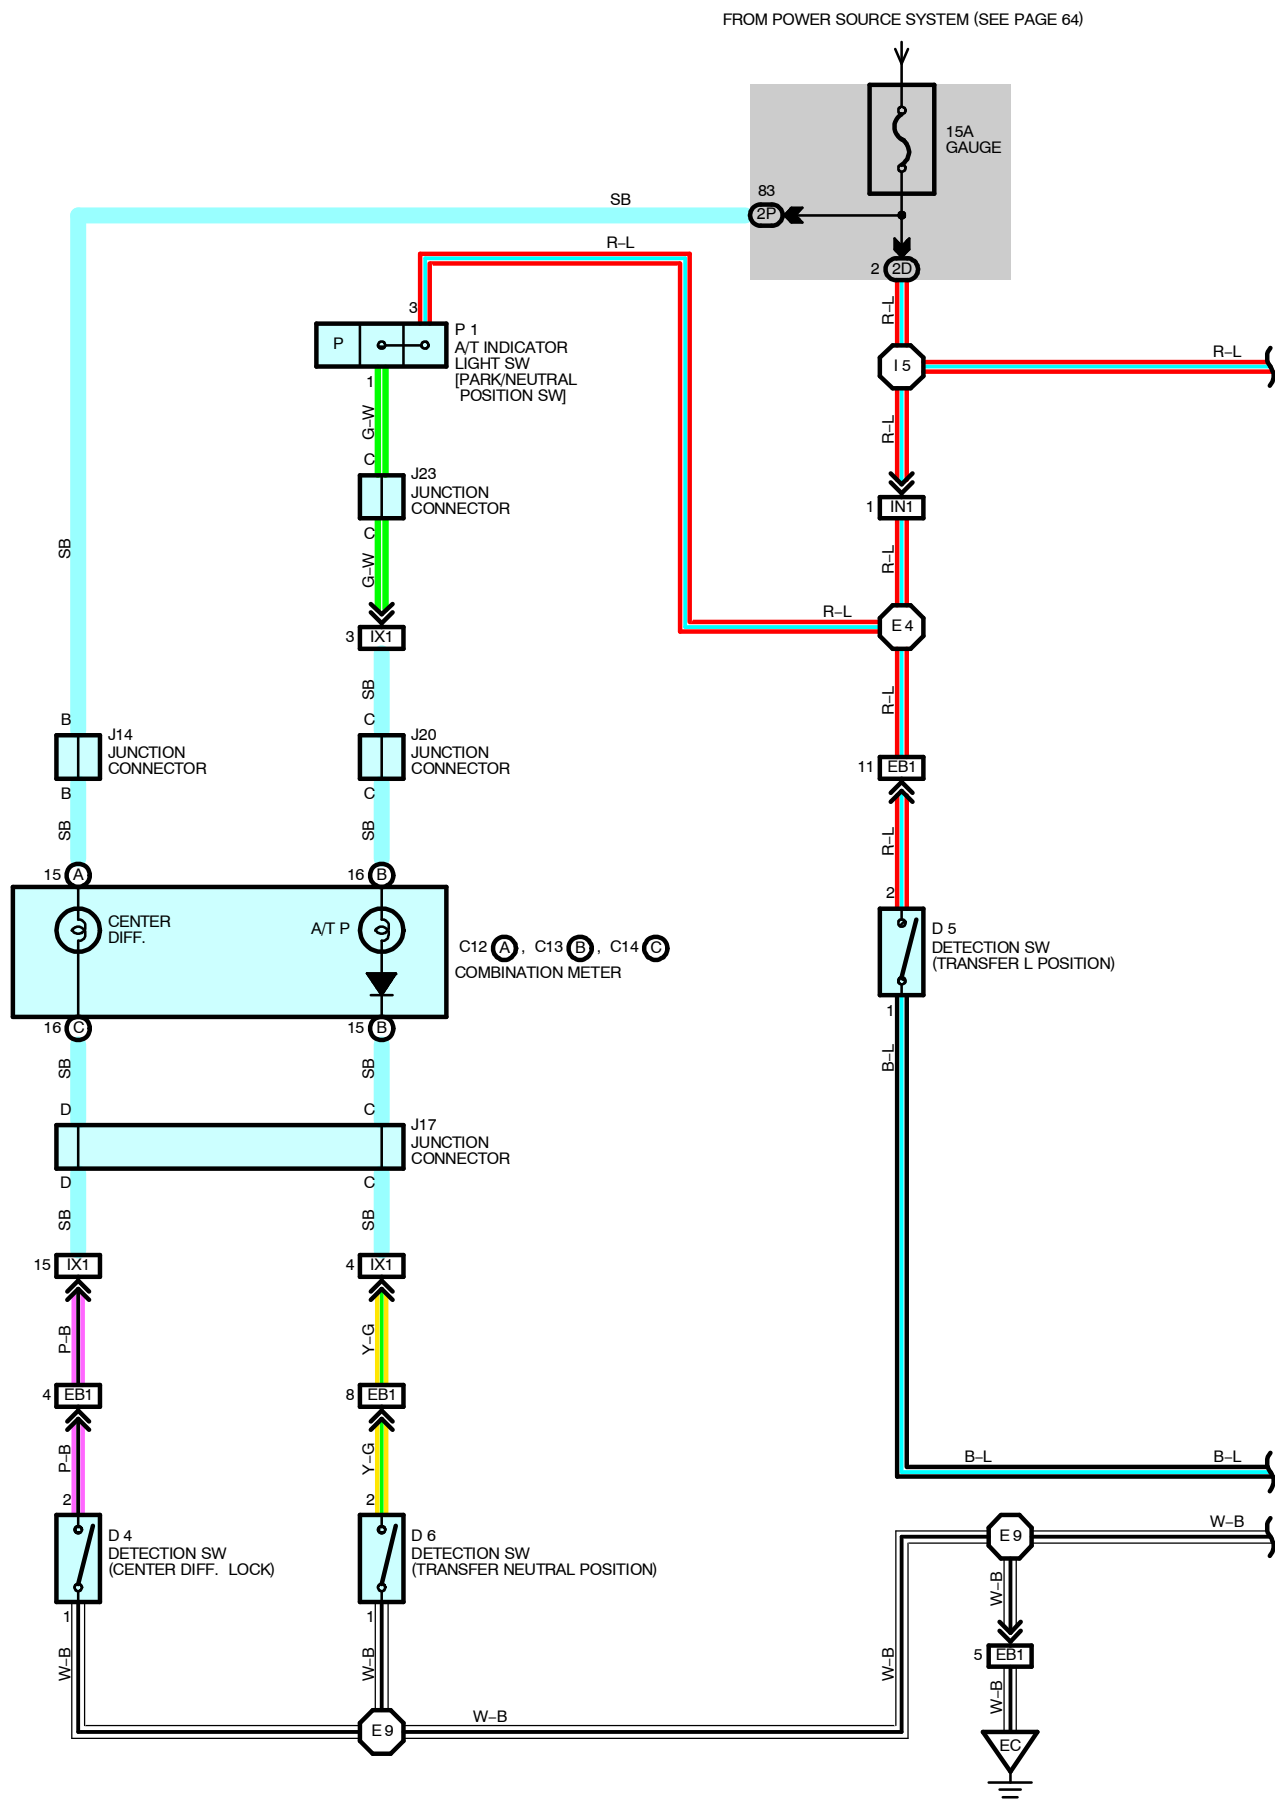

\* 1 : W/ NAVIGATION SYSTEM  
\* 2 : W/O NAVIGATION SYSTEM

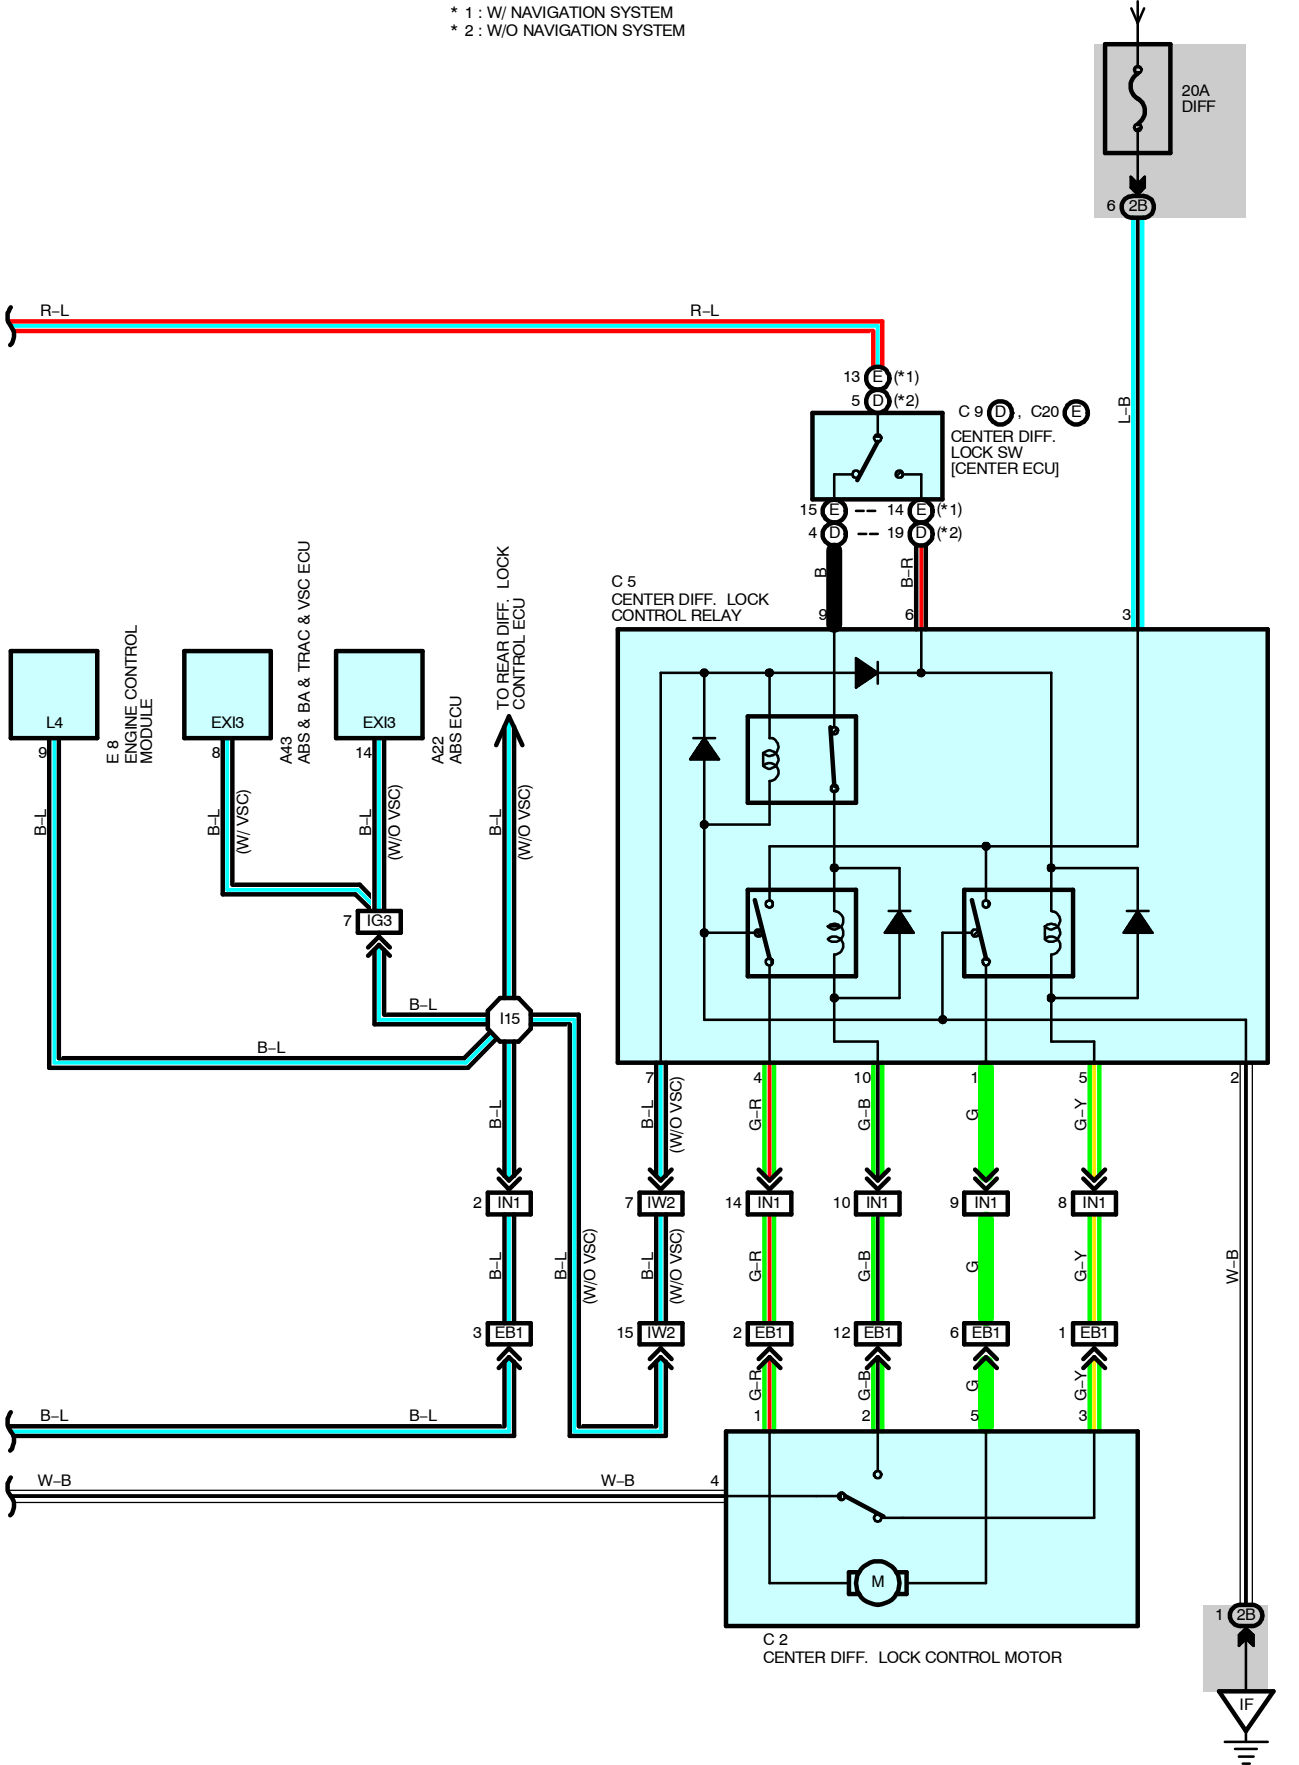

# CENTER DIFFERENTIAL LOCK

## SERVICE HINTS

### C5 CENTER DIFF. LOCK CONTROL RELAY

3-GROUND : Approx. 12 volts with ignition SW at **ON** or **ST** position

2-GROUND : Always continuity

## ○ : PARTS LOCATION

| Code | See Page | Code | See Page | Code | See Page |
|------|----------|------|----------|------|----------|
| A22  | 40       | C13  | B 40     | E8   | 40       |
| A43  | 40       | C14  | C 40     | J14  | 41       |
| C2   | 38       | C20  | E 40     | J17  | 41       |
| C5   | 40       | D4   | 38       | J20  | 41       |
| C9   | D 40     | D5   | 38       | J23  | 41       |
| C12  | A 40     | D6   | 38       | P1   | 39       |

## ○ : JUNCTION BLOCK AND WIRE HARNESS CONNECTOR

| Code | See Page | Junction Block and Wire Harness (Connector Location)                     |
|------|----------|--------------------------------------------------------------------------|
| 2B   | 26       | Dash Wire and Cowl Side J/B LH (Left Kick Panel)                         |
| 2D   |          |                                                                          |
| 2P   | 28       | Instrument Panel Integration Wire and Cowl Side J/B LH (Left Kick Panel) |

## □ : CONNECTOR JOINING WIRE HARNESS AND WIRE HARNESS

| Code | See Page | Joining Wire Harness and Wire Harness (Connector Location)               |
|------|----------|--------------------------------------------------------------------------|
| EB1  | 46       | Engine Wire and Transmission Wire (On the Transmission)                  |
| IG3  | 50       | Engine Room No.2 Wire and Dash Wire (Behind the Combination Meter)       |
| IN1  | 52       | Engine Wire and Dash Wire (Behind the Glove Box)                         |
| IW2  | 54       | Engine Room No.2 Wire and Dash Wire (Behind the Glove Box)               |
| IX1  | 54       | Instrument Panel Integration Wire and Engine Wire (Behind the Glove Box) |

## ▽ : GROUND POINTS

| Code | See Page | Ground Points Location           |
|------|----------|----------------------------------|
| EC   | 46       | Rear Bank of Right Cylinder Head |
| IF   | 48       | Set Bolt of Cowl Side J/B LH     |

## ○ : SPLICE POINTS

| Code | See Page | Wire Harness with Splice Points | Code | See Page | Wire Harness with Splice Points |
|------|----------|---------------------------------|------|----------|---------------------------------|
| E4   | 46       | Engine Room No.2 Wire           | I5   | 50       | Dash Wire                       |
| E9   | 46       | Transmission Wire               | I15  |          |                                 |