 


## 226



## SERVICE HINTS

### R5 REMOTE CONTROL MIRROR SW

- 7-8 : Continuity with the operation SW at **UP** or **LEFT** position
- 4-7 : Continuity with the operation SW at **RIGHT** or **DOWN** position
- 4-9 : Continuity with the operation SW at **LEFT** position and the select SW at **LH** position
- 4-3 : Continuity with the operation SW at **UP** position and the select SW at **LH** position
- 8-10 : Continuity with the operation SW at **RIGHT** position and the select SW at **RH** position
- 2-8 : Continuity with the operation SW at **DOWN** position and the select SW at **RH** position
- 4-GROUND : Approx. **12** volts with ignition SW at **ACC** or **ON** position
- 8-GROUND : Always continuity

### : PARTS LOCATION

| Code | See Page           | Code | See Page           | Code | See Page           |
|------|--------------------|------|--------------------|------|--------------------|
| J13  | <a href="#">41</a> | J20  | <a href="#">41</a> | R32  | <a href="#">43</a> |
| J19  | <a href="#">41</a> | R5   | <a href="#">41</a> | R33  | <a href="#">43</a> |

### : JUNCTION BLOCK AND WIRE HARNESS CONNECTOR

| Code | See Page           | Junction Block and Wire Harness (Connector Location)                      |
|------|--------------------|---------------------------------------------------------------------------|
| 2M   | <a href="#">26</a> | Front Door LH Wire and Cowl Side J/B LH (Left Kick Panel)                 |
| 2P   | <a href="#">28</a> | Instrument Panel Integration Wire and Cowl Side J/B LH (Left Kick Panel)  |
| 3G   | <a href="#">32</a> | Front Door RH Wire and Cowl Side J/B RH (Right Kick Panel)                |
| 3I   | <a href="#">32</a> | Instrument Panel Integration Wire and Cowl Side J/B RH (Right Kick Panel) |

### : CONNECTOR JOINING WIRE HARNESS AND WIRE HARNESS

| Code | See Page           | Joining Wire Harness and Wire Harness (Connector Location)                                  |
|------|--------------------|---------------------------------------------------------------------------------------------|
| IF1  | <a href="#">48</a> | Instrument Panel Integration Wire and Instrument Panel Wire (Left Side of Instrument Panel) |
| IF2  |                    |                                                                                             |

### : GROUND POINTS

| Code | See Page           | Ground Points Location       |
|------|--------------------|------------------------------|
| IF   | <a href="#">48</a> | Set Bolt of Cowl Side J/B LH |