 


230



SERVICE HINTS

S3 SEAT HEATER SW (DRIVER'S SEAT)

4-GROUND : Approx. 12 volts with ignition SW at **ON** or **ST** position

6-GROUND : Always continuity

S4 SEAT HEATER SW (FRONT PASSENGER'S SEAT)

4-GROUND : Approx. 12 volts with ignition SW at **ON** or **ST** position

6-GROUND : Always continuity

: PARTS LOCATION

Code	See Page	Code	See Page	Code	See Page
S3	41	S9	44		
S4	41	S10	44		

: JUNCTION BLOCK AND WIRE HARNESS CONNECTOR

Code	See Page	Junction Block and Wire Harness (Connector Location)
1D	23	Engine Room No.2 Wire and Engine Room J/B (Engine Compartment Left)
2B	26	Dash Wire and Cowl Side J/B LH (Left Kick Panel)

: CONNECTOR JOINING WIRE HARNESS AND WIRE HARNESS

Code	See Page	Joining Wire Harness and Wire Harness (Connector Location)
ID1	48	Dash Wire and Floor Wire (Left Kick Panel)
IG2	50	Engine Room No.2 Wire and Dash Wire (Behind the Combination Meter)
IK1	50	Console Box Wire and Dash Wire (Left Side of Front Console)
IV1	54	Dash Wire and Floor No.2 Wire (Behind the Glove Box)
BM1	60	Floor Wire and Front Seat LH Wire (Front Side Under the Driver's Seat)
BO1	60	Floor No.2 Wire and Front Seat RH Wire (Front Side Under the Front Passenger's Seat)

: GROUND POINTS

Code	See Page	Ground Points Location
IF	48	Set Bolt of Cowl Side J/B LH
BJ	56	Under the Driver's Seat
BK	56	Front Side Under the Front Passenger's Seat

: SPLICE POINTS

Code	See Page	Wire Harness with Splice Points	Code	See Page	Wire Harness with Splice Points
I12	50	Console Box Wire	I13	50	Console Box Wire