


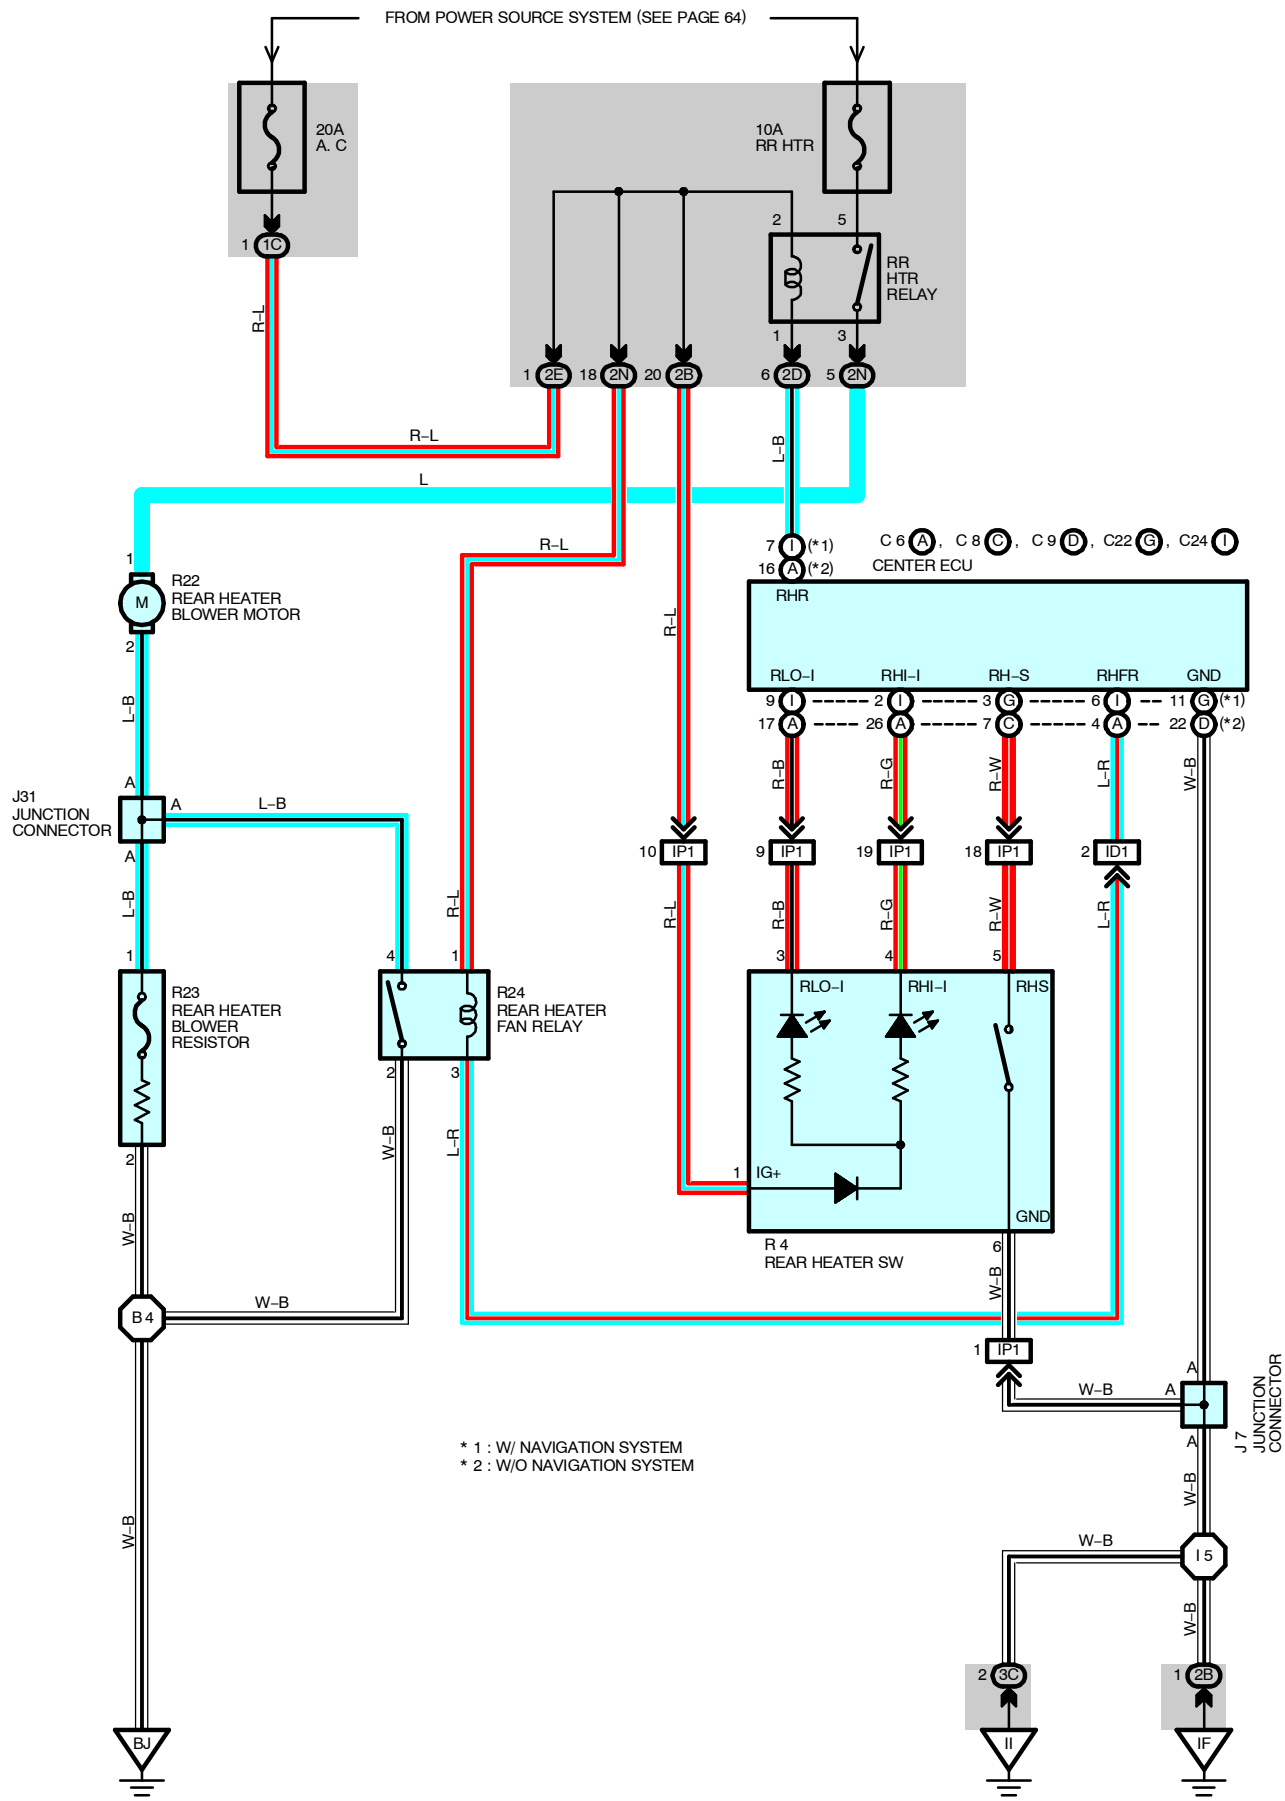

SERVICE HINTS

RR HTR RELAY

5-3 : Closed with the ignition SW at **ON** position and the rear heater SW on

R4 REAR HEATER SW

1-GROUND : Approx. **12** volts with ignition SW at **ON** or **ST** position

5-6 : Continuity with rear heater SW at **LO** or **HI** position

6-GROUND : Always continuity

○ : PARTS LOCATION

Code	See Page	Code	See Page	Code	See Page
C6	A	40	C24	I	40
C8	C	40	J7		41
C9	D	40	J31		42
C22	G	40	R4		41
				R22	43
				R23	43
				R24	43

□ : CONNECTOR JOINING WIRE HARNESS AND WIRE HARNESS

Code	See Page	Joining Wire Harness and Wire Harness (Connector Location)
ID1	48	Dash Wire and Floor Wire (Left Kick Panel)
IP1	52	Rear Console Box Wire and Dash Wire (Right Side of Rear Console)

▽ : GROUND POINTS

Code	See Page	Ground Points Location
IF	48	Set Bolt of Cowl Side J/B LH
II	48	Set Bolt of Cowl Side J/B RH
BJ	56	Under the Driver's Seat

○ : SPLICE POINTS

Code	See Page	Wire Harness with Splice Points	Code	See Page	Wire Harness with Splice Points
I5	50	Dash Wire	B4	58	Floor Wire