


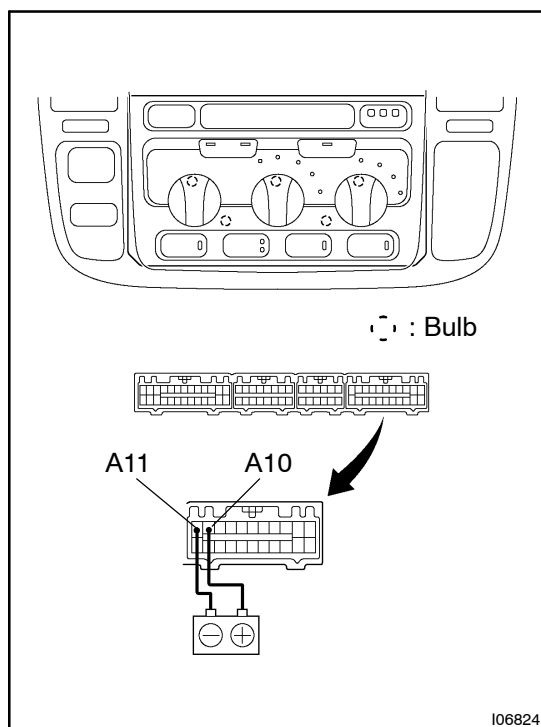

INSPECTION


1. w/o Navigation system:

INSPECT ILLUMINATION OPERATION

- (a) Connect the positive (+) lead from the battery to terminal A-10 and negative (-) lead to terminal A-11 then check that the illuminations lights up.

If operation is not as specified, check the faulty bulb.


- (b) Remove the bulb (See page [AC-108](#)).

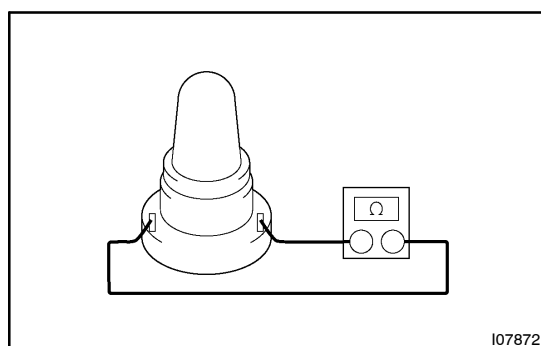

- (c) Apply the tester as shown in the illustration to the test for continuity.

If continuity exists, replace the heater control.

If no continuity exists, replace the bulb.

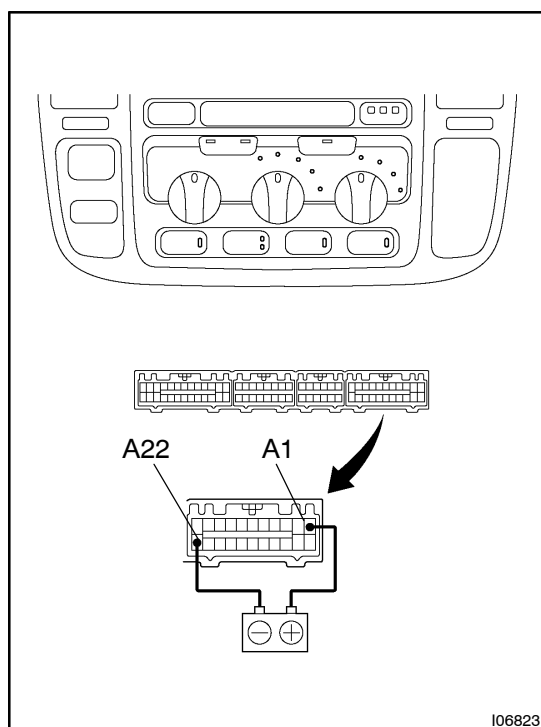


2. w/o Navigation system:

INSPECT INDICATORS OPERATION

- (a) Connect the positive (+) lead from the battery to terminal A-1 and negative (-) lead to terminal A-22.
- (b) Check that the indicators light up while operate the switches.

If operation is not as specified, replace the heater control.


3. INSPECT A/C CONTROL ASSEMBLY CIRCUIT (See page [DI-902](#))

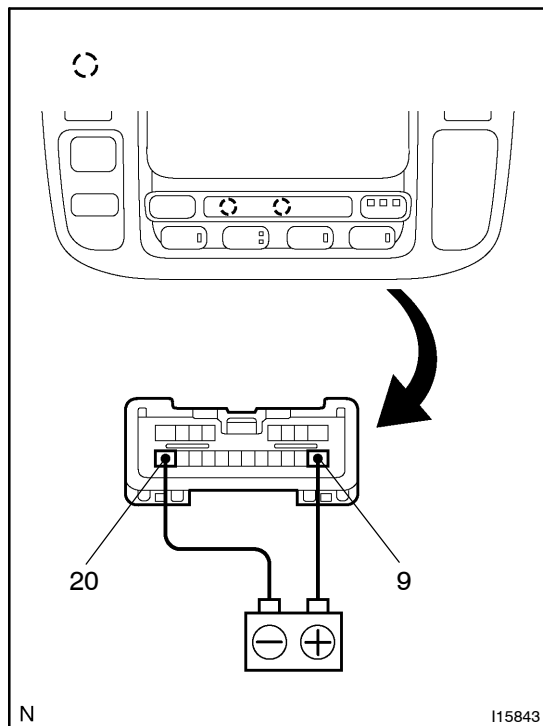**4. w/ Navigation system:****INSPECT ILLUMINATION OPERATION**

- (a) Connect the positive (+) lead from the battery to terminal 9 and negative (-) lead to terminal 20 then check that the illuminations lights up.

If operation is not as specified, check the faulty bulb.


- (b) Remove the bulb (See page [AC-108](#)).

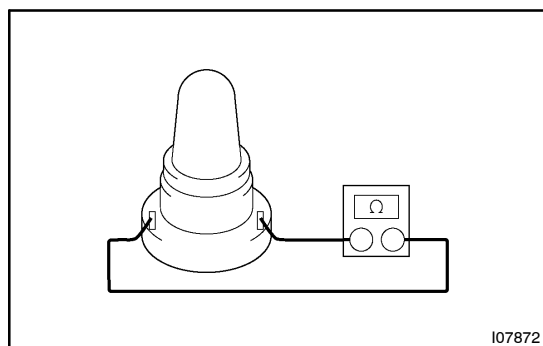

- (c) Apply the tester as shown in the illustration to the test for continuity.

If continuity exists, replace the heater control.

If no continuity exists, replace the bulb.

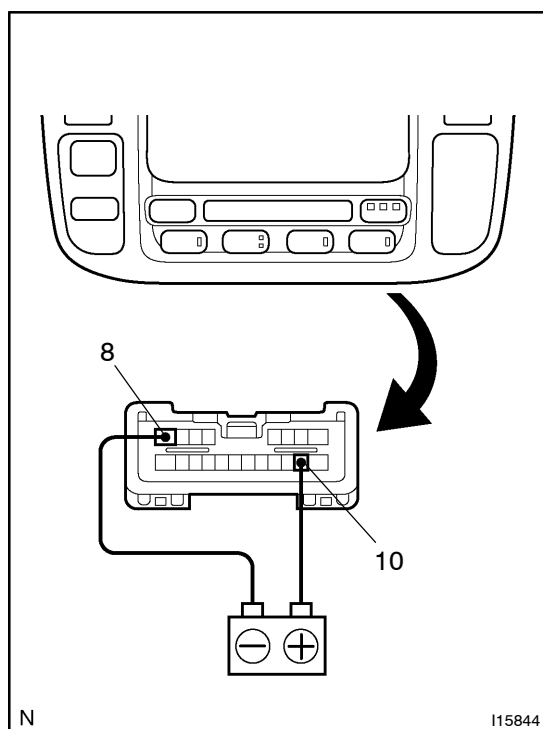**5. w/o Navigation system:****INSPECT INDICATORS OPERATION**

- (a) Connect the positive (+) lead from the battery to terminal 10 and negative (-) lead to terminal 8.
- (b) Check that the indicators light up while operate the switches.

If operation is not as specified, replace the heater control.

6. INSPECT A/C CONTROL ASSEMBLY CIRCUIT
 (See page [DI-902](#))