


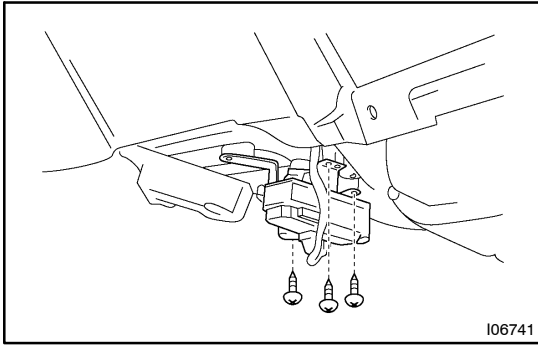

AIR MIX SERVOMOTOR (for Front A/C)

AC1LK-05

INSPECTION

1. **REMOVE AIR MIX SERVOMOTOR**
 - (a) Disconnect the connector.
 - (b) Remove the 2 screws and air mix servomotor.
2. **INSPECT AIR MIX SERVOMOTOR OPERATION**
(See page [DI-952](#))
3. **INSPECT AIR MIX DAMPER POSITION SENSOR**
(See page [DI-942](#))
4. **INSTALL SERVOMOTOR**
 - (a) Install the servomotor with the 3 screws.
 - (b) Connect the connector.