


AIR OUTLET SERVOMOTOR INSPECTION


AC1LL-04

1. REMOVE LOWER NO. 1 PANEL(See page AC-86)

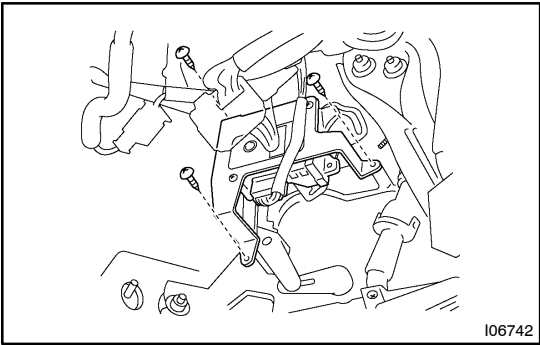

2. REMOVE AIR OUTLET SERVOMOTOR

- (a) Disconnect the connector.
(b) Remove the 3 screws and air outlet servomotor.

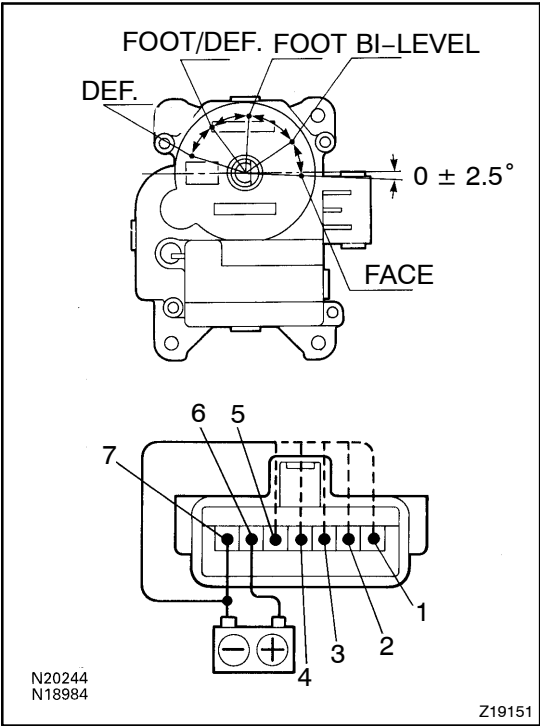

3. INSPECT AIR OUTLET SERVOMOTOR OPERATION

- (a) Connect the positive (+) lead from the battery to terminal 6 and the negative (-) lead to terminal 7.
(b) Connect the negative (-) lead from the battery to each terminal and check that the shaft rotates at each position, as shown in the chart.

Connected terminal	Position
5	DEF.
4	FOOT/DEF.
3	FOOT
2	B/L
1	FACE

If operation is not as specified, replace the servomotor.

4. INSTALL AIR OUTLET SERVOMOTOR

- (a) Install the air outlet servomotor with the 3 screws.
(b) Connect the connector.