


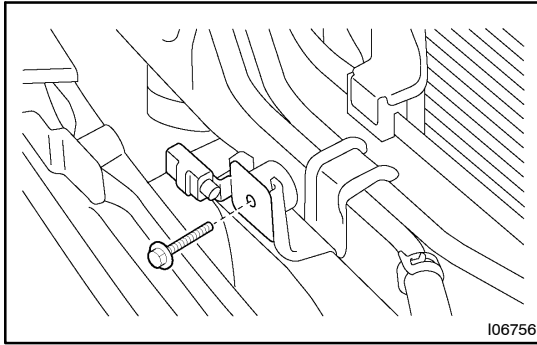

## AMBIENT TEMPERATURE SENSOR INSPECTION

AC1LP-03

- 1. REMOVE AMBIENT TEMPERATURE SENSOR**
  - (a) Disconnect the connector.
  - (b) Remove the bolt and the ambient temperature sensor.
- 2. INSPECT AMBIENT TEMPERATURE SENSOR CIRCUIT (See page [DI-914](#))**
- 3. INSTALL AMBIENT TEMPERATURE SENSOR**
  - (a) Install the ambient temperature sensor to condenser upper bracket.
  - (b) Connect the connector.