

## INSPECTION

1. INSPECT AIR INLET SERVOMOTOR OPERATION (See page [DI-955](#))
2. INSPECT AIR INLET DAMPER POSITION SENSOR CIRCUIT (See page [DI-945](#))