


REMOVAL

1. REMOVE FRONT COOLING UNIT (See page [AC-25](#))

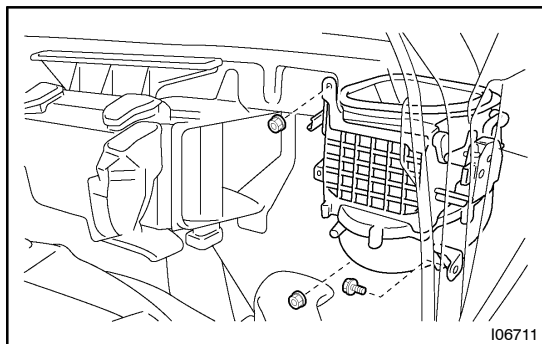

2. REMOVE BLOWER UNIT

- (a) Disconnect the connectors.
- (b) Remove the bolt, 2 nuts and blower unit.