



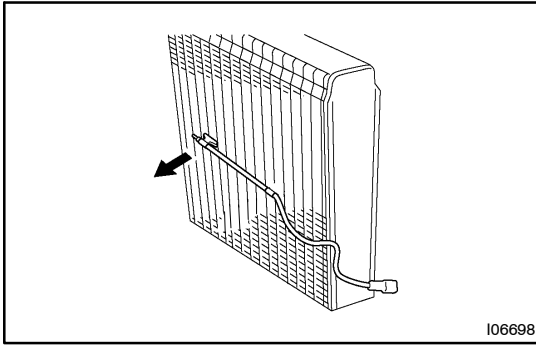

DISASSEMBLY

1. PULL OUT EVAPORATOR TEMPERATURE SENSOR

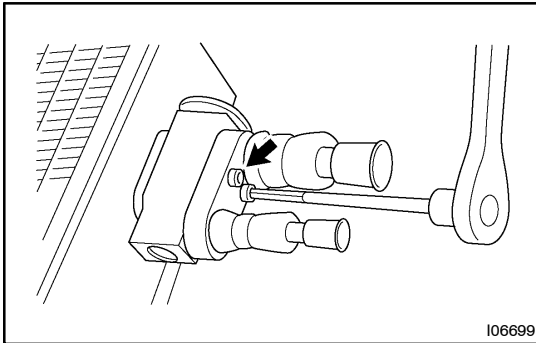

2. REMOVE EXPANSION VALVE

Using a hexagon wrench (5.0mm, 0.20 in.), remove the 2 bolts and separate the expansion valve and evaporator.

Torque: 3.4 N·m (35 kgf·cm, 30 in.·lbf)

NOTICE:

Cap the open fittings immediately to keep moisture or dirt out of the system.

HINT:

At the time of reassembly, please refer to the following item.

- Lubricate 4 new O-rings with compressor oil and install them to the valve.
- If evaporator is replaced, add compressor oil to the evaporator.

Add: 40 cc (1.4 fl.oz.)

Compressor oil: ND-OIL8 or equivalent