



HEATER MAIN RELAY INSPECTION

AC1LV-03


1. REMOVE FRONT DOOR SCUFF PLATE RH
2. REMOVE COWL SIDE TRIM RH

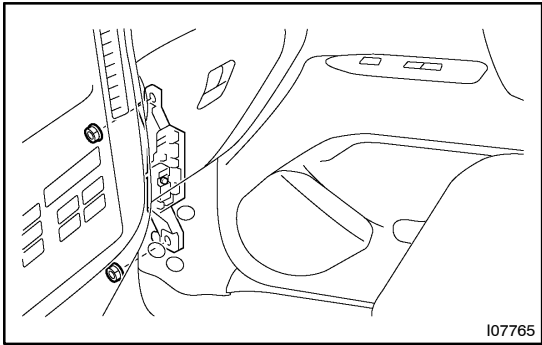

3. REMOVE HEATER MAIN RELAY
 - (a) Remove the 2 No. 3 junction block set nuts.
 - (b) Loosen the bolt and disconnect the connector.
 - (c) Pull the junction block.

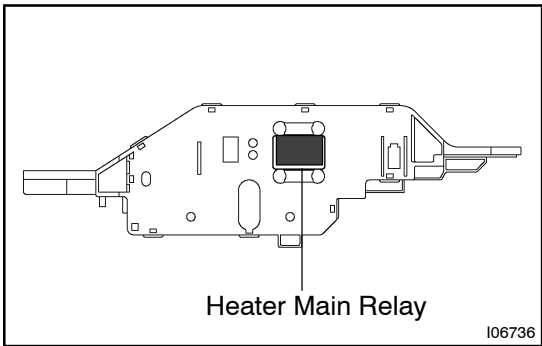

- (d) Remove the heater main relay from junction block.

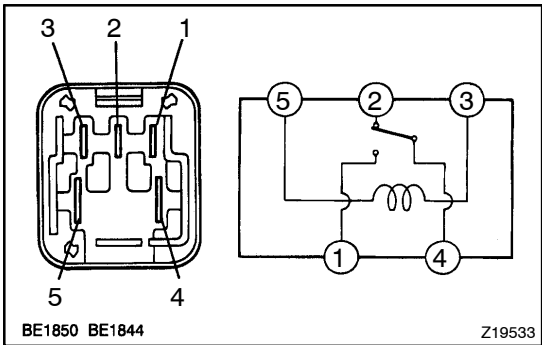

4. INSPECT HEATER MAIN RELAY CONTINUITY

Condition	Tester connection	Specified condition
Constant	2 - 4 3 - 5	Continuity
Apply B+ between terminals 3 and 5.	1 - 2	Continuity

If continuity is not as specified, replace the relay.

5. INSTALL HEATER MAIN RELAY TO NO. 3 JUNCTION BLOCK
6. INSTALL 2 NO. 3 JUNCTION BLOCK SET NUTS
7. INSTALL COWL SIDE TRIM RH
8. INSTALL FRONT DOOR SCUFF PLATE RH