


POWER TRANSISTOR (for Rear Heater)

AC1LJ-03

INSPECTION

1. REMOVE FRONT SEATS
2. REMOVE REAR CONSOLE BOX
3. REMOVE FRONT CONSOLE BOX COVER
4. REMOVE LOWER CENTER CLUSTER FINISH PANEL
5. REMOVE FRONT DOOR SCUFF PLATES
6. REMOVE COWL SIDE TRIMS
7. REMOVE REAR DOOR SCUFF PATES
8. REMOVE CENTER PILLAR GARNISHES
9. REMOVE POWER TRANSISTOR
- (a) Slide the floor carpet backward.

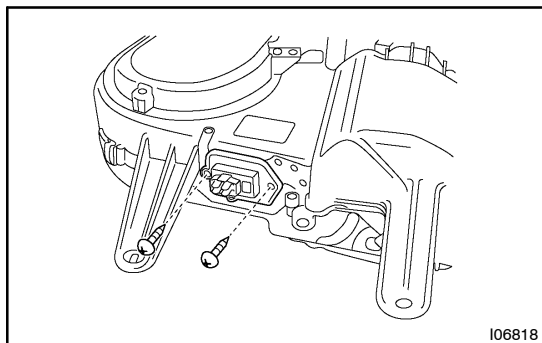

- (b) Disconnect the connector.
- (c) Remove the 2 screws and power transistor.
10. **INSPECT POWER TRANSISTOR**
Check the power transistor in the same way as for "POWER TRANSISTOR (For Rear Cooler)" on page [AC-83](#).
11. **INSTALL POWER TRANSISTOR**
12. **INSTALL CENTER PILLAR GARNISHES**
13. **INSTALL REAR DOOR SCUFF PATES**
14. **INSTALL COWL SIDE TRIMS**
15. **INSTALL FRONT DOOR SCUFF PLATES**
16. **INSTALL LOWER CENTER CLUSTER FINISH PANEL**
17. **INSTALL FRONT CONSOLE BOX COVER**
18. **INSTALL REAR CONSOLE BOX**
19. **INSTALL FRONT SEATS**