

REMOVAL

1. DISCHARGE REFRIGERANT FROM REFRIGERATION SYSTEM

HINT:

At the time of installation, please refer to the following item.

Evacuate air from refrigeration system.

Charge system with refrigerant and inspect for leakage of refrigerant.

Specified amount:


Single A/C:

650 ± 50 g (22.93 ± 1.76 oz.)

Dual A/C:

1,050 ± 50 g (37.03 ± 1.76 oz.)

2. REMOVE RADIATOR GRILL

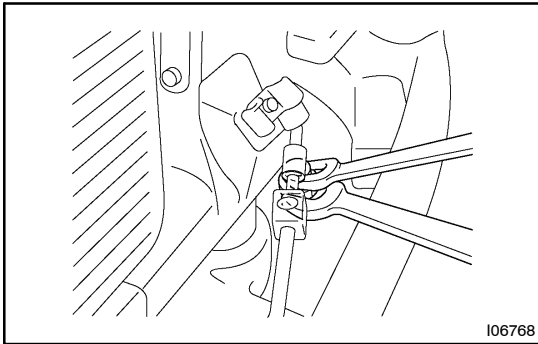

3. REMOVE PRESSURE SWITCH FROM LIQUID TUBE

Disconnect the connector and remove the pressure switch.

Torque: 10 N·m (100 kgf·cm, 7 ft·lbf)

HINT:

- Lock the switch mount on the tube with an open end wrench, being careful not to deform the tube, and remove the switch.
- At the time of installation, please refer to the following item.

Lubricate a new O-ring with compressor oil and install the switch.