


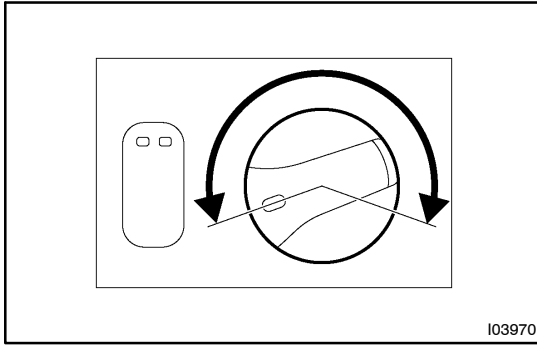

REAR HEATER CONTROL ASSEMBLY (for Rear Heater) ON-VEHICLE INSPECTION

AC1JM-03

INSPECT HEATER CONTROL DIAL OPERATION

Move the control dial to left and right then check that click sound can be heard and recoil is felt.

If click sound can not be heard or recoil is felt, adjust the control cable or check control cable and heater control assembly.