


REMOVAL

1. **REMOVE REAR CONSOLE END PANEL**
(See page [BO-92](#))

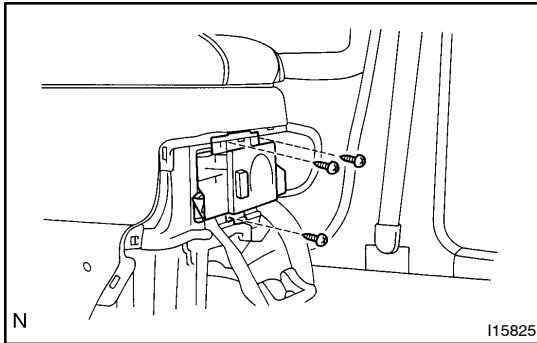

2. **REMOVE HEATER CONTROL ASSEMBLY**
 - (a) Turn the heater control dial to "MAX. WARM" position.
 - (b) Remove the 3 screws and heater control assembly then disconnect the connector and control cable.