


REMOVAL

1. DRAIN ENGINE COOLANT FROM RADIATOR


HINT:

It is not necessary to drain out all the coolant.

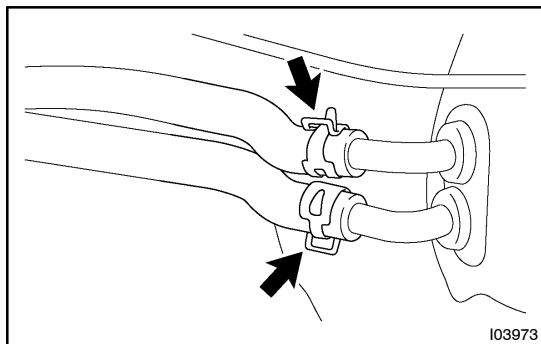

2. DISCONNECT WATER HOSES FROM HEATER RADIATOR PIPES

- Using pliers, grip the claws of the clip and slide the clip along the hose
- Disconnect the water hoses

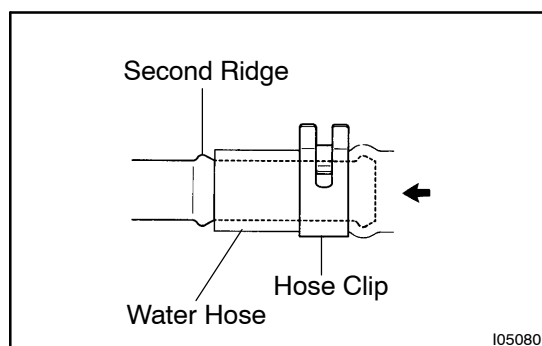


HINT:

At the time of installation, please refer to the following item.


Push the water hose on to the heater radiator pipe as far as the second ridge on the pipe.

- REMOVE FRONT SEATS
- REMOVE REAR CONSOLE BOX
- REMOVE FRONT CONSOLE BOX COVER
- REMOVE LOWER CENTER CLUSTER FINISH PANEL
- REMOVE FRONT DOOR SCUFF PLATE
- REMOVE COWL SIDE TRIMS
- REMOVE REAR DOOR SCUFF PLATES
- REMOVE CENTER PILLAR GARNISHES
- SLIDE FLOOR CARPET BACKWARD

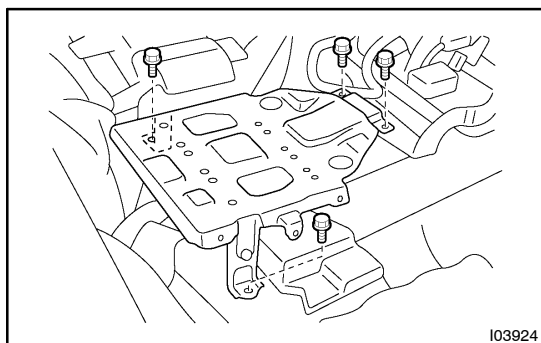


12. REMOVE COOLER BRACKET

Remove the 4 bolts and cooler bracket.

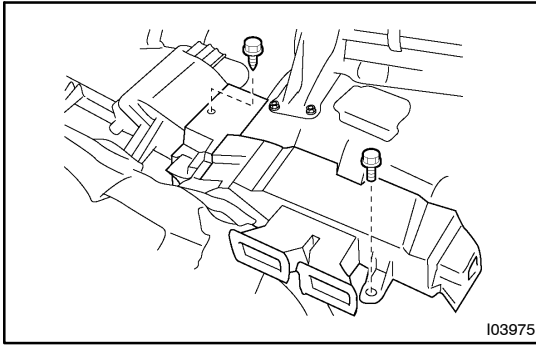**13. REMOVE REAR HEATER DUCT**

Remove the bolt, screw and rear heater duct.

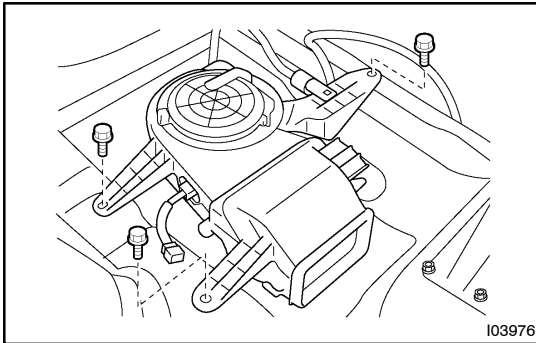**14. REMOVE REAR HEATER UNIT**

- (a) Disconnect the connector.
- (b) Remove the 3 bolts and rear heater unit.