



LOCATION

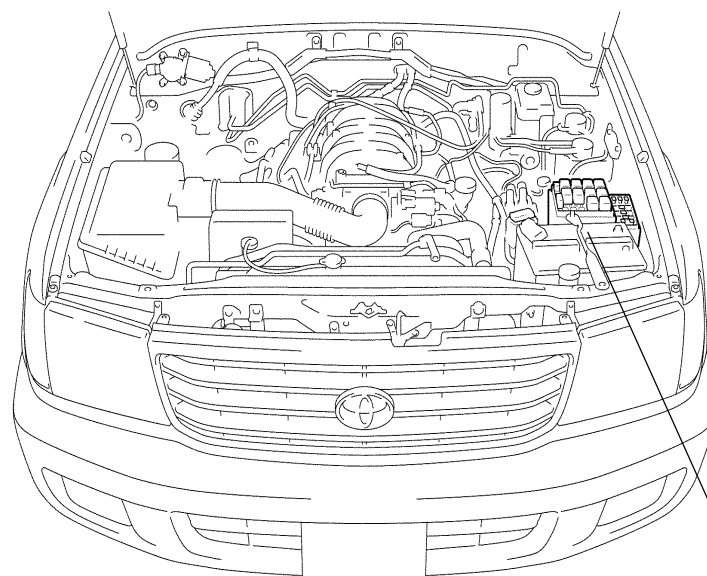

Engine Room Junction Block
● ECU-B Fuse

Grage Door Opener Switch

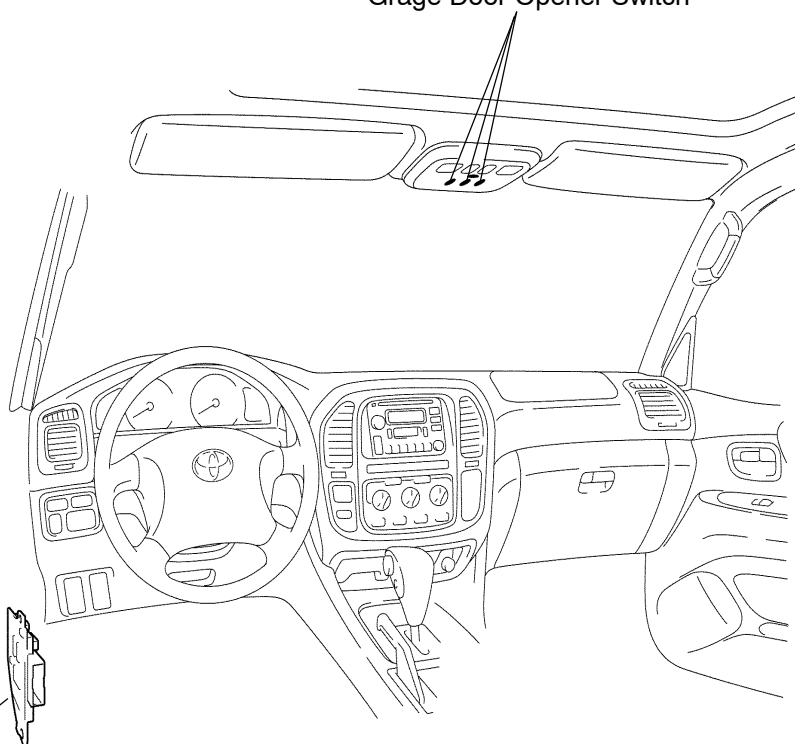

Driver Side Junction Block
● DOME Fuse