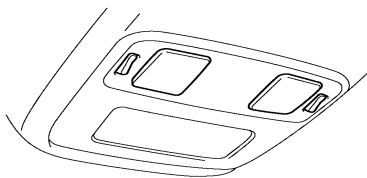
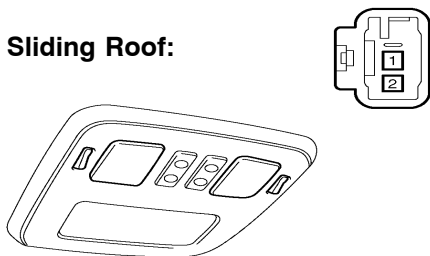


w/o Sliding Roof:**w/ Sliding Roof:**



I10010

INSPECTION

1. INSPECT FRONT PERSONAL LIGHT SWITCH CONTINUITY

Switch position	Tester connection	Specified condition
OFF	-	No continuity
ON	1 - 2	Continuity

 If continuity is not as specified, replace the light assembly or bulb.

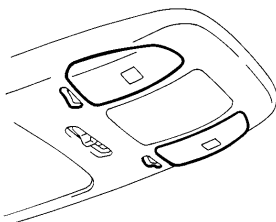
w/o Sliding Roof:

I06429

2. w/o Sliding roof: INSPECT REAR PERSONAL LIGHT SWITCH CONTINUITY

Switch position	Tester connection	Specified condition
OFF	-	No continuity
ON	1 - 3	Continuity

If continuity is not as specified, replace the light assembly or bulb.


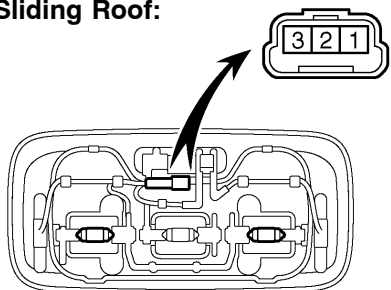
w/ Sliding Roof:

I06421

3. w/o Sliding roof: INSPECT REAR PERSONAL LIGHT SWITCH CONTINUITY

Switch position	Tester connection	Specified condition
OFF	-	No continuity
ON	1 - 3	Continuity

 If continuity is not as specified, replace the light assembly or bulb.

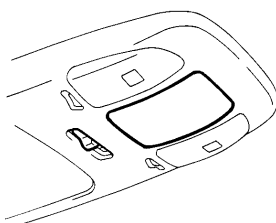w/o Sliding Roof:


I06430

4. w/o Sliding roof: INSPECT ROOM LIGHT SWITCH CONTINUITY

Switch position	Tester connection	Specified condition
Room Light Switch OFF	-	No continuity
Room Light Switch DOOR	2 - 3	Continuity
Room Light Switch ON	1 - 3	Continuity

If continuity is not as specified, replace the light assembly or bulb.

w/ Sliding Roof:

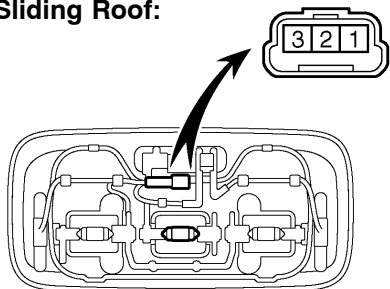


I06422

5. w/ Sliding roof: INSPECT ROOM LIGHT SWITCH CONTINUITY

Switch position	Tester connection	Specified condition
Room Light Switch OFF	-	No continuity
Room Light Switch DOOR	2 - 3	Continuity
Room Light Switch ON	1 - 3	Continuity


If continuity is not as specified, replace the light assembly or bulb.

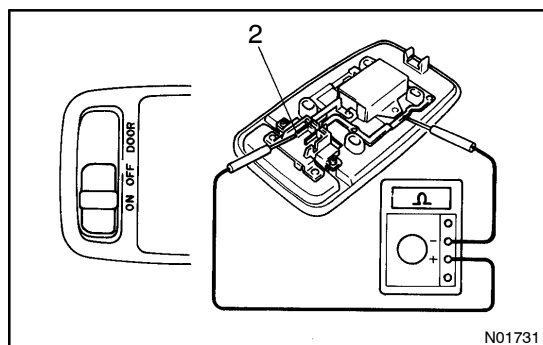

N01731

6. INSPECT REAR ROOM LIGHT SWITCH CONTINUITY


- Disconnect the connector from room light assembly.
- Turn the room light switch ON, check that continuity exists between terminal 2 and body ground.

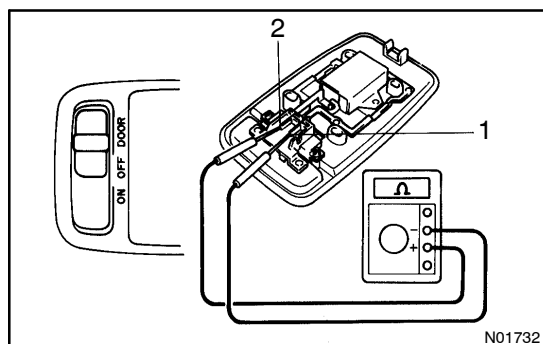

N01732

- Turn the room light switch DOOR, check that continuity exists between terminal 1 and 2.

If operation is not as specified, replace the light assembly or bulb.

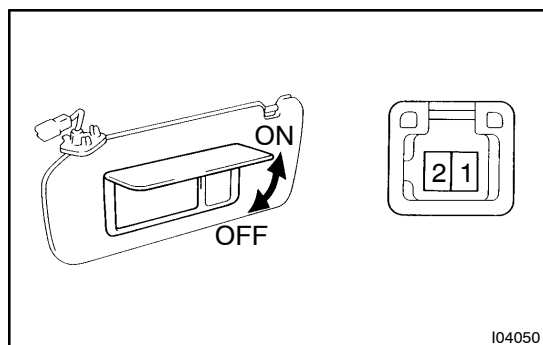


I04050

7. INSPECT VANITY LIGHT CONTINUITY

Switch position	Tester connection	Specified condition
OFF (closed)	-	No continuity
ON (opened)	1 - 2	Continuity

If continuity is not as specified, replace the vanity light assembly or bulb.

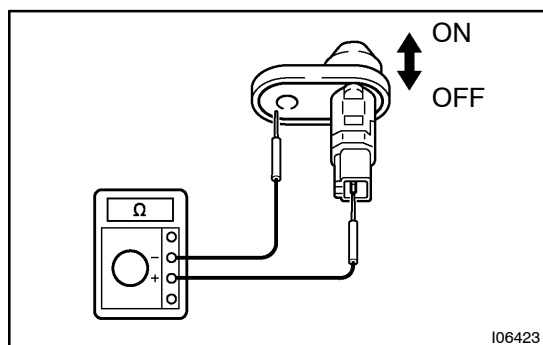


I06423

8. INSPECT DOOR COURTESY SWITCH CONTINUITY

- Check that continuity exists between terminal and switch body with the switch ON (switch pin released).
- Check that no continuity exists between terminal and switch body with the switch OFF (switch pin pushed).


If continuity is not as specified, replace the switch.

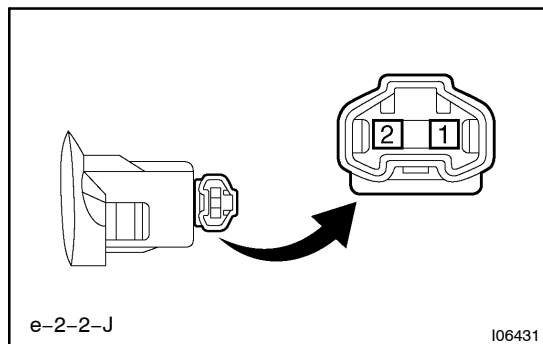

9. INSPECT DOOR COURTESY LIGHT CONTINUITY

Using an ohmmeter, check that continuity exists between terminals.


If continuity is not as specified, replace the light assembly or bulb.

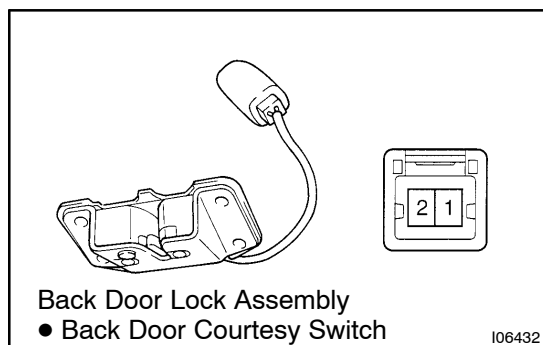

10. INSPECT BACK DOOR COURTESY SWITCH CONTINUITY

Switch position	Tester connection	Specified condition
OFF (closed)	–	No continuity
ON (opened)	1 – 2	Continuity


If continuity is not as specified, replace the back door lock assembly.

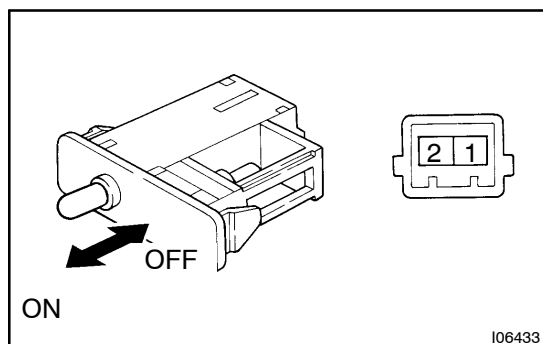

11. INSPECT GLOVE COMPARTMENT DOOR COURTESY SWITCH CONTINUITY

Switch position	Tester connection	Specified condition
OFF (closed)	–	No continuity
ON (opened)	1 – 2	Continuity

If continuity is not as specified, replace the switch.

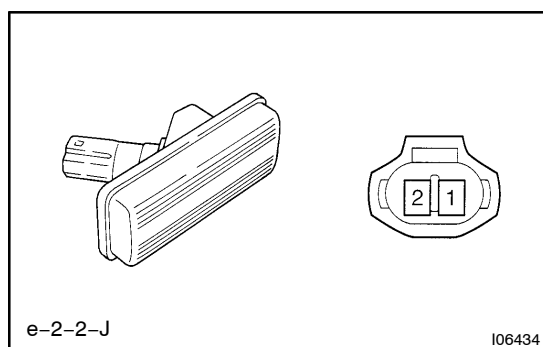

12. INSPECT LICENCE PLATE LIGHT CONTINUITY

Using an ohmmeter, check that continuity exists between terminals.

If continuity is not as specified, replace the light assembly or bulb.