


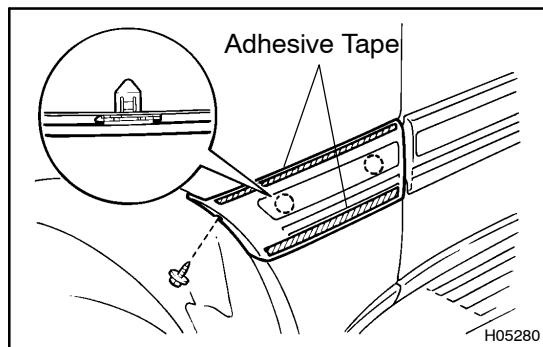

REMOVAL

1. REMOVE OUTSIDE FRONT FENDER MOULDING

- Remove the screw.
- Using a heat light, heat the moulding to 40 – 60 °C (104 – 140 °F).

NOTICE:

Do not heat the moulding excessively.


- Cut the adhesive tape with a knife.

NOTICE:

- If reusing the moulding, take care not to damage the moulding.
 - Do not damage the body.
- Using a screwdriver, remove the moulding.

HINT:

Tape the screwdriver tip before use.

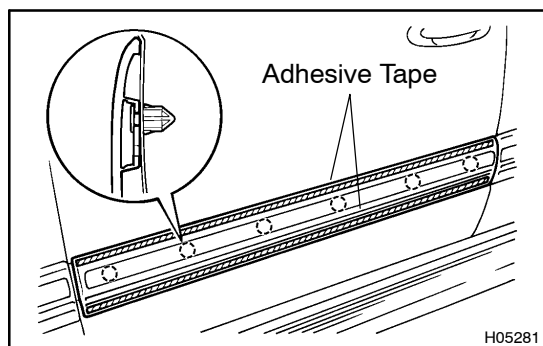

2. REMOVE OUTSIDE FRONT DOOR MOULDING

- Using a heat light, heat the moulding to 40 – 60 °C (104 – 140 °F).

NOTICE:

Do not heat the moulding excessively.


- Cut the adhesive tape with a knife.

NOTICE:

- If reusing the moulding, take care not to damage the moulding.
 - Do not damage the body.
- Using a screwdriver, remove the moulding.

HINT:

Tape the screwdriver tip before use.

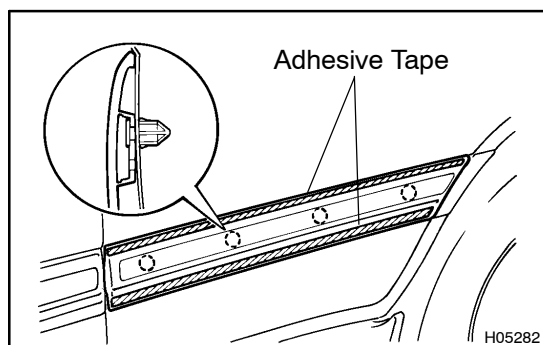

3. REMOVE OUTSIDE REAR DOOR MOULDING

- Using a heat light, heat the moulding to 40 – 60 °C (104 – 140 °F).

NOTICE:

Do not heat the moulding excessively.

- Cut the adhesive tape with a knife.


NOTICE:

- If reusing the moulding, take care not to damage the moulding.
- Do not damage the body.

(c) Using a screwdriver, remove the moulding.

HINT:

Tape the screwdriver tip before use.

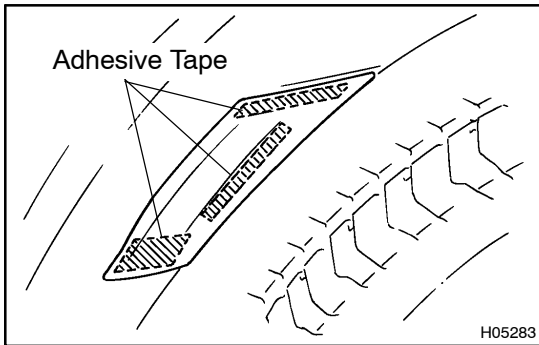

4. REMOVE UPPER REAR OUTSIDE REAR DOOR MOULDING

(a) Using a heat light, heat the moulding to 40 – 60 °C (104 – 140 °F).

NOTICE:

Do not heat the moulding excessively.


(b) Cut the adhesive tape with a knife.

NOTICE:

- If reusing the moulding, take care not to damage the moulding.

- Do not damage the body.

(c) Remove the moulding.

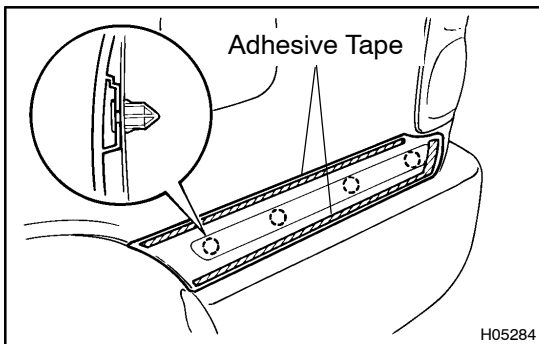

5. REMOVE OUTSIDE QUARTER MOULDING

(a) Using a heat light, heat the moulding to 40 – 60 °C (104 – 140 °F).

NOTICE:

Do not heat the moulding excessively.

(b) Cut the adhesive tape with a knife.

NOTICE:

- If reusing the moulding, take care not to damage the moulding.

- Do not damage the body.

(c) Using a screwdriver, remove the moulding.

HINT:

Tape the screwdriver tip before use.