

DISASSEMBLY

1. REMOVE NO. 2 SIDE DEFROSTER NOZZLE DUCT
 2. REMOVE NO. 1 SIDE DEFROSTER NOZZLE DUCT
 3. REMOVE DEFROSTER NOZZLE
 4. REMOVE CENTER BRACKET
 5. REMOVE NO. 1 HEATER TO REGISTER DUCT
 6. REMOVE INSTRUMENT PANEL WIRE HARNESS
 7. REMOVE NO. 5 HEATER TO REGISTER DUCT
 8. REMOVE FRONT PASSENGER AIRBAG ASSEMBLY
 - (a) Remove the 2 bolts and straps.
Torque: 6.0 N·m (61 kgf·cm, 53 in·lbf)
 - (b) Remove the 3 nuts and front passenger airbag assembly.
Torque: 6.0 N·m (61 kgf·cm, 53 in·lbf)
- CAUTION:**
- Do not store the front passenger airbag assembly with the airbag deployment side facing down.
 - Never disassemble the front passenger airbag assembly.
- NOTICE:**
- At the time of reassembly, please refer to the following items.
- Pass the straps of the front passenger airbag door through the brackets on the right and left sides securely.
 - Install the straps so that they are not pinched between the airbag and instrument panel.
 - When installing the front passenger airbag assembly, make sure that the straps are not distorted and installed to the brackets securely.
 - Make sure that the front passenger airbag assembly is installed to the specified torque.
 - If the front passenger airbag assembly has been dropped, or there are cracks, dents or other defects in the case or connector, replace the front passenger airbag assembly with a new one.
 - When installing the front passenger airbag assembly, take care that the wiring does not interfere with other parts and is not pinched between other parts.
9. REMOVE NO. 1 REGISTER
 10. REMOVE NO. 4 REGISTER

