


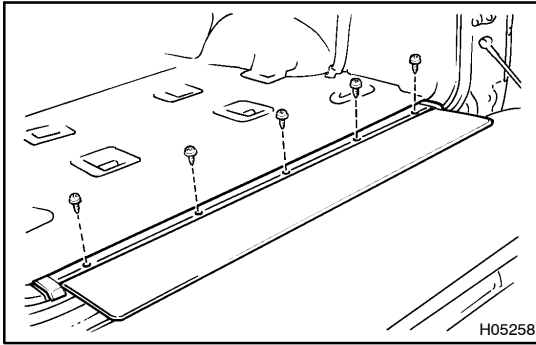


DISASSEMBLY

1. REMOVE REAR MAT SET PLATE

- Remove the 5 screws.
- Using a screwdriver, remove the rear mat set plate.

HINT:

Tape the screwdriver tip before use.

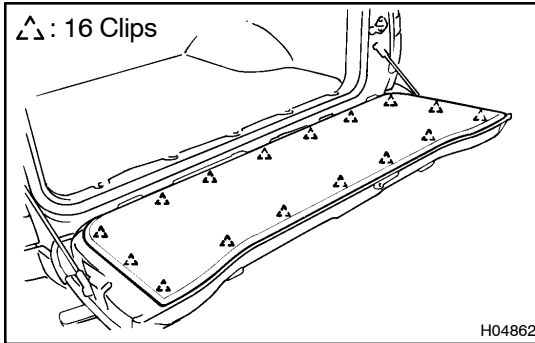


2. REMOVE BACK DOOR TRIM

- Insert a screwdriver between the door and door trim to pry out.

HINT:


Tape the screwdriver tip before use.

- Remove the back door trim.

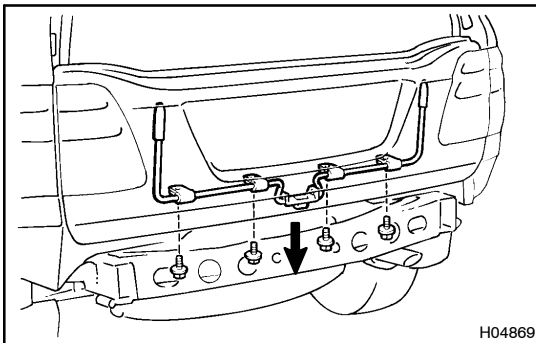


3. REMOVE LOWER TORSION BAR

- Remove the rear bumper (See page [BO-5](#)).
- Remove the 4 bolts and lower torsion bar as shown in the illustration.
- Remove the torsion bar guide.

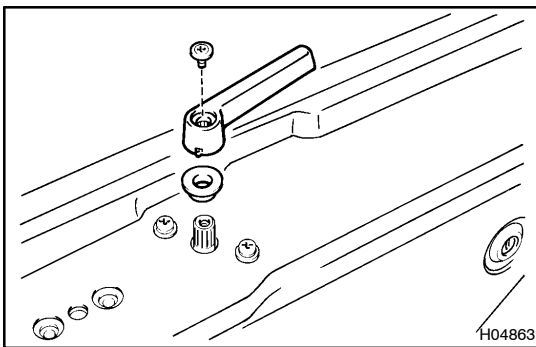

4. REMOVE BACK DOOR INSIDE HANDLE

- Remove the screw and back door inside handle.
- Remove the spacer.

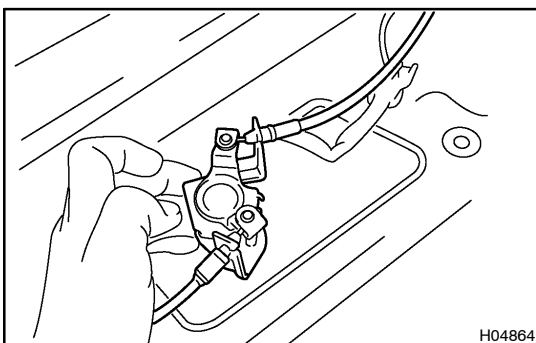


5. REMOVE BACK DOOR LOCK CONTROL

- Remove the 2 screws.
Torque: 5.0 N·m (51 kgf·cm, 44 in·lbf)
- Disconnect the back door lock control cables, then remove the back door control.


6. REMOVE SERVICE HOLE COVERS

NOTICE:

Do not tear the service hole cover.

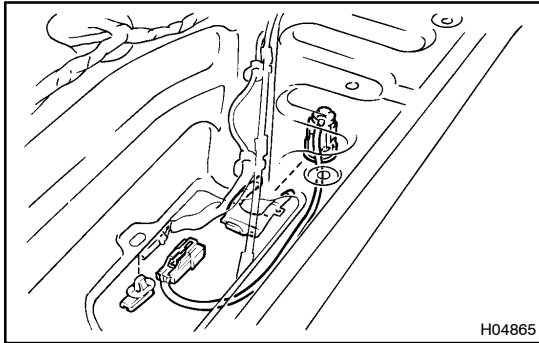**7. REMOVE KEY CYLINDER**


- (a) Disconnect the connector.
- (b) Remove the clip and key cylinder.

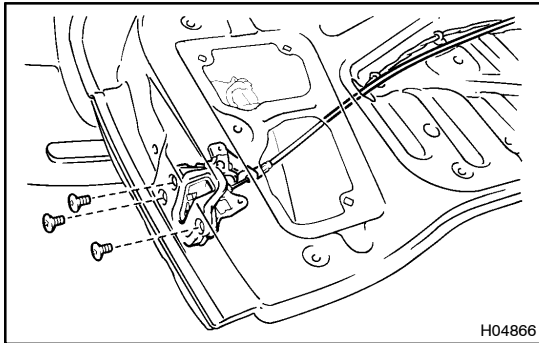**8. REMOVE BACK DOOR LOCK**

- (a) Disconnect the control cable from the clamp.
- (b) Using a torx wrench, remove the 3 screws and back door lock.


Torx wrench: T30 (Part No. 09042-00010 or locally manufactured tool)

Torque: 7.4 N·m (75 kgf·cm, 65 in·lbf)

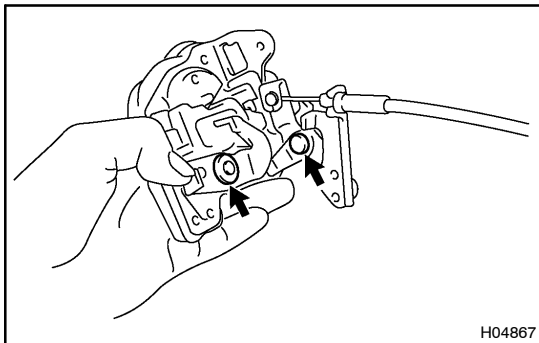**HINT:**

At the time of reassembly, please refer to the following item.
Apply MP grease to the rotating parts of the door lock.

- (c) Employ the same manner described above to the other side.

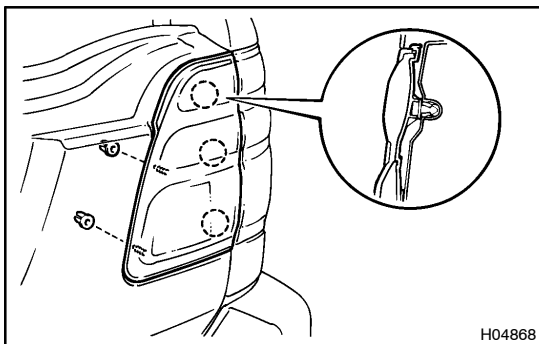
**9. REMOVE REAR LIGHT ASSEMBLY**

- (a) Disconnect the connector.
- (b) Remove the 2 nuts.
- (c) Using a screwdriver, remove the rear light assembly.

HINT:

Tape the screwdriver tip before use.

- (d) Employ the same manner described above to the other side.

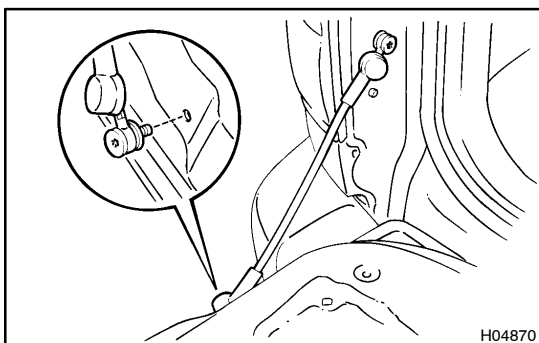**10. REMOVE TAIL GATE STAY**

- (a) Using a torx wrench, remove the 2 screws and tail gate stay.

Torx wrench: T30 (Part No. 09042-00010 or locally manufactured tool)

Torque: 18 N·m (184 kgf·cm, 13 ft·lbf)

- (b) Employ the same manner described above to the other side.