

REMOVAL

REMOVE REAR NO. 1 SEAT

- (a) Fold the seatback down.
- (b) Unlock the seat lock, and swing the whole seat up and forward.
- (c) Using a screwdriver, remove the seat leg covers.

HINT:

Tape the screwdriver tip before use.

- (d) Remove the 4 bolts and rear No. 1 seat.

Torque: 37 N·m (380 kgf·cm, 27 ft·lbf)