

## INSTALLATION

### NOTICE:


- Never use seat belt pretensioner from another vehicle. When replacing parts, replace them with new parts.
- Make sure that the front seat outer belt is installed with the specified torque.
- If the front seat outer belt has been dropped, or there are cracks, dents or other defects in the case or connector, replace the front seat outer belt with a new one.
- When installing the front seat outer belt, take care that the wiring does not interfere with other parts and is not pinched between other parts.

### 1. INSTALL RETRACTOR OF FRONT SEAT OUTER BELT

- (a) Install the retractor of front seat outer belt with the bolt.

**Torque:**

**Upper bolt: 4.9 N·m (50 kgf·cm, 43 in·lbf)**

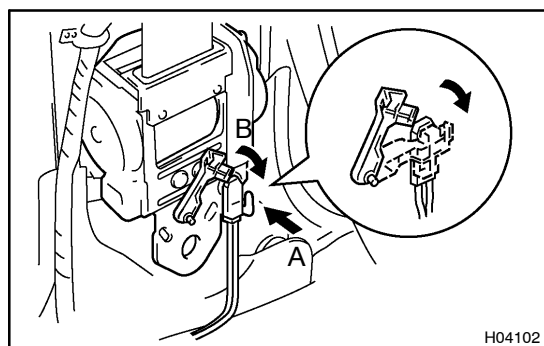


- (b) Connect the pretensioner connector in the order "A" and "B" as shown in the illustration.

### 2. INSTALL FRONT SEAT OUTER BELT SHOULDER ANCHOR

**Torque: 43 N·m (440 kgf·cm, 32 ft·lbf)**

### 3. INSTALL FRONT SEAT OUTER BELT FLOOR ANCHOR

**Torque: 43 N·m (440 kgf·cm, 32 ft·lbf)**

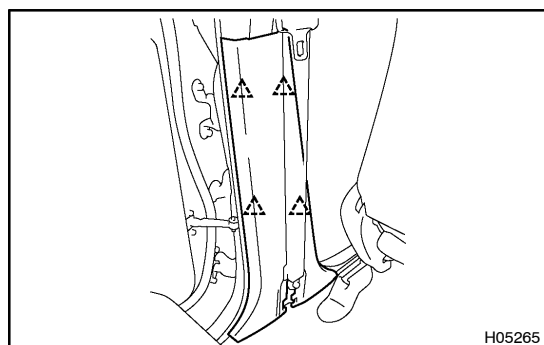

### 4. INSTALL CENTER PILLAR LOWER GARNISH

- (a) Install the center pillar lower garnish.

- (b) Install the center pillar garnish cover.

### 5. INSTALL REAR DOOR OPENING TRIM

### 6. INSTALL REAR DOOR SCUFF PLATE

### 7. INSTALL FRONT DOOR OPENING TRIM

### 8. INSTALL FRONT DOOR SCUFF PLATE