


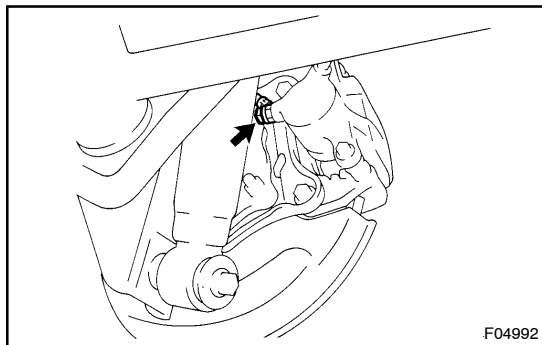

REMOVAL

1. DISCONNECT FLEXIBLE HOSE

Remove the union bolt and gasket from the caliper, then disconnect the flexible hose from the caliper. Use a container to catch brake fluid as it drains out.

Torque: 30 N·m (310 kgf·cm, 22 ft·lbf)

HINT:

At the time of installation, please refer to the following item.
Install the flexible hose lock securely in the lock hole in the caliper.

2. REMOVE CALIPER

- (a) Hold the sliding pin and loosen the 2 installation bolts.

Torque: 26 N·m (270 kgf·cm, 20 ft·lbf)

- (b) Remove the 2 installation bolts.
(c) Remove the caliper from the torque plate.

3. REMOVE 2 BRAKE PADS WITH ANTI-SQUEAL SHIMS

4. REMOVE 4 PAD SUPPORT PLATES