

CIRCUIT DESCRIPTION

WIRING DIAGRAM



OK

2	Is DTC output?
----------	-----------------------

Check DTC on page [DI-229](#).

NO	Normal.
-----------	----------------

YES

3	Check that REAR DIFF. LOCK indicator light does not go off.
----------	--

NO	Go to step 6.
-----------	----------------------

YES

4	Check that bulb for REAR DIFF. LOCK indicator light is not burnt out.
----------	--

YES	Replace indicator light.
------------	---------------------------------

NO

5	Check for open circuit in harness and connector between battery and REAR DIFF. LOCK indicator light, REAR DIFF. LOCK indicator light and ABS ECU (See page IN-34).
----------	---

NG	Repair or replace harness or connector.
-----------	--

OK

6	Check for short circuit in harness and connector between REAR DIFF. LOCK indicator light and ABS ECU (See page IN-34).
---	---

NG

Repair or replace harness or connector.

OK

Check and replace ABS ECU.