

DTC	Always ON	Malfunction in ECU
------------	------------------	---------------------------


CIRCUIT DESCRIPTION

DTC No.	DTC Detecting Condition	Trouble Area
Always ON	Either of the following 1. through 3. is detected: 1. The ECU connectors are OFF from the ECU. 2. There is a malfunction in the ECU internal circuit. 3. The voltage of terminal IG1 is more than 18.5 V.	• Battery • Charging system • Power source circuit • ABS ECU

HINT:

There is a case that TOYOTA hand-held tester cannot be used when ECU is abnormal.

WIRING DIAGRAM

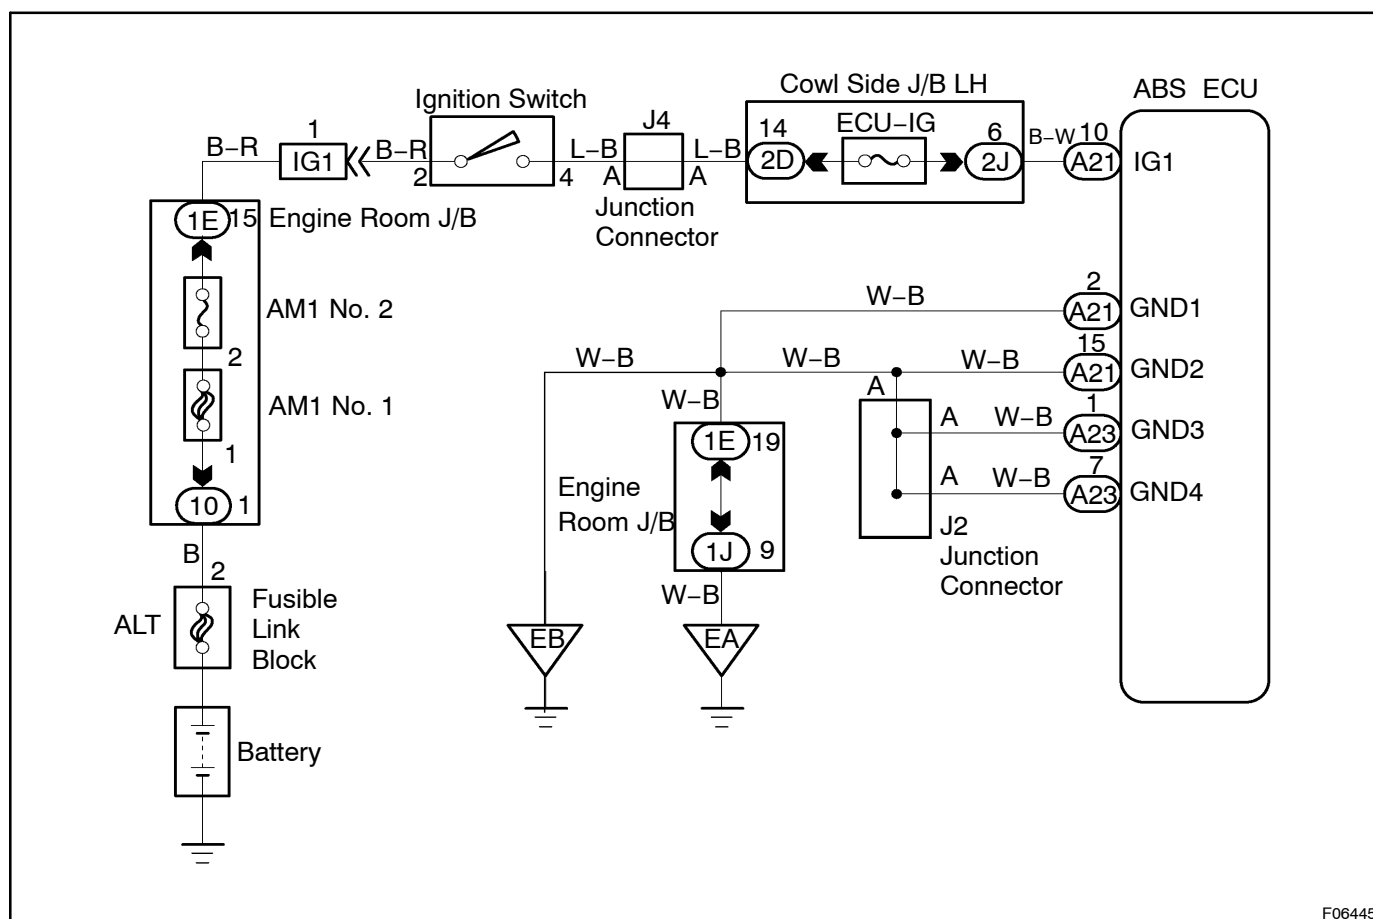

INSPECTION PROCEDURE

1	Check that the ECU connectors are securely connected to the ECU.
----------	---

NO

Connect the connector to the ECU.

YES

2	Is DTC output?
----------	-----------------------

Check DTC on page [DI-229](#).

YES

Repair circuit indicated by the output code .

NO

3	Is normal code displayed?
----------	----------------------------------

YES

Check ABS solenoid relay. Check for short circuit in harness and connector between ABS solenoid relay, DLC1 and DLC3 (See page [IN-34](#)).

NO

4	Does ABS warning light go off?
----------	---------------------------------------

YES

Check for open or short circuit in harness and connector between ECU-IG fuse and ABS ECU (See page [IN-34](#)).

NO

5	Check battery positive voltage.
---	--

CHECK:

Check the battery positive voltage.

OK:

Voltage: 10 – 16 V

NG

Check and repair the charging system.

OK

6	Check operation of the ABS warning light.
---	--

In case of using TOYOTA hand-held tester:

PREPARATION:

- (a) Connect the TOYOTA hand-held tester to the DLC3.
- (b) Turn the ignition switch ON and push the TOYOTA hand-held tester main switch ON.
- (c) Select the ACTIVE TEST mode on the TOYOTA hand-held tester.

CHECK:

Check that "ON" and "OFF" of the ABS warning light can be shown on the combination meter by the TOYOTA hand-held tester.

In case of not using TOYOTA hand-held tester:

PREPARATION:

- (a) Turn the ignition switch OFF.
- (b) Disconnect the connector from the ABS ECU.
- (c) Turn the ignition switch ON.

CHECK:

Check the ABS warning light condition when pushing in and pulling out the short pin from the DLC1.

OK:

When the short pin is pulled out: ABS warning light goes off

When the short pin is pushed in: ABS warning light goes on

OK

Check and replace ABS ECU.

NG

**Check for short circuit in harness and connector between combination meter and ABS ECU, combination meter and DLC1 (See page [IN-34](#)).
Check ABS solenoid relay circuit (See page [DI-250](#)).**