


Door courtesy switch circuit

CIRCUIT DESCRIPTION

The door courtesy switch goes on when the door is opened and goes off when door is closed.

WIRING DIAGRAM

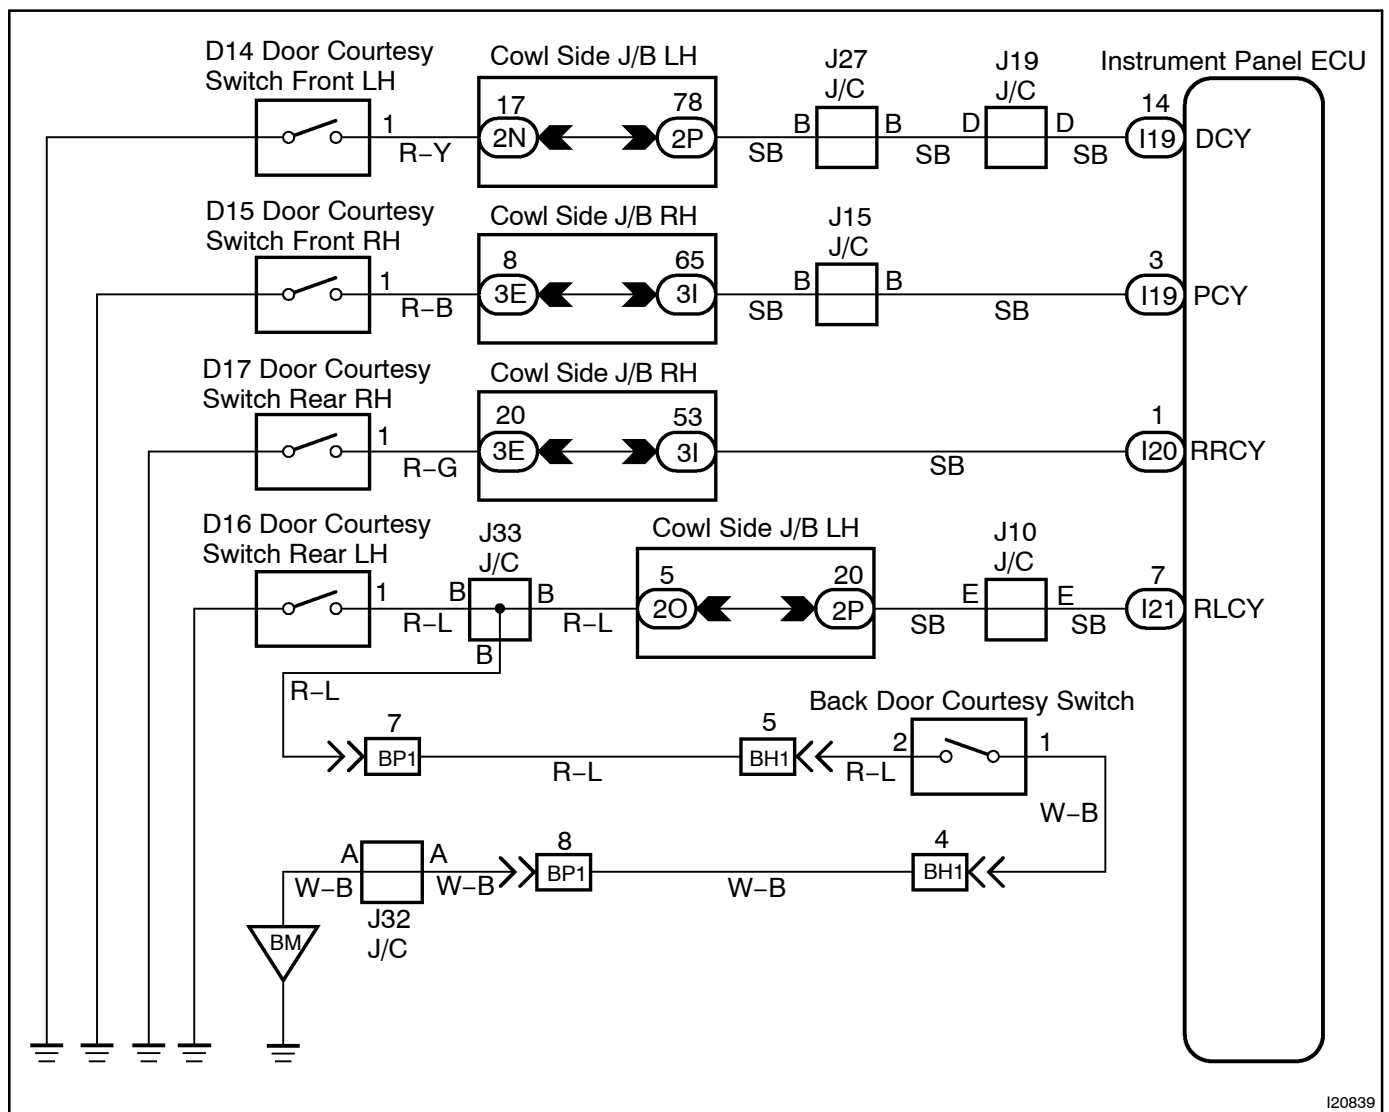

I20839

```
graph TD; Step1[1 Check courtesy switch (See page BE-40).] -- OK --> Next1[Proceed to next circuit inspection shown on problem symptoms table (See page DI-740).]; Step1 -- NG --> Action1[Replace the courtesy switch.]; Action1 --> Step2[2 Check wireharness and connector between courtesy light and body ECU, courtesy switch and body ECU.]; Step2 -- OK --> Next2[Proceed to next circuit inspection shown on problem symptoms table (See page DI-740).]; Step2 -- NG --> Action2[Repair or replace wireharness or connector.]; Action2 --> Step2;
```

1 Check courtesy switch (See page [BE-40](#)).

OK

NG Replace the courtesy switch.

2 Check wireharness and connector between courtesy light and body ECU, courtesy switch and body ECU.

OK

NG Repair or replace wireharness or connector.

Proceed to next circuit inspection shown on problem symptoms table (See page [DI-740](#)).