


Light control switch circuit

WIRING DIAGRAM

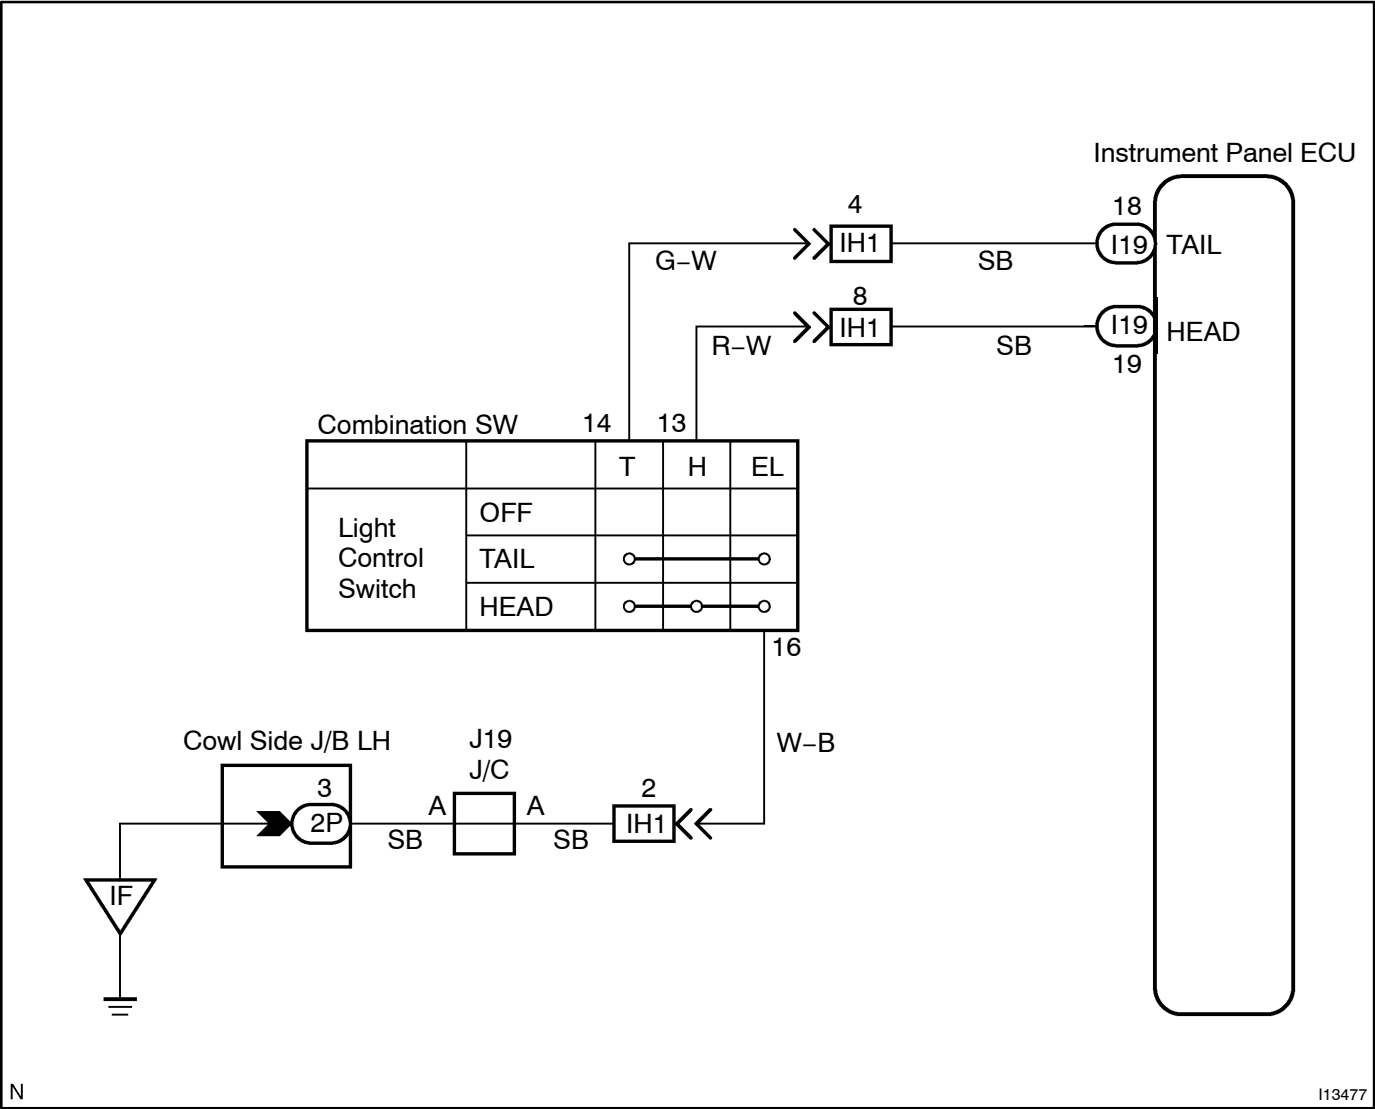

INSPECTION PROCEDURE

1	Check headlight control switch (See page BE-23).
----------	---

NG	Replace the headlight control switch.
-----------	--

OK

2	Check wireharness and connector between headlight control switch and Body ECU.
----------	---

NG	Repair or replace wireharness or connector.
-----------	--

OK

Proceed to next circuit inspection shown on problem symptoms table (See page [DI-740](#)).