


Power main relay circuit

CIRCUIT DESCRIPTION

Power main relay will be "ON" by operating the power window switch.

WIRING DIAGRAM

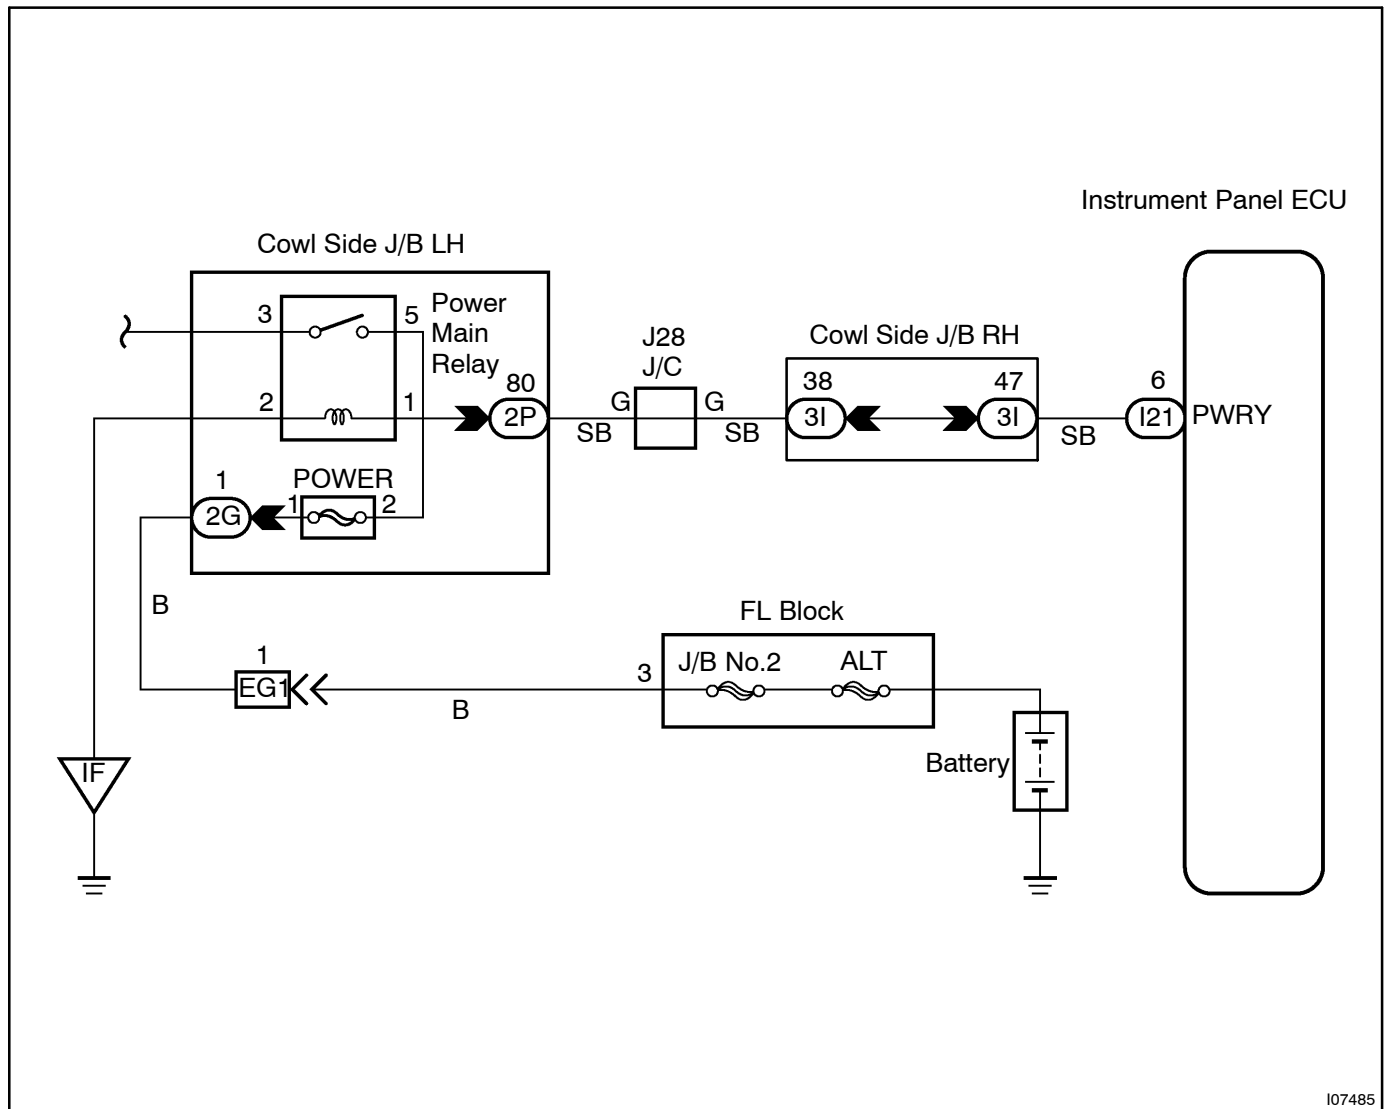

I07485

INSPECTION PROCEDURE

1	Check power main relay (See page BE-23).
---	---

NG	Replace the power main relay.
----	-------------------------------

OK

2	Check wireharness and connector between power main relay and Body ECU, battery and power main relay.
---	--

NG	Repair or replace wireharness or connector.
----	---

OK

Proceed to next circuit inspection shown on problem symptoms table (See page [DI-740](#)).