


Stop light switch circuit

CIRCUIT DESCRIPTION

The Body ECU is detecting the condition of the stop light switch.

WIRING DIAGRAM

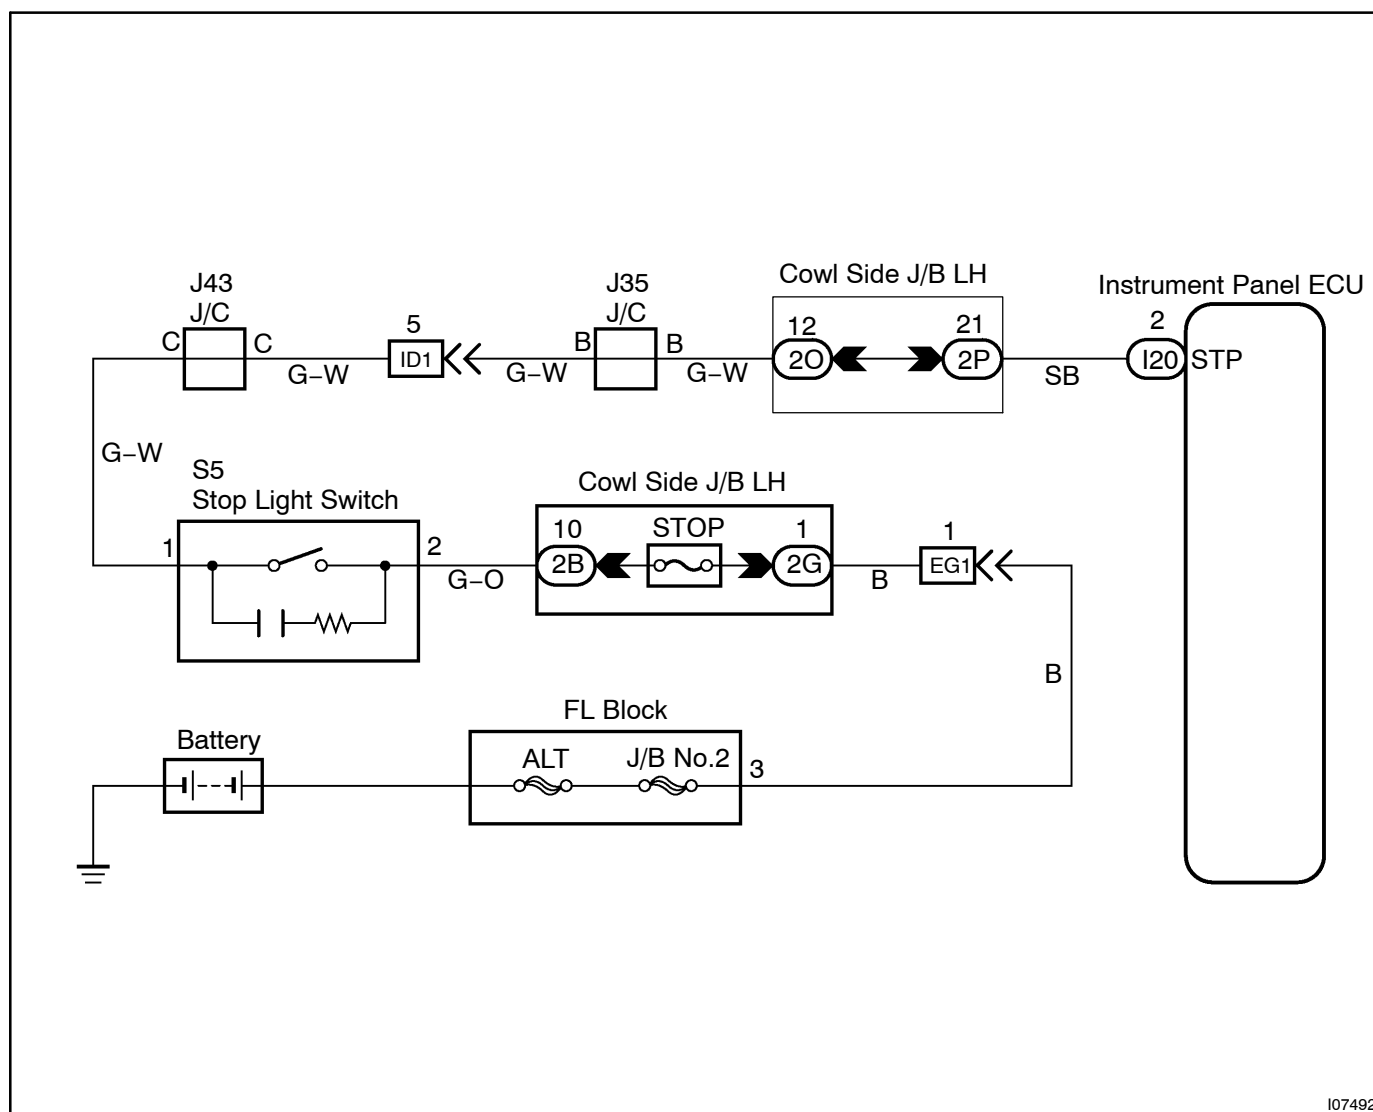

I07492

INSPECTION PROCEDURE

1	Check stop light switch (See page BE-46).
----------	--

NG	Replace the stop light switch.
-----------	---------------------------------------

OK

2	Check wireharness and connector between stop light switch and Body ECU, battery and stop light switch.
----------	---

NG	Repair or replace wireharness or connector.
-----------	--

OK

Proceed to next circuit inspection shown on problem symptoms table (See page [DI-740](#)).