

PROBLEM SYMPTOMS TABLE

Symptom	Suspect Area	See page
Engine does not crank (Does not start)	14. Starter 15. Starter relay	ST-16 ST-18
No initial combustion (Does not start)	1. Engine immobilizer system 2. ECM power source circuit 3. Fuel pump control circuit 4. Fuel pump inertia switch	DI-720 DI-150 DI-127 SF-32
No complete combustion (Does not start)	1. Fuel pump control circuit	DI-127
Under normal condition (Difficult to start)	1. Starter signal circuit 2. Fuel pump control circuit 3. Compression	DI-147 DI-127 EM-3
Cold engine (Difficult to start)	1. Starter signal circuit 2. Fuel pump control circuit	DI-147 DI-127
Hot engine (Difficult to start)	1. Starter signal circuit 2. Fuel pump control circuit	DI-147 DI-127
High engine idle speed (Poor idling)	1. A/C signal circuit (Compressor circuit) 2. ECM power source circuit	DI-908 DI-150
Low engine idle speed (Poor idling)	1. A/C signal circuit (Compressor circuit) 2. Fuel pump control circuit	DI-908 DI-127
Rough idling (Poor idling)	1. Compression 2. Fuel pump control circuit	EM-3 DI-127
Hunting (Poor idling)	1. ECM power source circuit 2. Fuel pump control circuit	DI-150 DI-127
Hesitation/Poor acceleration (Poor driveability)	1. Fuel pump control circuit 2. A/T faulty	DI-127 DI-172
Surging (Poor driveability)	1. Fuel pump control circuit	DI-127
Soon after starting (Engine stall)	1. Engine immobilizer system 2. Fuel pump control circuit	DI-720 DI-127
During A/C operation (Engine stall)	1. A/C signal circuit (Compressor circuit) 2. ECM	DI-908 IN-24