

3. No navigation screen displayed when "MAP", "Menu", or "DEST" switch pressed. (Screen cannot be switched.)

INSPECTION PROCEDURE

1	Service check mode. (Check the navigation ECU)
---	--

NG	Troubleshoot for each diagnosis.
OK	Replace multi-display.

Ncon

2	Check the navigation ECU.
---	---------------------------

PREPARATION:

Disconnect the navigation ECU connector.

CHECK:

Check voltage terminals +B.

OK:

+B: 10 – 14 V

CHECK:

Check voltage terminal ACC when turn ignition switch ACC or ON position.

OK:

ACC: 10 – 14 V

CHECK:

Check continuity terminal GND.

OK:

GND: Continuity

NG	Replace or repair wire harness or connector.
----	--

OK

3 Check the navigation ECU.**CHECK:**

Check terminal R, G and B.

OK:

R, G, B: See "Navigation ECU" of "TERMINAL OF ECU".

NG**Replace the navigation ECU.****OK****4 Check the multi-display.****PREPARATION:**

Disconnect the multi display connector.

CHECK:

Check voltage terminals +B.

OK:

+B: 10 – 14 V

CHECK:

Check voltage terminal ACC when turn ignition switch ACC or ON position.

OK:

ACC: 10 – 14 V

CHECK:

Check continuity terminal GND.

OK:

GND: Continuity

NG**Replace or repair wire harness or connector.****OK****5 Check the multi display.****CHECK:**

Check terminal R, G and B.

OK:

R, G, B: See "multi display" of "TERMINAL OF ECU".

NG**Replace or repair wire harness or connector.****OK**

Replace multi display.