


Speed Sensor Circuit

CIRCUIT DESCRIPTION

If a speed of 3 km/h or more is detected in this circuit, auto-controlled operation will be stopped.


WIRING DIAGRAM

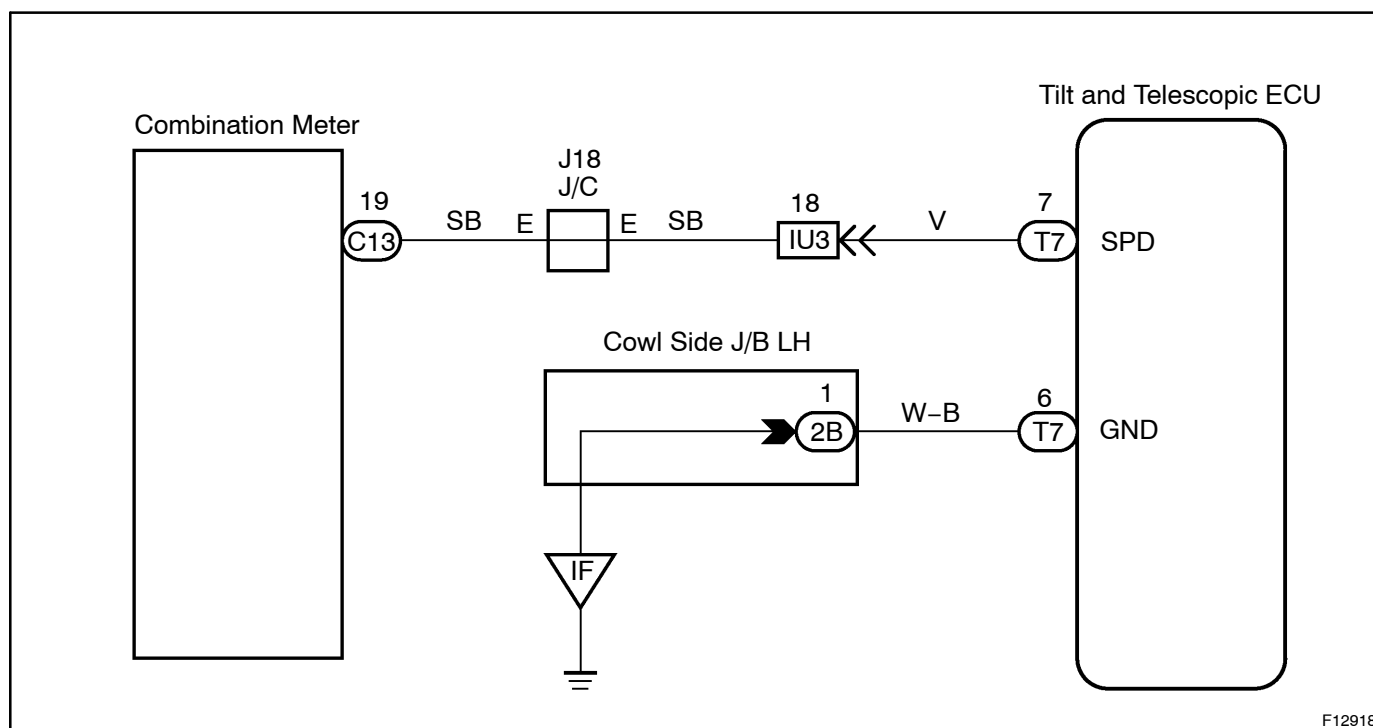

F12918

CIRCUIT INSPECTION

- 1 Check voltage between terminals SPD and GND of ECU connector.

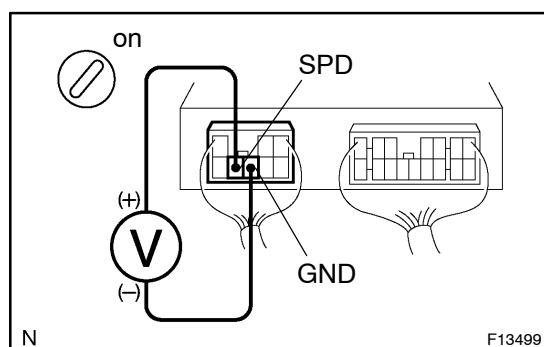

PREPARATION:

Remove the ECU with connectors still connected.

CHECK:

Turn the ignition switch ON and measure the voltage between terminals SPD and GND of ECU connector.

OK:

Voltage: below 1.5 V or 8 – 16 V

OK

Check and replace the tilt and telescopic ECU.

NG

2002 LAND CRUISER (RM893U)

2	Check for open or short circuit in harness between terminals combination meter and SPD of ECU connector (See page IN-34).
---	--

NG

Repair or replace harness or connector.

OK

Check the combination meter (See page [BE-52](#)).