

PROBLEM SYMPTOMS TABLE

Proceed with troubleshooting of each circuit in the table below.

Symptom	Suspect Area	See page
With the ignition switch at ACC or ON, the SRS warning light sometimes lights up after approx. 6 seconds have elapsed.	SRS warning light circuit (Always lights up when ignition switch is in LOCK position.)	DI-607
SRS warning light is always lit up even when ignition switch is in the LOCK position.		
With the ignition switch at ACC or ON, the SRS warning light does not light up.	SRS warning light circuit (Does not light up when ignition switch is turned to ACC or ON.)	DI-609
DTC is not displayed.	Tc terminal circuit	DI-613
SRS warning light is always lit up in a DTC check procedure.		
DTC is displayed without Tc and E1 terminal connection.		