

## INSTALLATION

1. INSTALL SPIRAL CABLE (See page [SR-24](#))
2. INSTALL COLUMN UPPER AND LOWER COVERS (See page [SR-24](#))
3. INSTALL STEERING WHEEL (See page [SR-24](#))
4. INSTALL STEERING WHEEL PAD (See page [SR-24](#))