


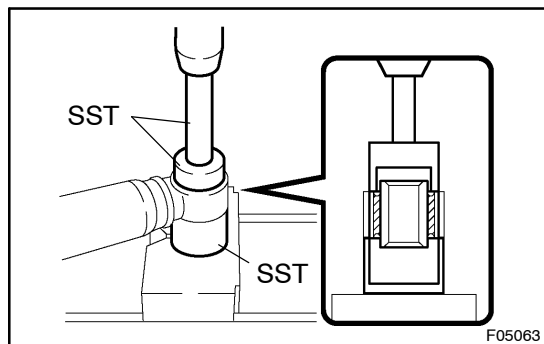


## REPLACEMENT

### 1. REMOVE BUSHING

Using SST and a press, remove the bushing.

SST 09710-14013 (09710-00061),  
09710-28012 (09710-07031),  
09950-70010 (09951-07100)

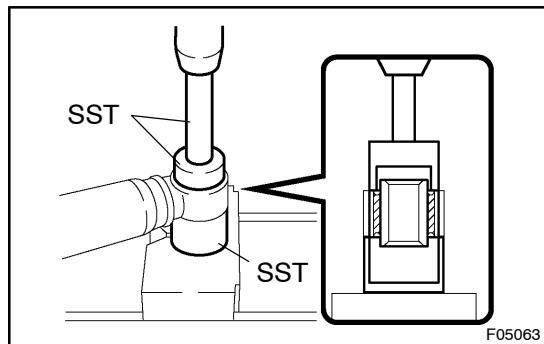

### 2. INSTALL BUSHING

Using SST and a press, install a new bushing.

SST 09710-14013 (09710-00061),  
09710-28012 (09710-07031),  
09950-70010 (09951-07100)