



## REPLACEMENT


1. **REMOVE FRONT WHEELS**  
Torque: 131 N·m (1,340 kgf·cm, 97 ft·lbf)
2. **REMOVE FRONT DRIVE SHAFT**  
(See page [SA-26](#))

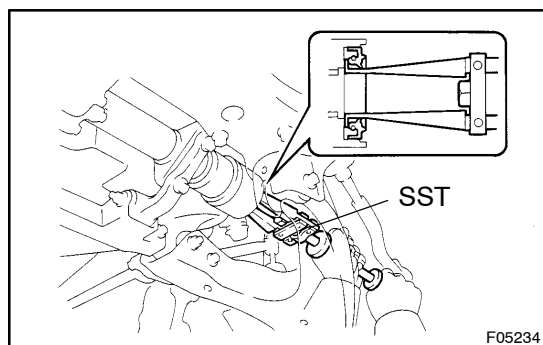

3. **REPLACE OIL SEAL**
  - (a) Using SST, remove the oil seal.  
SST 09308-00010
  - (b) Coat the hypoid gear oil to a new oil seal periphery.

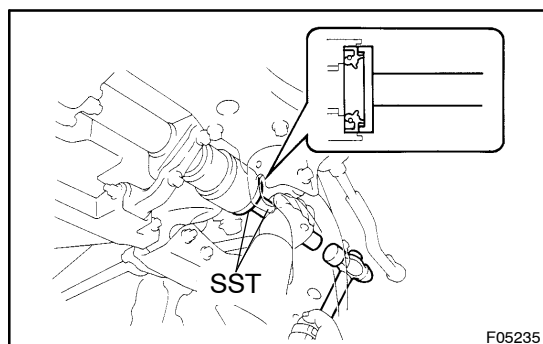

- (c) Using SST and a hammer, install the new oil seal.  
SST 09550-00032, 09950-70010 (09951-07100)
  - (d) Coat the MP grease to the oil seal lip.
4. **INSTALL FRONT DRIVE SHAFT**  
(See page [SA-33](#))

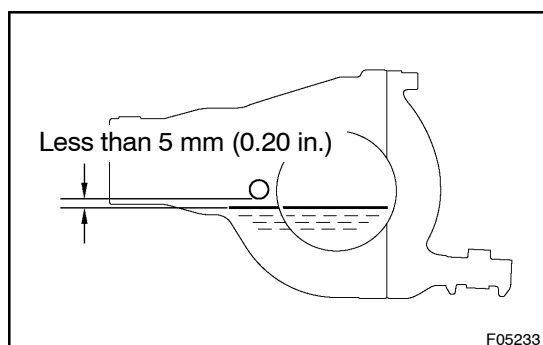

5. **FILL DIFFERENTIAL WITH HYPOID GEAR OIL**  
Torque: 49 N·m (500 kgf·cm, 36 ft·lbf)  
Oil type: Hypoid gear oil API GL-5  
Recommended oil viscosity:  
Above -18°C (0°F) SAE 90  
Below -18°C (0°F) SAE 80W-90 or 80W  
Capacity: 1.70 liters (1.80 US qts, 1.50 Imp.qts)