

TORQUE SPECIFICATION

Part tightened	N·m	kgf·cm	ft·lbf
Crossmember x Frame	50	510	37
Crossmember x Engine rear mounting	74	750	54
Transfer x Transmission	69	700	51
Filler and drain plug	37	380	27
Oil pump plate x Rear extension housing	4.9	50	43 in·lbf
Oil pump cover x Rear extension housing	4.9	50	43 in·lbf
Lever lock pin	12	120	9
Oil strainer x Rear case	4.9	50	43 in·lbf
Oil receiver x Front case	12	120	9
Case cover x Rear case	37	380	27
Rear extension housing x Rear case	37	380	27
Front extension housing x Front case	37	380	27
Transfer indicator switch (Center diff. lock)	37	380	27
Transfer indicator switch (Low switch)	37	380	27
Transfer indicator switch (Neutral switch)	37	380	27
Screw plug x Front case	19	190	14
Screw plug x Rear extension housing	29	300	22
Motor actuator x Front case	18	185	13
Differential front case x Differential rear case	See page TR-31		
Front case x Rear case	37	380	27
Crossmember x Transfer case protector	28	290	21
Speed sensor driven gear	11	115	8
Transfer shift lever rod assembly x Shift outer lever	14	140	10
Transfer control shift lever retainer x Transmission	19	190	14
Transfer x Front propeller shaft	80	820	59
Front propeller shaft x Front differential	80	820	59
Transfer x Rear propeller shaft	106	1,080	78
Rear propeller shaft x Rear differential	106	1,080	78
Rear extension housing x Retainer	39	400	29