



I GROUND POINT

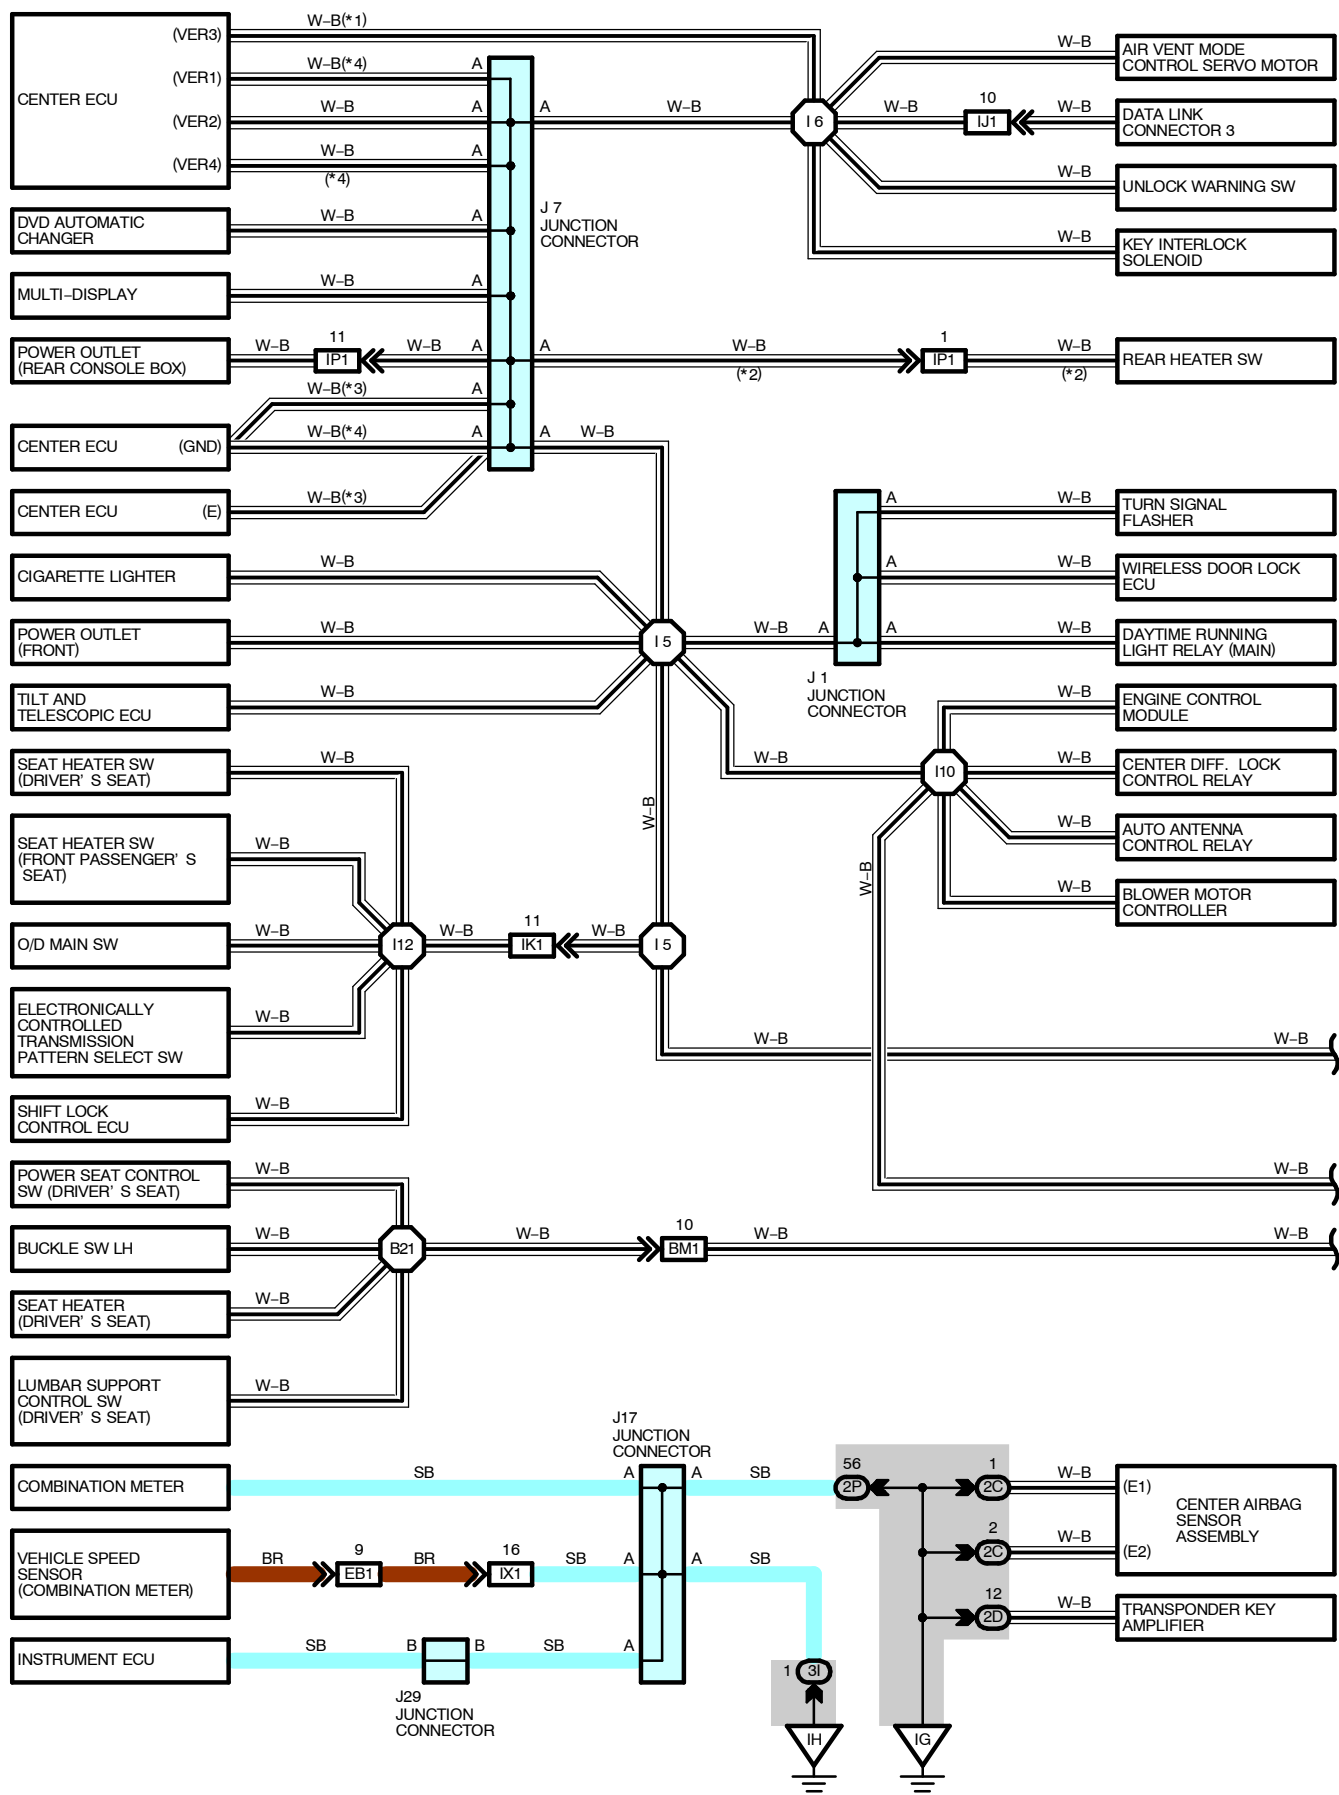

I GROUND POINT

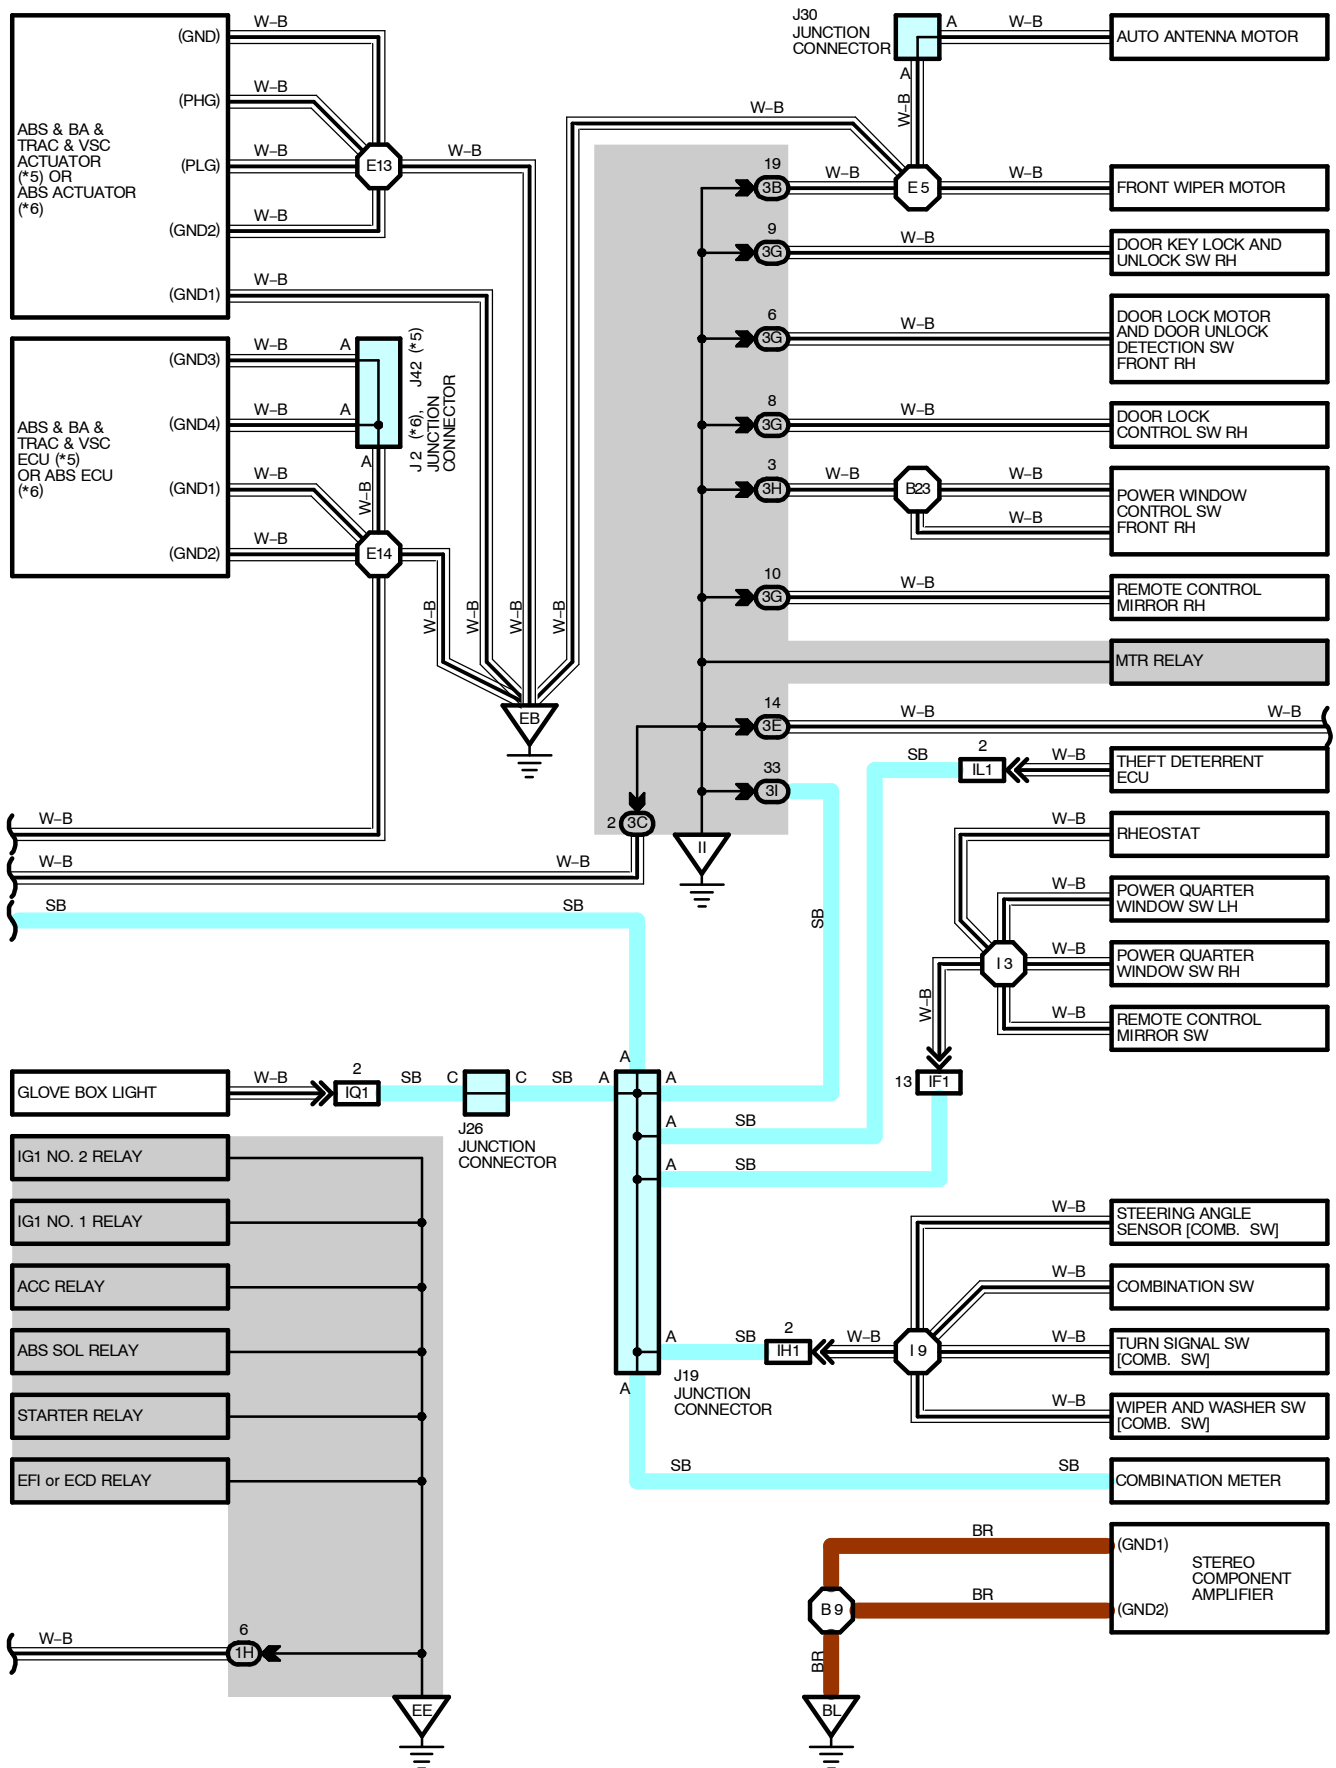

○ : PARTS LOCATION

Code	See Page	Code	See Page	Code	See Page
J1	41	J17	41	J30	41
J2	41	J19	41	J32	42
J7	41	J26	41	J39	42
J16	41	J29	41	J42	41

○ : JUNCTION BLOCK AND WIRE HARNESS CONNECTOR

Code	See Page	Junction Block and Wire Harness (Connector Location)
1C	23	Engine Room No.2 Wire and Engine Room J/B (Engine Compartment Left)
1E		
1G	23	Engine Room Main Wire and Engine Room J/B (Engine Compartment Left)
1H		
1J		
1L		
2A	26	Roof Wire and Cowl Side J/B LH (Left Kick Panel)
2B	26	Dash Wire and Cowl Side J/B LH (Left Kick Panel)
2C		
2D	26	Engine Room No.2 Wire and Cowl Side J/B LH (Left Kick Panel)
2E		
2L	26	Front Door LH Wire and Cowl Side J/B LH (Left Kick Panel)
2M	26	Floor Wire and Cowl Side J/B LH (Left Kick Panel)
2O		
2P	28	Instrument Panel Integration Wire and Cowl Side J/B LH (Left Kick Panel)
3B	32	Engine Room No.2 Wire and Cowl Side J/B RH (Right Kick Panel)
3C	32	Dash Wire and Cowl Side J/B RH (Right Kick Panel)
3E	32	Floor No.2 Wire and Cowl Side J/B RH (Right Kick Panel)
3G	32	Front Door RH Wire and Cowl Side J/B RH (Right Kick Panel)
3H		
3I	32	Instrument Panel Integration Wire and Cowl Side J/B RH (Right Kick Panel)

I GROUND POINT

: CONNECTOR JOINING WIRE HARNESS AND WIRE HARNESS

Code	See Page	Joining Wire Harness and Wire Harness (Connector Location)
EB1	46	Engine Wire and Transmission Wire (On the Transmission)
EB3		
IF1	48	Instrument Panel Integration Wire and Instrument Panel Wire (Left Side of Instrument Panel)
IH1	50	Instrument Panel Integration Wire and Column Wire (Near the Ignition SW)
IH2		
IJ1	50	Dash Wire and Detector Wire (Instrument Panel Center)
IK1	50	Console Box Wire and Dash Wire (Left Side of Front Console)
IL1	50	Instrument Panel Integration Wire and Computer Wire (Instrument Panel Center)
IN1	52	Engine Wire and Dash Wire (Behind the Glove Box)
IP1	52	Rear Console Box Wire and Dash Wire (Right Side of Rear Console)
IQ1	52	Instrument Panel Integration Wire and Lamp Wire (Behind the Glove Box)
IW1	54	Engine Room No.2 Wire and Dash Wire (Behind the Glove Box)
IX1	54	Instrument Panel Integration Wire and Engine Wire (Behind the Glove Box)
BA1	56	Rear Door LH Wire and Floor Wire (Left Side of Center Pillar)
BA2		
BC1	56	Rear Door RH Wire and Floor No.2 Wire (Right Side of Center Pillar)
BC2		
BD2	56	Floor No.3 Wire and Floor Wire (Left Rear Side Quarter Panel)
BF1	56	Frame Wire and Floor No.3 Wire (Left Side of Rear Floor Crossmember)
BH1	58	Pillar No.1 Wire and Back Door Upper Wire (Left Side of Back Door)
BJ1	58	Floor No.2 Wire and A/C Sub Wire (Right Side Rear Quarter Panel)
BL3	58	Floor No.2 Wire and Floor No.3 Wire (Right Side of Rear Floor Crossmember)
BM1	60	Floor Wire and Front Seat LH Wire (Front Side Under the Driver's Seat)
BO1	60	Floor No.2 Wire and Front Seat RH Wire (Front Side Under the Front Passenger's Seat)
BP1	58	Pillar No.1 Wire and Floor Wire (Left Rear Side Quarter Panel)
BQ1	58	Back Door Lower Wire and Floor Wire (Left Rear Side Quarter Panel)

: GROUND POINTS

Code	See Page	Ground Points Location
EA	46	Front Right Side of Fender Apron
EB		
EC	46	Rear Bank of Right Cylinder Head
ED	46	Rear Bank of Left Cylinder Head
EE	46	Front Left Side of Fender Apron
IF	48	Set Bolt of Cowl Side J/B LH
IG		
IH	48	Set Bolt of Cowl Side J/B RH
II		
BJ	56	Under the Driver's Seat
BK	56	Front Side Under the Front Passenger's Seat
BL	56	Rear Side Under the Front Passenger's Seat
BM	56	Left Rear Side Quarter Panel

**: SPLICE POINTS**

Code	See Page	Wire Harness with Splice Points	Code	See Page	Wire Harness with Splice Points
E2	46	Engine Room Main Wire	B1	58	Front Door LH Wire
E5	46	Engine Room No.2 Wire	B4	58	Floor Wire
E7	46	Engine Wire	B7	58	Roof Wire
E8	46	Transmission Wire	B9	58	Floor No.2 Wire
E9			B10		
E10	46	Engine Wire	B11	58	Floor Wire
E13	46	Engine Room No.2 Wire	B12	58	Frame Wire
E14			B14	58	Floor No.2 Wire
I3	50	Instrument Panel Wire	B15	58	Back Door Upper Wire
I5	50	Dash Wire	B16	58	Floor No.3 Wire
I6			B17	58	Back Door Lower Wire
I9	50	Column Wire	B21	60	Front Seat LH Wire
I10	50	Dash Wire	B22	60	Front Seat RH Wire
I12	50	Console Box Wire	B23	58	Front Door RH Wire