



J POWER SOURCE (Current Flow Chart)

The chart below shows the route by which current flows from the battery to each electrical source (Fusible Link, Circuit Breaker, Fuse, etc.) and other parts.

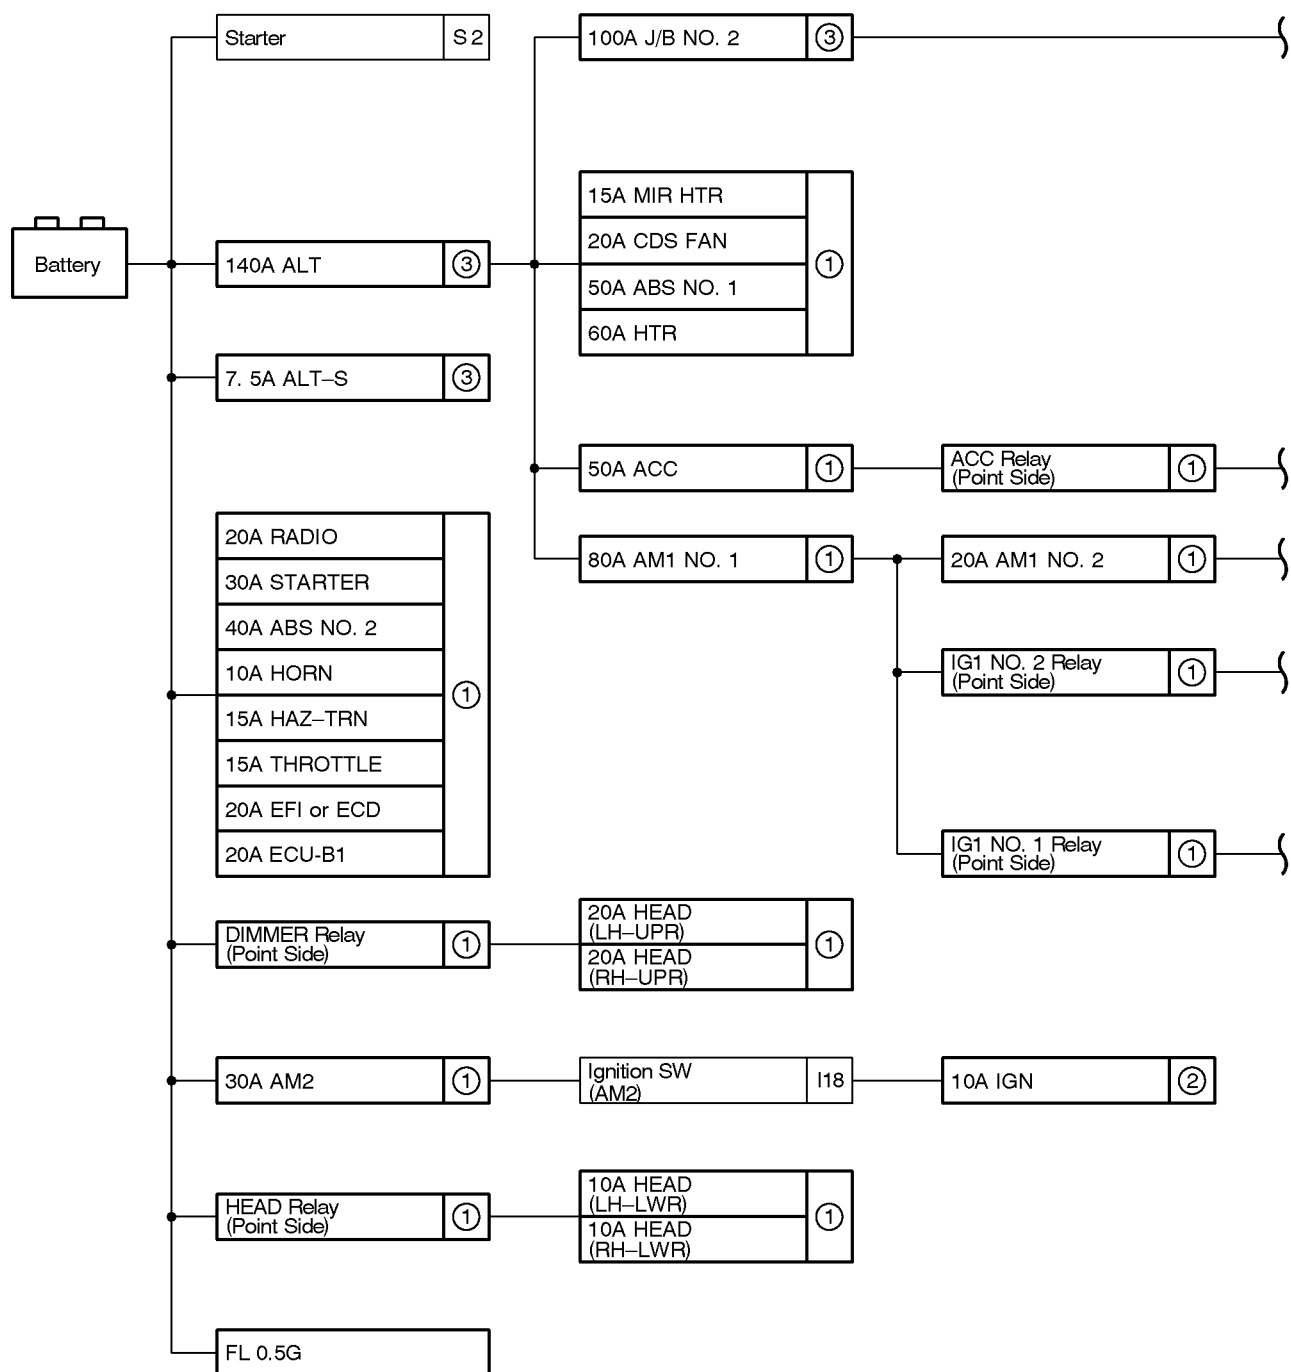

[LOCATION] ① : Engine Room J/B (See Page 22)

② : Cowl Side J/B LH (See Page 26)

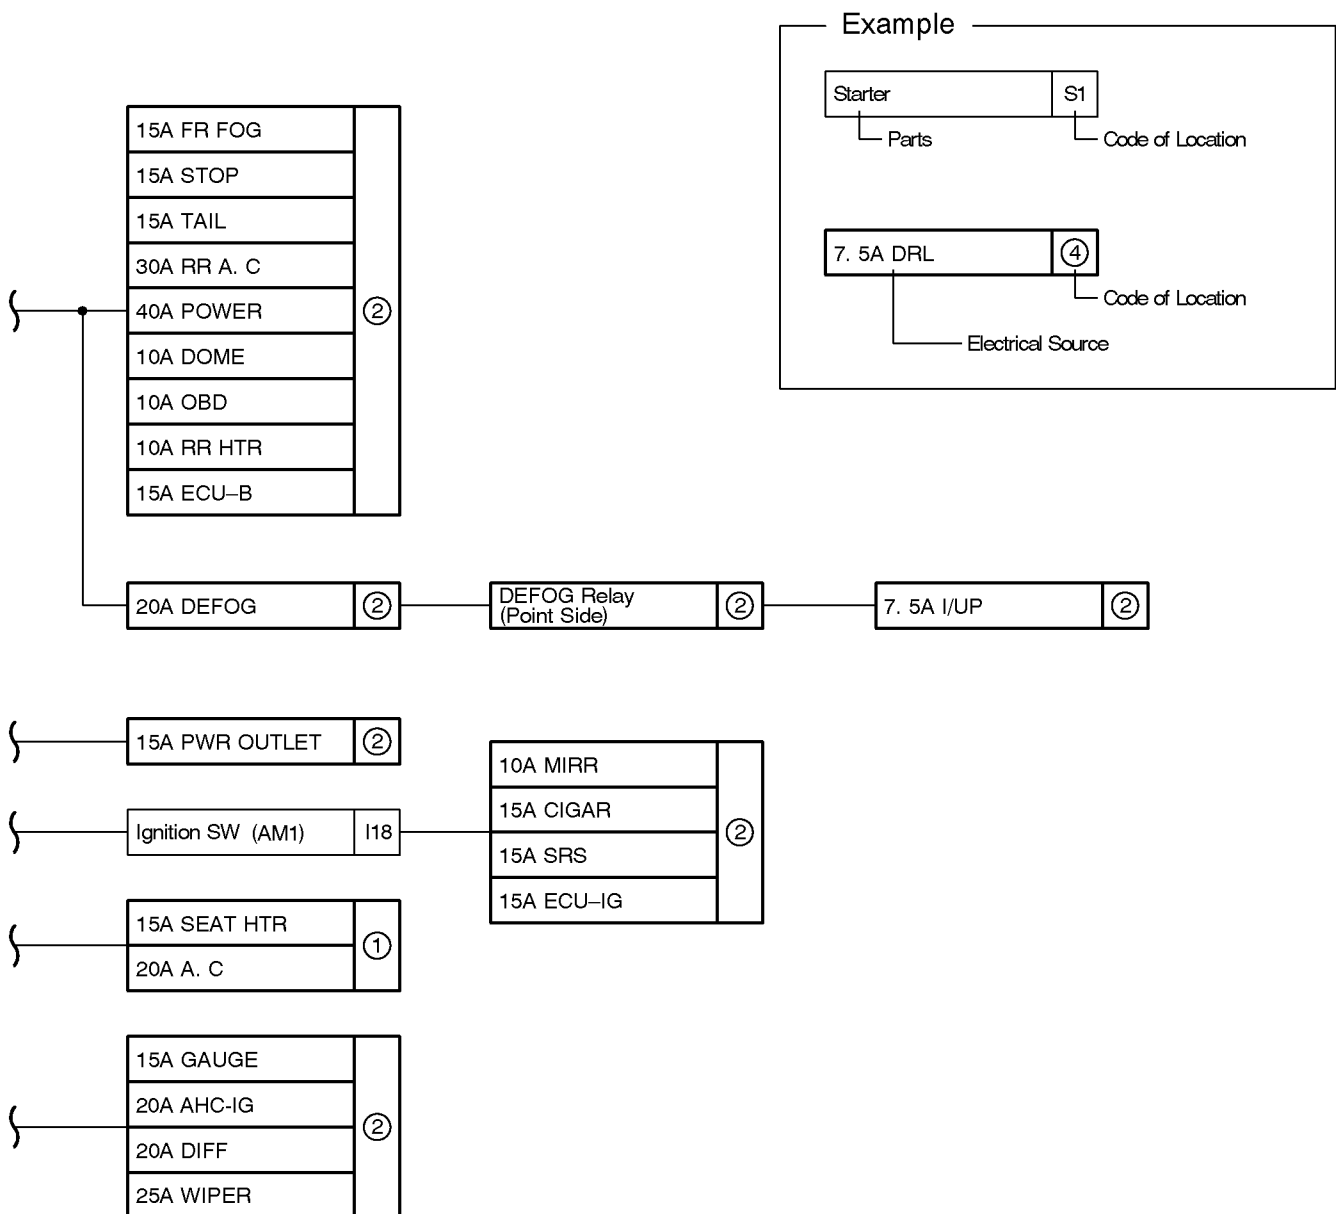

③ : Fusible Link Block (F 6 on See Page 36)

J POWER SOURCE (Current Flow Chart)

Engine Room J/B (See Page 22)

Fuse		System	Page
10A	HEAD (LH-LWR)	Front Fog Light	92
		Headlight	86
10A	HEAD (RH-LWR)	Headlight	86
10A	HORN	Horn	142
		Theft Deterrent	212
15A	HAZ-TRN	Theft Deterrent	212
		Turn Signal and Hazard Warning Light	94
15A	MIR HTR	Rear Window Defogger and Mirror Heater	232
15A	SEAT HTR	Seat Heater	230
15A	THROTTLE	Cruise Control	152
		Electronically Controlled Transmission and A/T Indicator	144
		Engine Control and Engine Immobiliser System	76
20A	A.C	Condenser Fan and Front Air Conditioning	260
		Key Reminder and Seat Belt Warning	234
		Rear Air Conditioning	266
		Rear Heater (w/o Rear Air Conditioning)	272
20A	AM1 NO.2	Turn Signal and Hazard Warning Light	94
20A	CDS FAN	Condenser Fan and Front Air Conditioning	260
20A	ECU-B1	Automatic Light Control	120
		Clock	136
		Combination Meter	252
		Condenser Fan and Front Air Conditioning	260
		Door Lock Control	196
		Interior Light	106
		Key Reminder and Seat Belt Warning	234
		Light Auto Turn Off	124
		Moon Roof	192
		Navigation System	246
		Power Window	186
		Radio and Player (w/ Navigation System)	238
		Rear Air Conditioning	266
		Theft Deterrent	212
		Wireless Door Lock Control	202
20A	EFI or ECD	Cruise Control	152
		Electronically Controlled Transmission and A/T Indicator	144
		Engine Control and Engine Immobiliser System	76
20A	HEAD (LH-UPR)	Headlight	86

* These are the page numbers of the first page on which the related system is shown.

20A	HEAD (RH-UPR)	Headlight	86
20A	RADIO	Auto Antenna	236
		Navigation System	246
		Radio and Player (w/ Navigation System)	238
		Radio and Player (w/o Navigation System)	242

Fuse		System	Page
30A	AM2	Electronically Controlled Transmission and A/T Indicator	144
		Engine Control and Engine Immobiliser System	76
		Ignition	70
		Starting	68
30A	STARTER	Starting	68
40A	ABS NO.2	ABS	166
		VSC	158
50A	ABS NO.1	ABS	166
		VSC	158
60A	HTR	Condenser Fan and Front Air Conditioning	260
80A	AM1 NO.1	Rear Window Defogger and Mirror Heater	232
		Turn Signal and Hazard Warning Light	94

Cowl Side J/B LH (See Page 26)

Fuse		System	Page
7.5A	I/UP	Rear Window Defogger and Mirror Heater	232
10A	DOME	Interior Light	106
10A	IGN	ABS	166
		Charging	74
		Combination Meter	252
		Cruise Control	152
		Electronically Controlled Transmission and A/T Indicator	144
		Engine Control and Engine Immobiliser System	76
		SRS	171
		VSC	158
10A	MIRR	Remote Control Mirror	226
10A	OBD	Cruise Control	152
		Engine Control and Engine Immobiliser System	76
10A	RR HTR	Rear Air Conditioning	266
		Rear Heater (w/o Rear Air Conditioning)	272

* These are the page numbers of the first page on which the related system is shown.

15A	CIGAR	Auto Antenna	236
		Cigarette Lighter	138
		Clock	136
		Condenser Fan and Front Air Conditioning	260
		Navigation System	246
		Radio and Player (w/ Navigation System)	238
		Radio and Player (w/o Navigation System)	242
		Rear Air Conditioning	266
		Shift Lock	176
15A	ECU-B	Combination Meter	252
		Condenser Fan and Front Air Conditioning	260
		Headlight	86
		Navigation System	246
		Power Tilt and Power Telescopic	222

J POWER SOURCE (Current Flow Chart)

Fuse		System	Page
15A	ECU-B	Rear Air Conditioning	266
		SRS	171
		Theft Deterrent	212
15A	ECU-IG	ABS	166
		Auto Antenna	236
		Automatic Light Control	120
		Door Lock Control	196
		Interior Light	106
		Light Auto Turn Off	124
		Moon Roof	192
		Navigation System	246
		Power Tilt and Power Telescopic	222
		Power Window	186
		Shift Lock	176
		Theft Deterrent	212
		VSC	158
		Wireless Door Lock Control	202
15A	FR FOG	Front Fog Light	92
15A	GAUGE	ABS	166
		Back-Up Light	118
		Center Differential Lock	178
		Charging	74
		Combination Meter	252
		Cruise Control	152
		Electronically Controlled Transmission and A/T Indicator	144
		Engine Control and Engine Immobiliser System	76
		Headlight	86
		Key Reminder and Seat Belt Warning	234
		Navigation System	246
		Power Rear Quarter Window	228
		Rear Differential Lock	182
		Rear Window Defogger and Mirror Heater	232
		VSC	158
		Wireless Door Lock Control	202
15A	PWR OUTLET	Power Outlet	140
15A	SRS	SRS	171
15A	STOP	ABS	166
		Cruise Control	152
		Electronically Controlled Transmission and A/T Indicator	144
		Engine Control and Engine Immobiliser System	76
		Shift Lock	176
		Stop Light	114
		Trailer Towing	116
		VSC	158

* These are the page numbers of the first page on which the related system is shown.

Fuse		System	Page
15A	TAIL	Automatic Light Control	120
		Illumination	102
		Light Auto Turn Off	124
		Taillight	98
		Theft Deterrent	212
		Trailer Towing	116
		Wireless Door Lock Control	202
20A	AHC-IG	VSC	158
20A	DEFOG	Rear Window Defogger and Mirror Heater	232
20A	DIFF	Center Differential Lock	178
		Rear Differential Lock	182
25A	WIPER	Front Wiper and Washer	128
		Rear Wiper and Washer	132
30A	RR A.C	Rear Air Conditioning	266
40A	POWER	Door Lock Control	196
		Moon Roof	192
		Power Seat	218
		Power Tilt and Power Telescopic	222
		Power Window	186
		Wireless Door Lock Control	202

Fusible Link Block (F6 on See Page 36)

Fuse		System	Page
7.5A	ALT-S	Charging	74
100A	J/B NO.2	Automatic Light Control	120
		Light Auto Turn Off	124
140A	ALT	Automatic Light Control	120
		Charging	74
		Light Auto Turn Off	124
		Stop Light	114
		Taillight	98
		Trailer Towing	116
		Turn Signal and Hazard Warning Light	94

* These are the page numbers of the first page on which the related system is shown.